



Removing the Samsung LA40R81BD 40in LCD TV Stand

If you are going to wall mount your LCD TV you first need to remove the stand

Written By: Richdave



 **TOOLS:**

- **Phillips #2 Screwdriver** (1)
- **Tweezers** (1)

Step 1 — Stand



- Place the TV face down on a clean flat surface with the stand hanging over one edge
- Remove the 4 screws securing the stand to the TV
- *i* Use a pair of tweezers to remove screws from their recessed holes to free up the stand (A small pickup magnet works well also, if available)
- Holding the TV so it does not slide off the work surface, pull the stand straight out of the TV

To reassemble your device, follow these instructions in reverse order.