



Repairing Acer Iconia B1-A71 Touch Screen Digitizer

Repairing Acer Iconia B1 (Tablet) - Touchscreen problem

Written By: ZFix



INTRODUCTION

Very often problem with this model. In 60% it can be resolved only with reconnecting the Touchscreen flex / ribbon cable.

If this solution not helped you then you must to change your Touchscreen.

[Acer Iconia B1-A71 Touchscreen Replacement](#)


[Please SUBSCRIBE to my channel ツ](#)

[video: http://youtu.be/_WkFaGAdS9g]

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)


Step 1 — Repairing Acer Iconia B1-A71 Touch Screen Digitizer

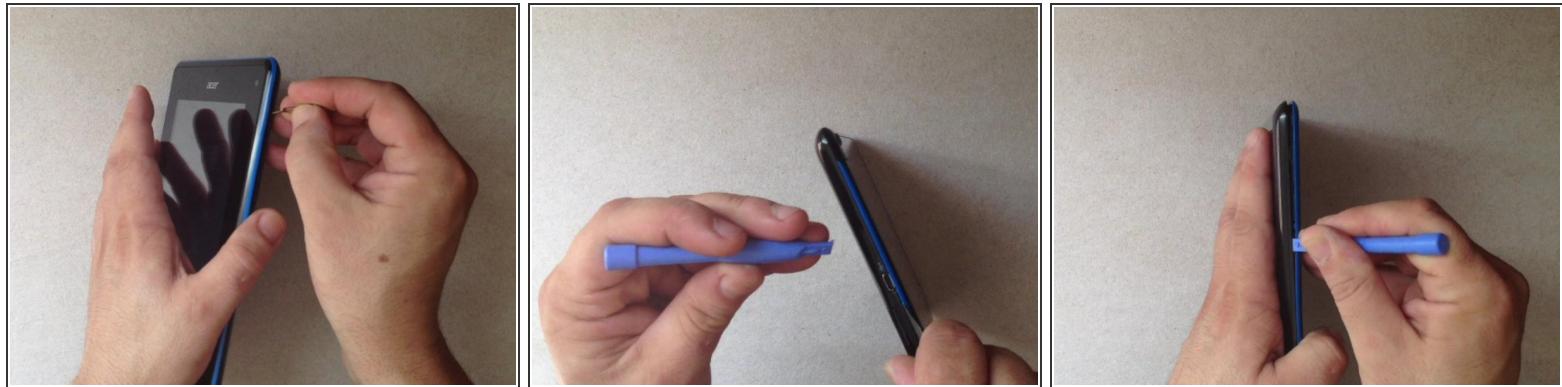

- Because I can't switch-off the tablet, I'm using the reset button to do this.
- Now, remove the back cover.

 If you have a memory card inside, don't forget to remove it!

Step 2

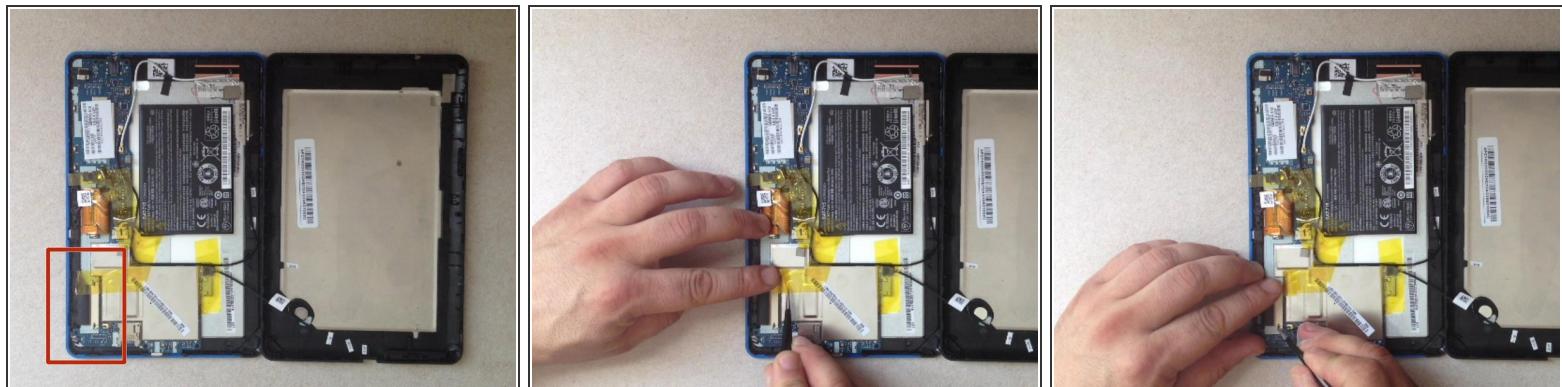

- Open the touchscreen flex cable connector and reconnect the cable.

 **Did you do it successfully?**



 [**Please SUBSCRIBE to my channel**](#) 

To reassemble your device, follow these instructions in reverse order.