



Repairing BRAUN cruZer6 beard and head Hair and Beard Trimmer Type 5417 Disassemble, Change Batteries - 1

Disassemble, change batteries of BRAUN cruZer6 beard and head Hair and Beard Trimmer Type 5417

Written By: Zweikeks



INTRODUCTION


Disassemble, change batteries of BRAUN cruze6 beard and head Hair and Beard Trimmer Type 5417

Step 1 — Repairing BRAUN cruZero beard and head Hair and Beard Trimmer Type 5417 Disassemble, Change Batteries - 1



- -remove the trimming head
- unscrew the x2 screws
- open the cover
- clean

Step 2

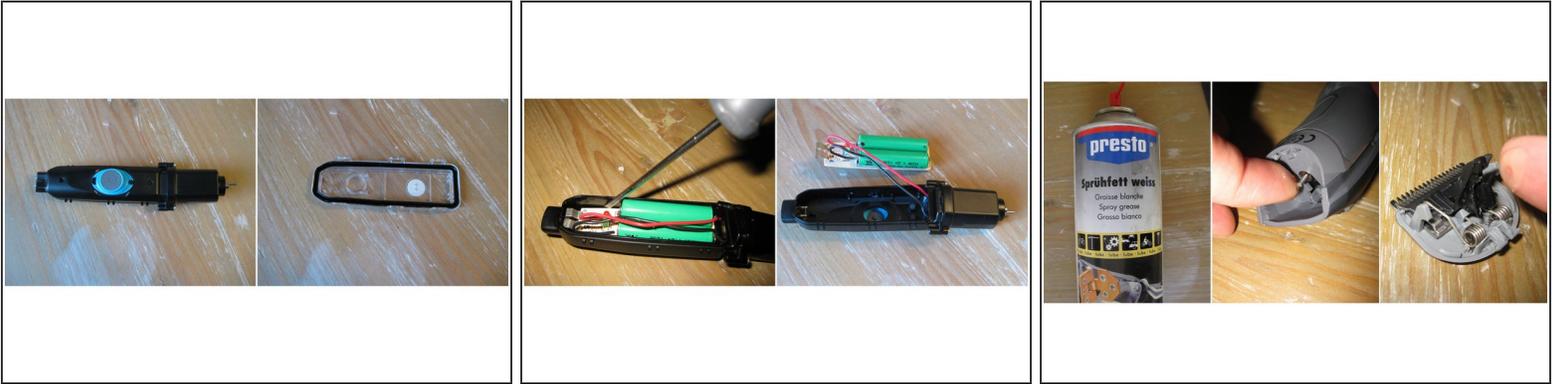

- remove the other cover and clean it from hair
- using a flat screwdriver remove the motherboard
- clean the hair
- use anti-rust spray and clean the motor
- lubricate the trimmer and motor head and close the covers

Step 3



- remove the upper trimming head
- clean it from hair and lubricate
- optionally, not needed for battery replacement.

Repeat the steps in order to reassemble your device.