



# Repairing EPSON B-510DN Error 0xF2 or 0xF3

Repairing EPSON B-510DN Error 0xF2 or 0xF3

Written By: delete



## INTRODUCTION

Stalled printer for error 0xF2 or 0xF3

The error compare when there are some problem with encoder with roller to feed paper.

### TOOLS:

- Essential Electronics Toolkit (1)

## Step 1 — Repairing EPSON B-510DN Error 0xF2 or 0xF3



- Remove the external component
- Remove all component
- Remove Ink tanks

## Step 2



- remove windows

## Step 3




- Remove Rear component

## Step 4



- Dismount Ink lever

## Step 5

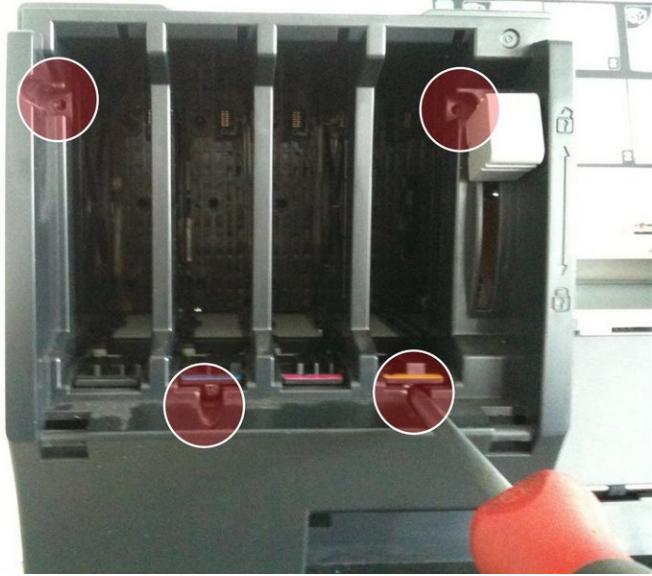

- Remove Front pannel screws

## Step 6



- Dismount LCD Pannel

## Step 7



- Remove front pannel

## Step 8



- Remove back panel screws

## Step 9



- Other back panel screw (you find it back the lcd display)

## Step 10




- Remove back ethernet panel

## Step 11



- Remove main back panel, make attention to lcd display

## Step 12

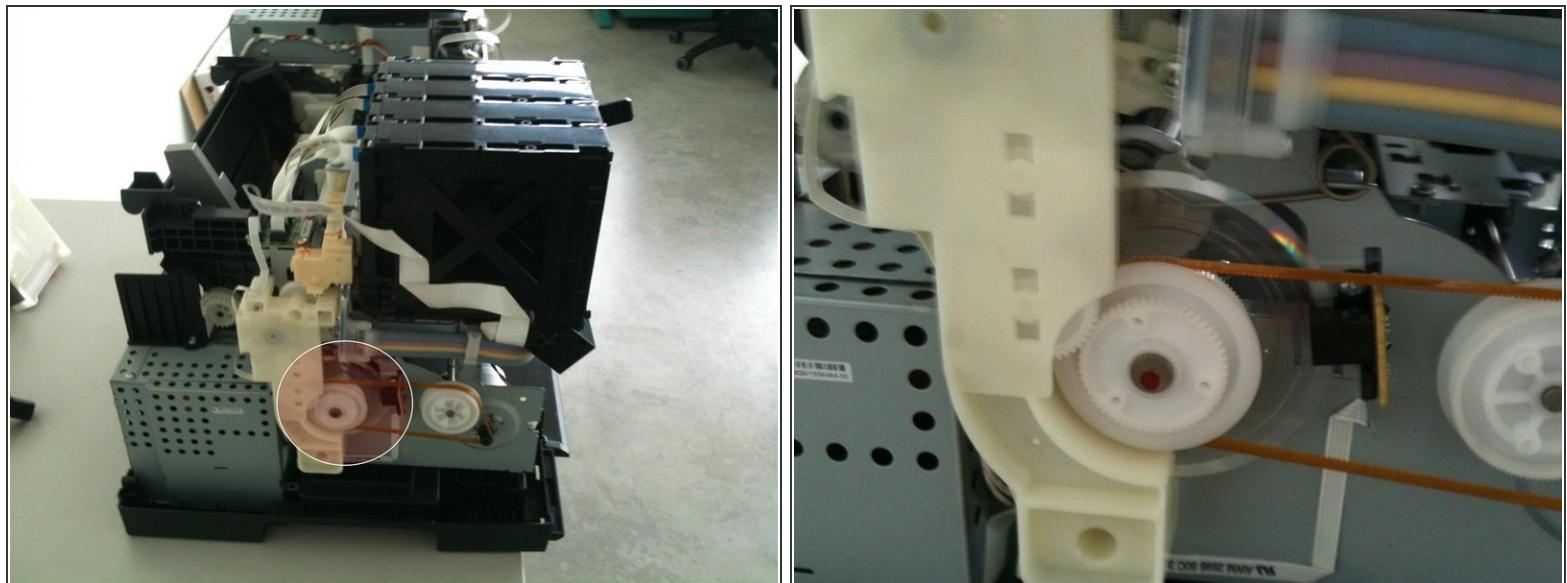

- More gently clean left encoder with a dry cleenex

## Step 13




- More gently, Clean right encoder with a dry cleenex

## Step 14



- If you want test the printer you need insert paper, and cover 2 switch with paper scotch.

## Step 15

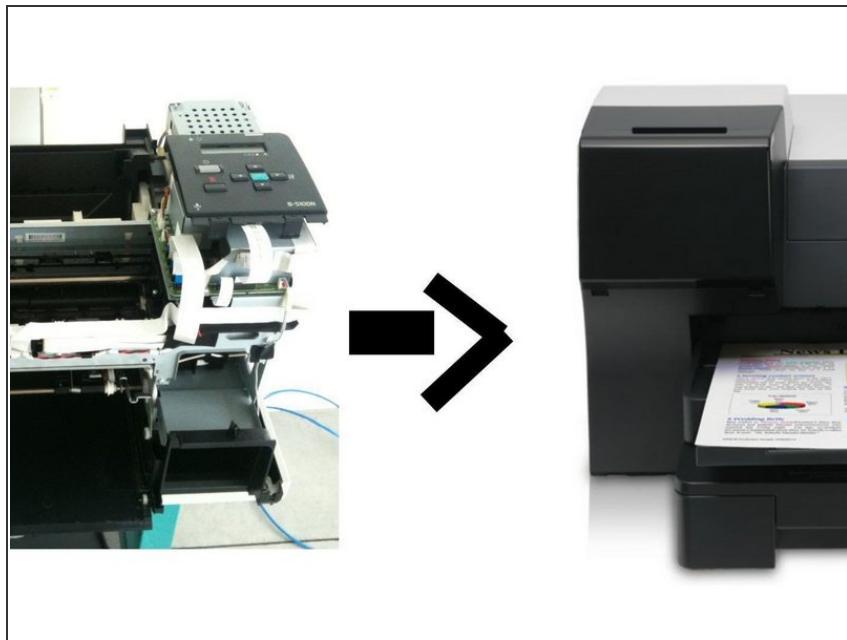

- Remount the printer (but before remove the scotch if you have used it) following in reverse mode the previous instructions.

To reassemble your device, follow these instructions in reverse order.