



Repairing HP Photosmart D110a Paper Jam

This guide will explain how to unjam the paper in your printer.

Written By: Tim Wise



Step 1 — Repairing HP Photosmart D110a Paper Jam



- First, identify the piece of paper that is causing the jam.

Step 2



- Use your hand to remove the jammed piece of paper. Pull until the paper is out.

Step 3



- Do not reuse the piece of paper that caused the jam. Replace the paper with fresh, uncrinkled paper.

To reassemble your device, follow these instructions in reverse order.