



# Repairing RCA RCT6378W2 Speaker

During other repairs of the tablet, the speaker wires may become detached from the speaker. This will show the proper way to reattach the wires.



Written By: Matthew Wills



 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Soldering Iron \(1\)](#)

## Step 1 — Repairing RCA RCT6378W2 Speaker

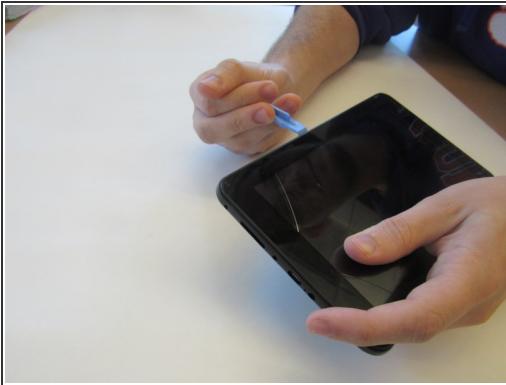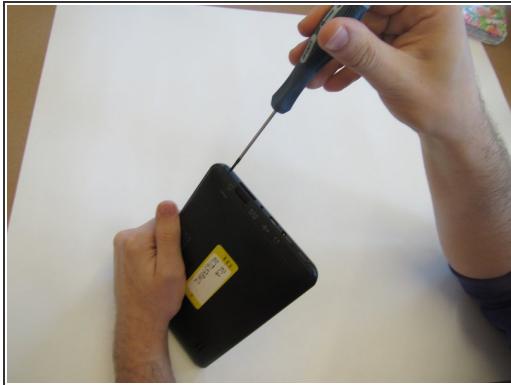


- Remove two 2.4mm x 4mm screws from bottom of the tablet with Phillips #00 Screwdriver.

## Step 2




- Remove back cover with plastic opening tool, exposing the battery and motherboard.

## Step 3

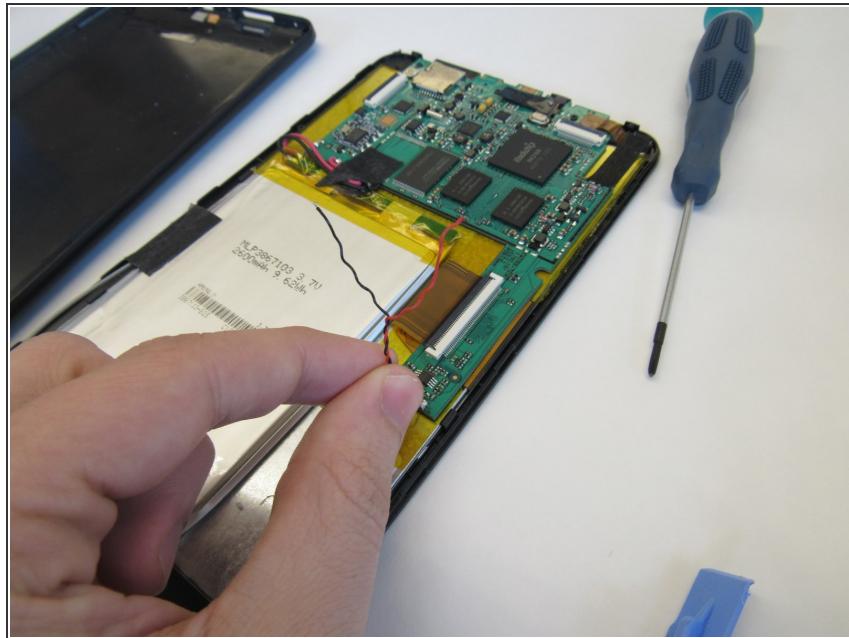

- Uncoil the wires. If necessary, use a wire stripper to expose more of the wire.

## Step 4

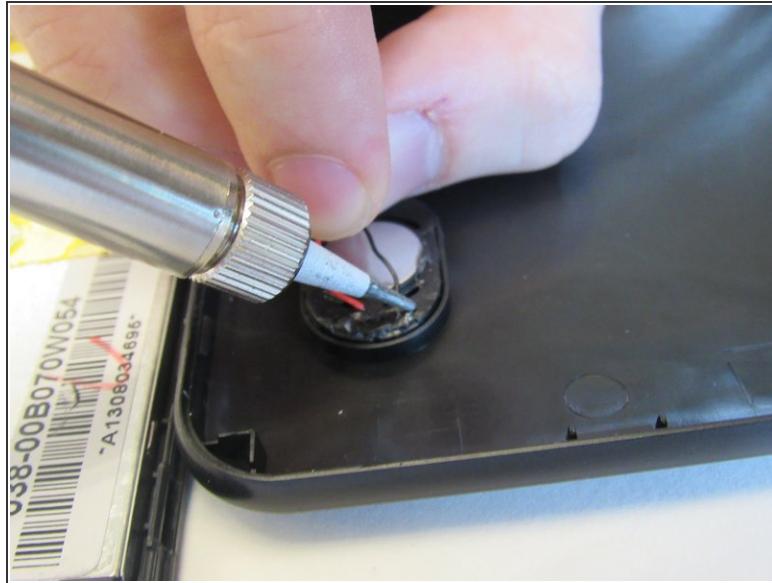

- Solder the wires to the base of the speaker. The metal of the wire should be touching exposed metal on the speaker. Insure that the colors of the wires match the picture.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-26 02:59:33 PM (MST).

