




Repairing Samsung clx-3175 Colour Laser Printer Fix black vertical lines


CLX 317x series sometimes prints black and yellow vertical lines in the middle of the page. Here is the trick on how to fix this.

Written By: Michael Ionita

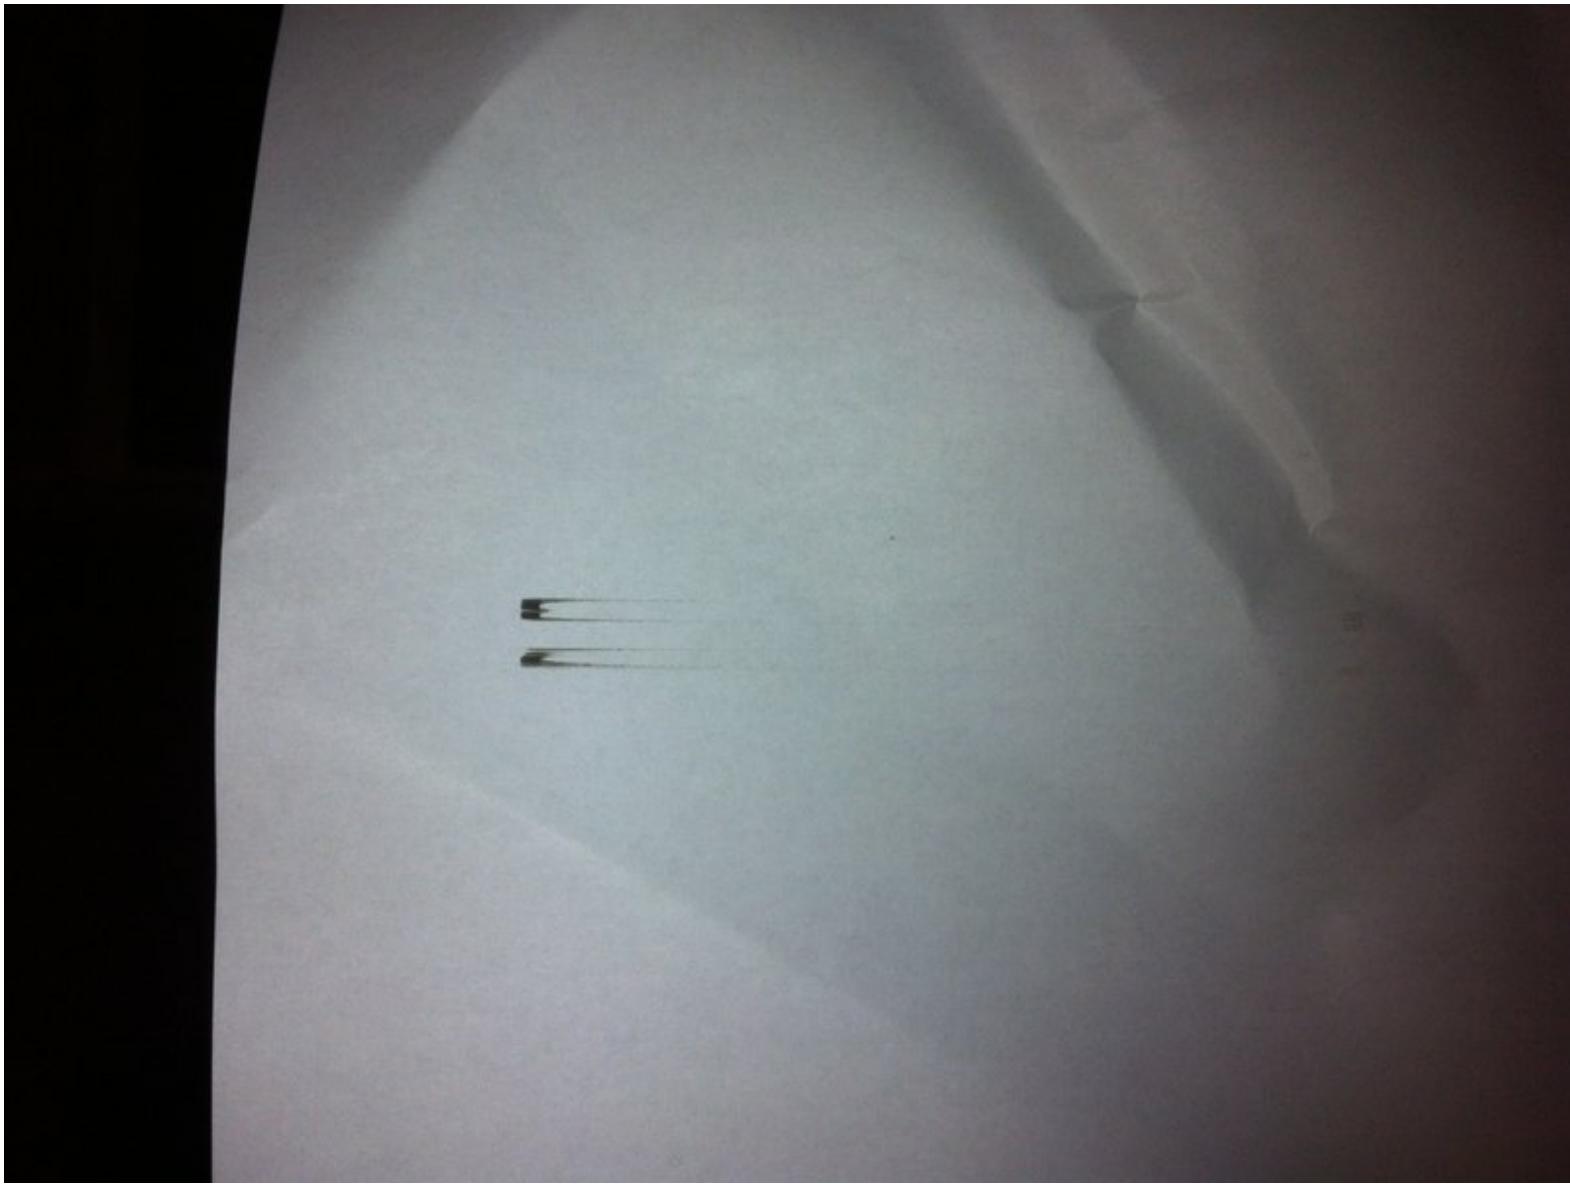

This document was generated on 2019-09-23 02:06:22 AM (MST).

Step 1 — Repairing Samsung clx-3175 Colour Laser Printer Fix black vertical lines

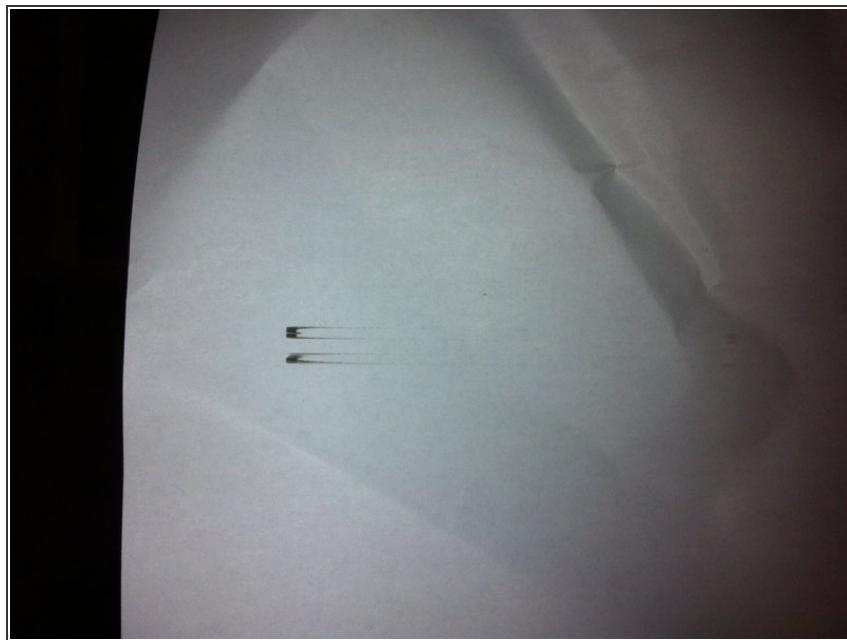

- Do your printed papers have these or similar vertical black and yellow lines?
- Then this is the tutorial for you to make them disappear

Step 2



- Open the printer front and take everything out
- Take out the toners
- Take out the drum together with the waste bin

Step 3



- Your printer should now look like in the image attached
- Use a flashlight to see inside the printer
- On the glossy black plastic you will see vertical lines of color which are the cause of your printers problem

Step 4



- Use a small white paper and try to stick it into the top - like shown
- Move it from left to right and drag it out again
- You will see that it is pretty dirty afterwards
- Do this multiple times and clean the black glossy plastic with a cotton cloth - be careful not to scratch it

Step 5



- Close the printer again and print some pages
- After the 2nd or 3rd the black vertical lines should be gone completely
- Have fun - again!

To reassemble your device, follow these instructions in reverse order.