



# Repairing the Buttons

Follow this guide to help you solve any problems with the fan's buttons.

Written By: Queena Phung



## INTRODUCTION

This guide will help you repair the buttons on the Seville Classics MSC10166 Tower Fan.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Installing the PCB (Printing Circuit Board)



- Use a Philips #2 screwdriver to unscrew the four 6mm Phillips #0 back screws.
- *i* Do this by unscrewing from left-to-right then pull the screws out of the back of the fan

## Step 2



- Pull the front and back cover apart.
- Be careful not to pull the front cover off completely because it holds the wires.

## Step 3



- Remove the Phillips (5-mm head) 6-mm screw that holds the circuit board to the outer shell of the fan.


**⚠** Make sure the fan is unplugged while removing the circuit board as you may get shocked.

## Step 4



- Remove the top cover containing the circuit board and the wires by pulling it away from the body of the fan.


## Step 5

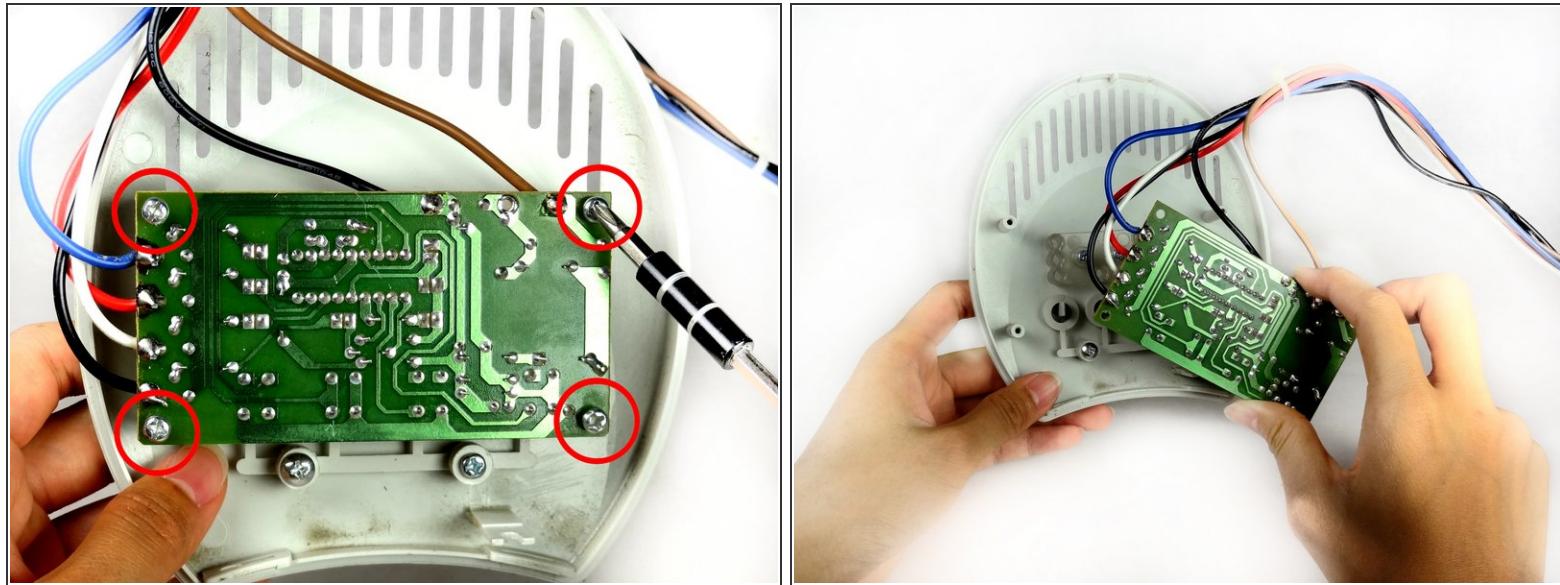

- Remove the circuit board from the top cover. Do not touch the other side of the circuit board as you may damage circuit elements.

ⓘ Unscrew the four screws on the top of the circuit board in a left-to-right fashion. After pull screws out of the board.

## Step 6 — Buttons

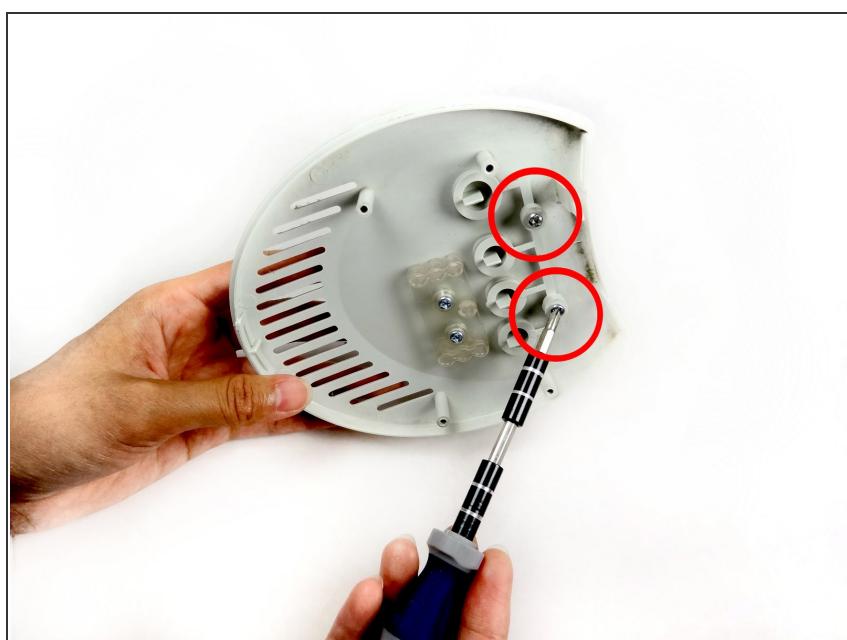

- Next remove the two (7-mm head) 8-mm screws that attach the buttons to the top cover of the fan.

ⓘ To do this, unscrew in an upright position and pull screw out after.

## Step 7



- Remove the buttons from the top cover.

## Step 8



- Wipe down any dirt on the buttons.

## Step 9



- Wipe down the frame that holds the buttons.
- Reverse the order of this guide in order to put back together the fan.

To reassemble your device, follow these instructions in reverse order.