



# Replace LCD screen

Written By: Felice Suglia





## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery





- Open the latch on the right side that secures the battery in place.
- Open the latch on the left side that secures the battery in place.
- Now remove the battery.

## Step 2 — LCD screen

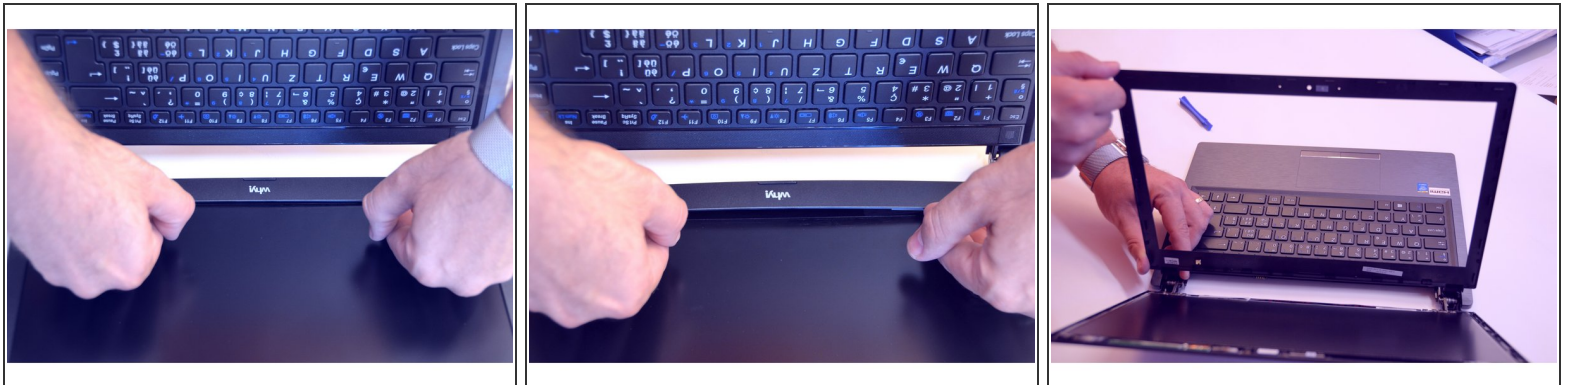




- Carefully slide the nail between the frame and the glass of the screen.
- First clip off the mounting points of the LCD screen frame.

## Step 3

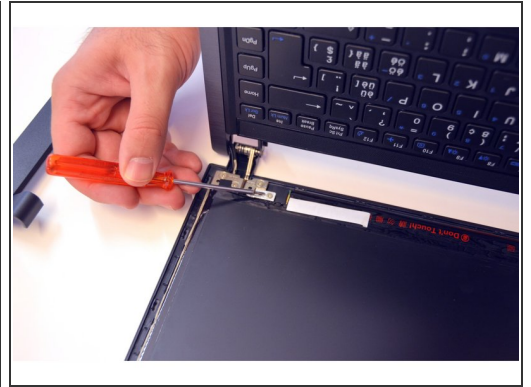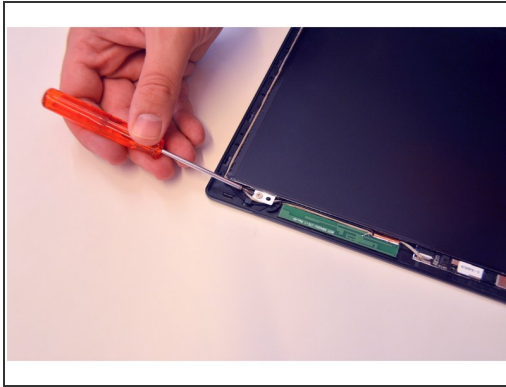


- Free the LCD screen frame completely.
- Locate and loosen the two upper mounting screws of the LCD screen.
- Locate and loosen the two lower mounting screws of the LCD screen.

## Step 4

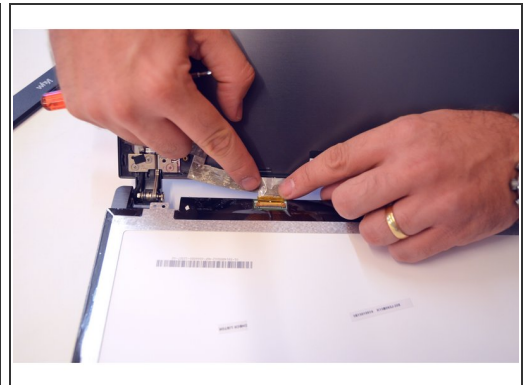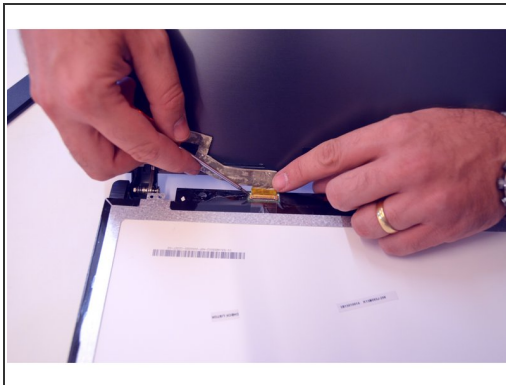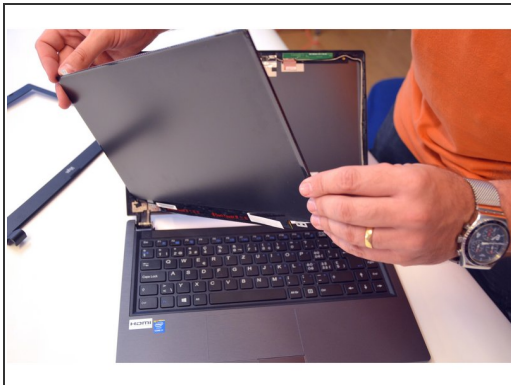

- Carefully place the LCD screen on the keyboard.
- Locate the plug of the LCD screen.
- Free the fixing cable.

## Step 5

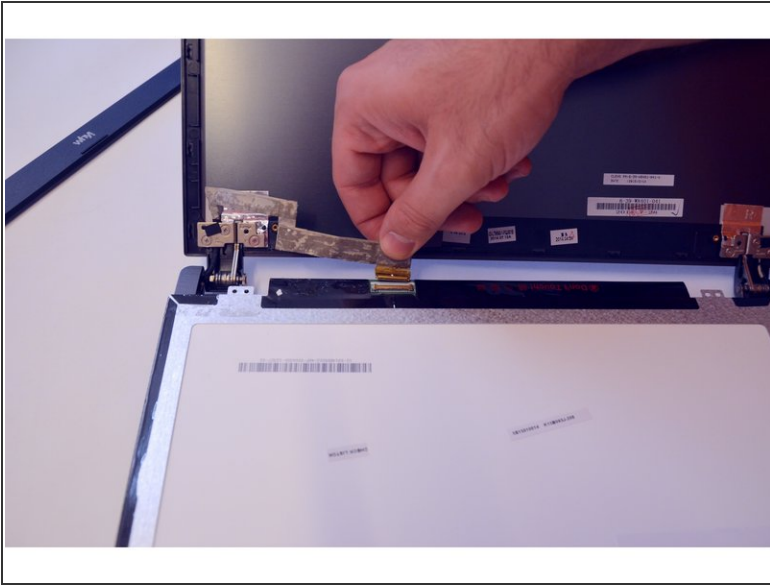

- Disconnect the cable from its plug.
- Then lift out the LCD screen.

To assemble the device again, proceed in reverse order.