




# Replace fan

Written By: Felice Suglia

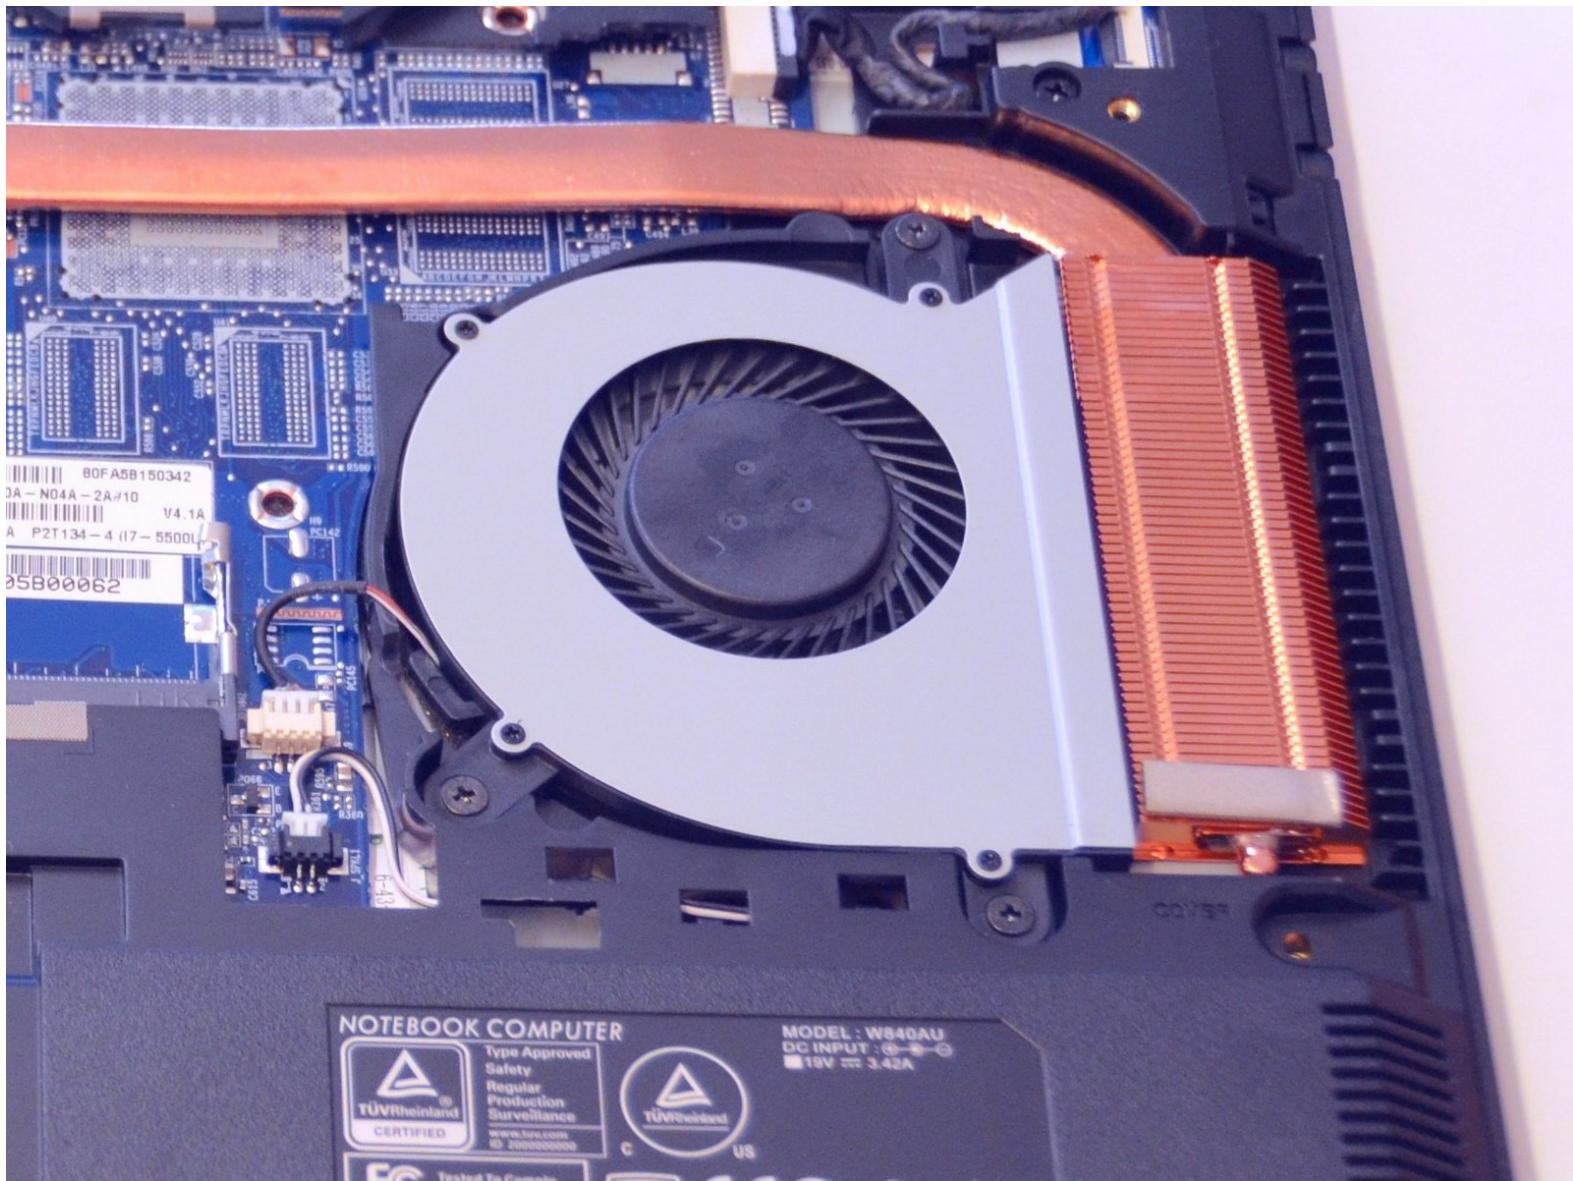

 **TOOLS:**

- Phillips #0 Screwdriver (1)

## Step 1 — Battery




- Open the latch on the right side that secures the battery in place.
- Open the latch on the left side that secures the battery in place.
- Now remove the battery.

## Step 2 — Main access cover



- Using a Philips-head screwdriver remove highlighted screws.
- Look at the marking to see how to remove the access cover.
- Remove the access cover as shown by the marker.

## Step 3

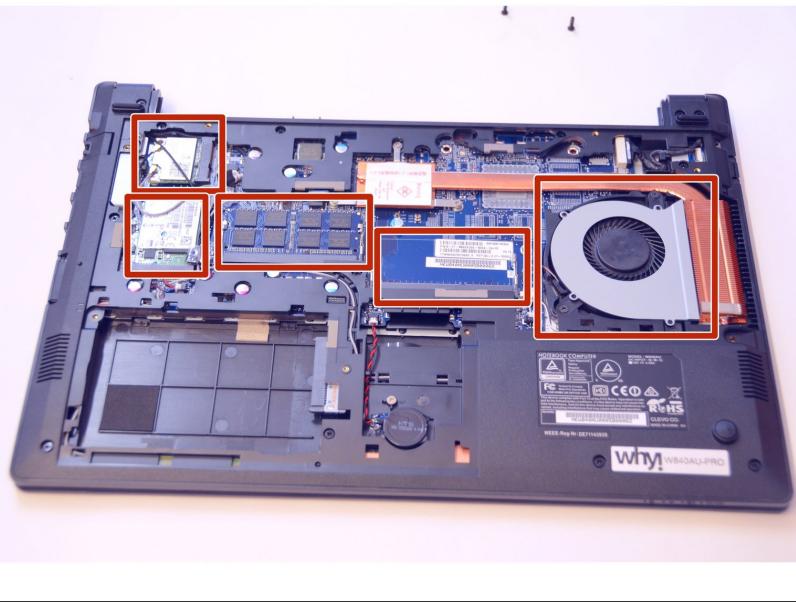

- You now have access to all components of this laptop.

## Step 4 — fan



- There is the fan.
- Then pull out the supply cable of the fan.
- Remove the 3 mounting screws of the fan.

## Step 5



- Remove the 3 mounting screws of the fan.

To assemble the device again, proceed in reverse order.