




Replacement of speakers on the Dell XPS 13 9380

This guide explains how to remove the speakers from your Dell XPS 13 9380.

Written By: Schwarzer

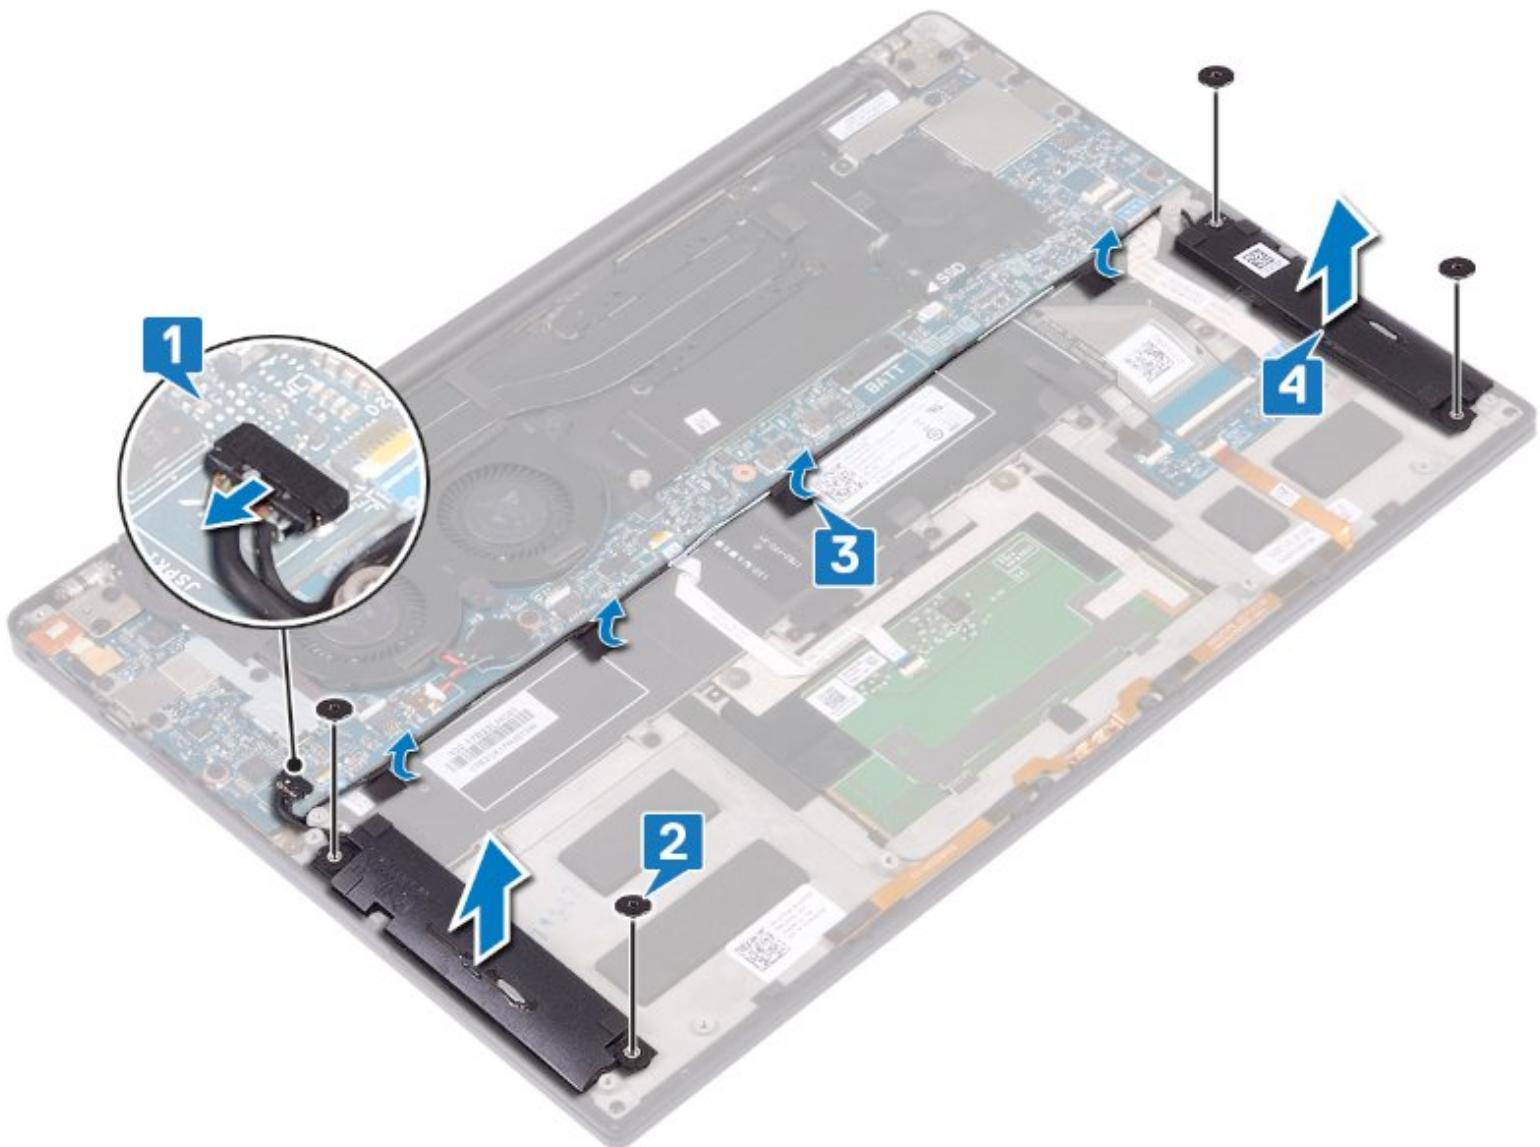


INTRODUCTION

You need to disconnect or replace the speakers of your Dell XPS 13 9380, this guide is for you!

TOOLS:



- Mako Driver Kit - 64 Precision Bits (1)

Step 1 — Remove the back panel

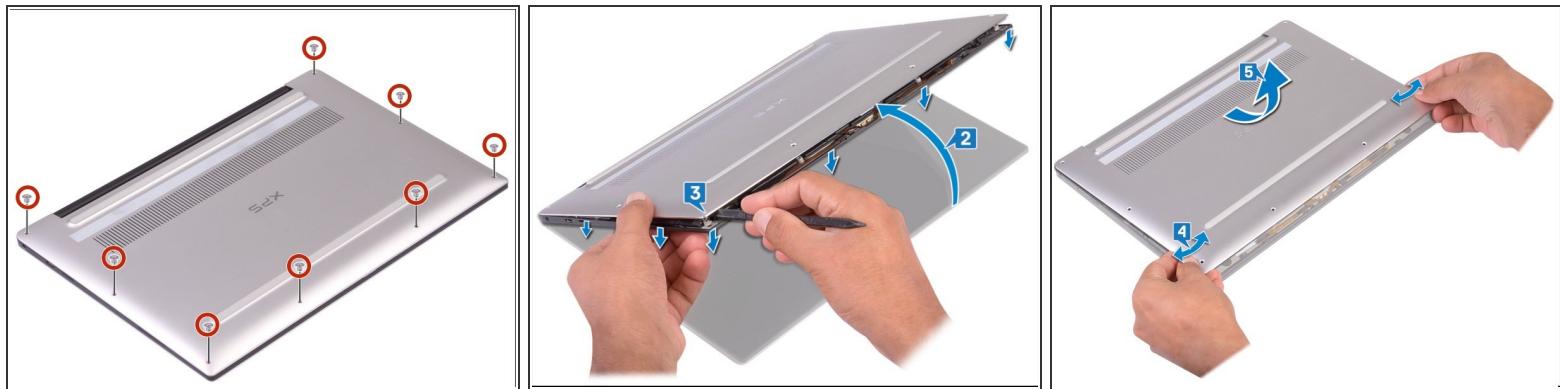


- Unscrew the eight screws (Torx M2x3) that attach the back panel.
- Turn the computer over, then open it by tilting it.
- Using a Spudger, lever on the back panel.
 - By sliding the back panel from left to right, release the clips that attach it. This way you can remove it

Step 2 — Remove the battery

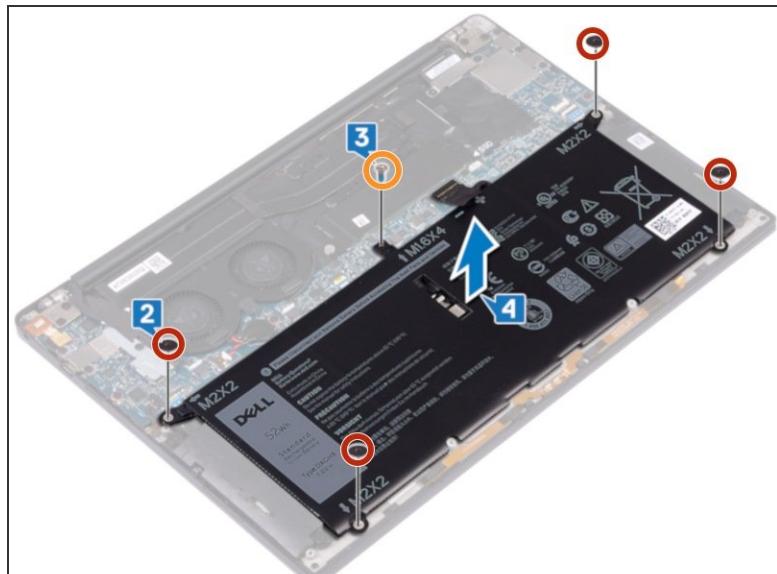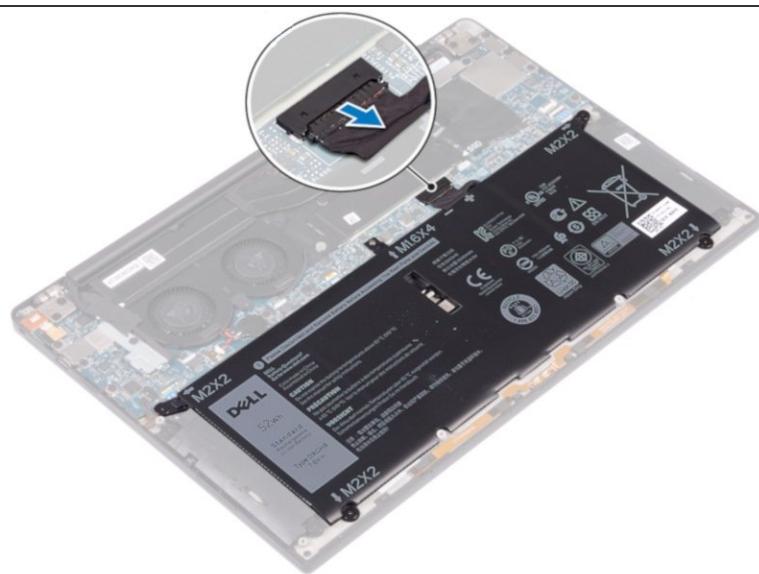

- 1- Disconnect the cable from the battery.
- 2- Remove the four screws (M2 x 2) that attach the battery.
- 3- Remove the screw (M1.6 x 4) that fixes the battery.
- 4- Remove the battery from its place.

Step 3 — Remove the speakers

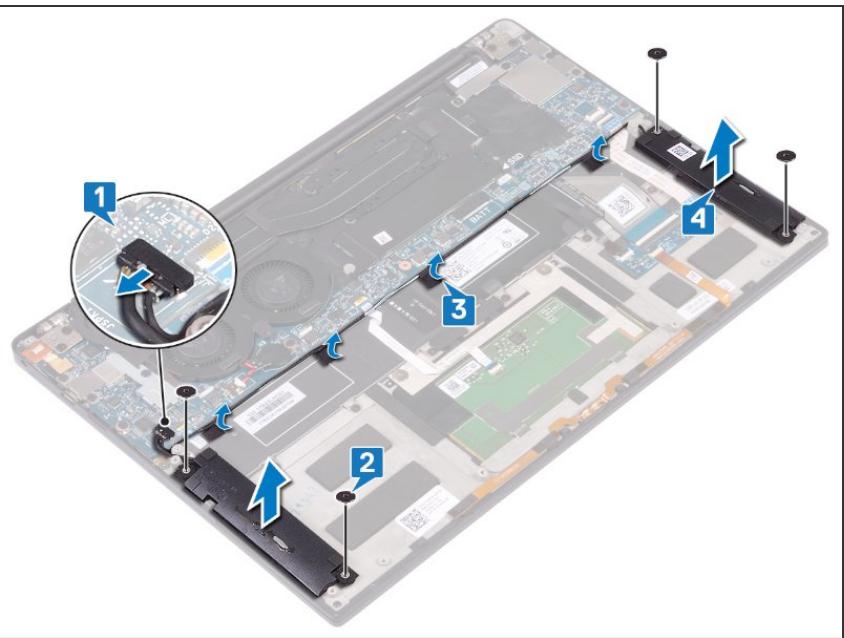

 We removed or disconnected the battery to avoid any electrical discharge.

- 1- Disconnect the speaker cable from the motherboard.
- 2- Remove the four screws (M2x2) that attach the left and right speakers.
- 3- Note the routing of the cable from the speakers and remove the adhesive tapes (4) that attach the cable to the keyboard.
- 4- Lift up the left and right speakers and their cables and remove them.

To reassemble your device, follow the instructions in reverse order.