


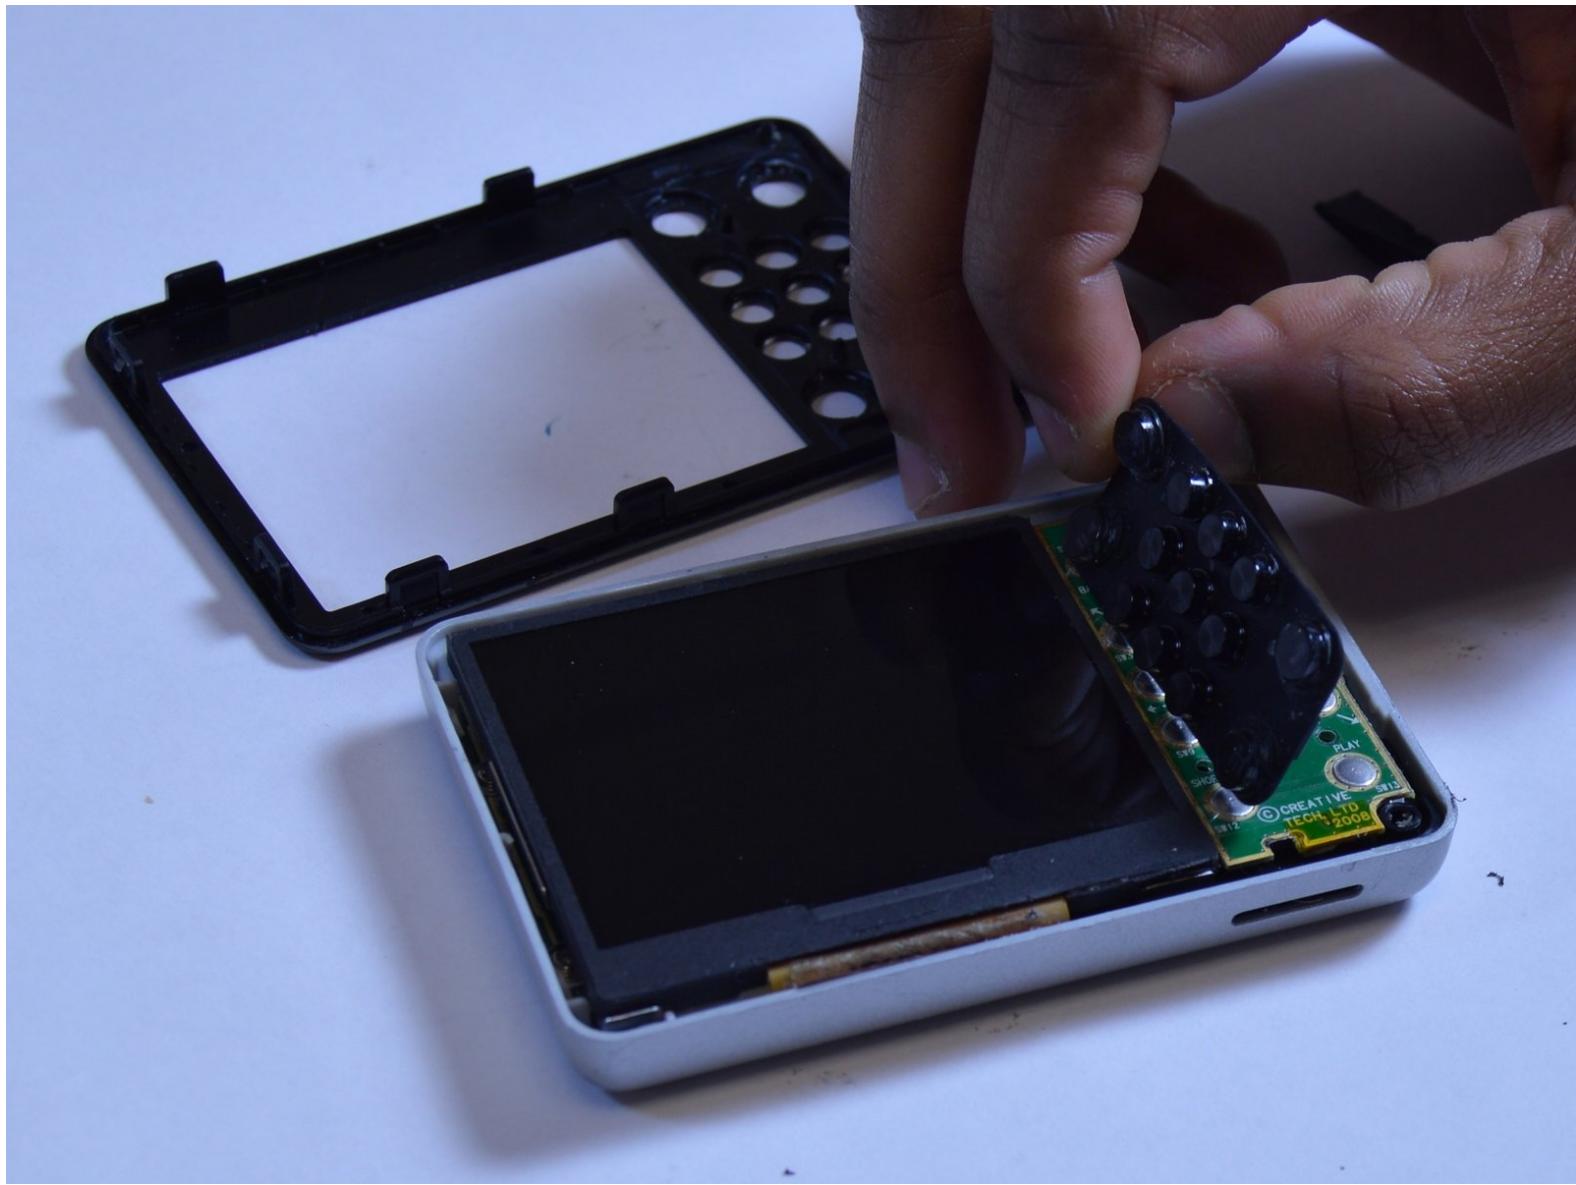

# Replacing Creative Zen X-Fi Rubber Button Cover

This guide will attempt to remove rubber padding used to protect the input circuitry below.

Written By: Westley Courchene



## INTRODUCTION

The cover is used for protecting the underlying circuit and contributing to the overall device's aesthetic.

### TOOLS:


- Spudger (1)

## Step 1 — Detaching Front Case



- Using a spudger, wedge the tip between the front and back case to pry them apart.
- Be careful to not apply excessive force since there are six fasteners on the screen's side that holds the cases firmly together.

## Step 2 — Rubber Button Cover

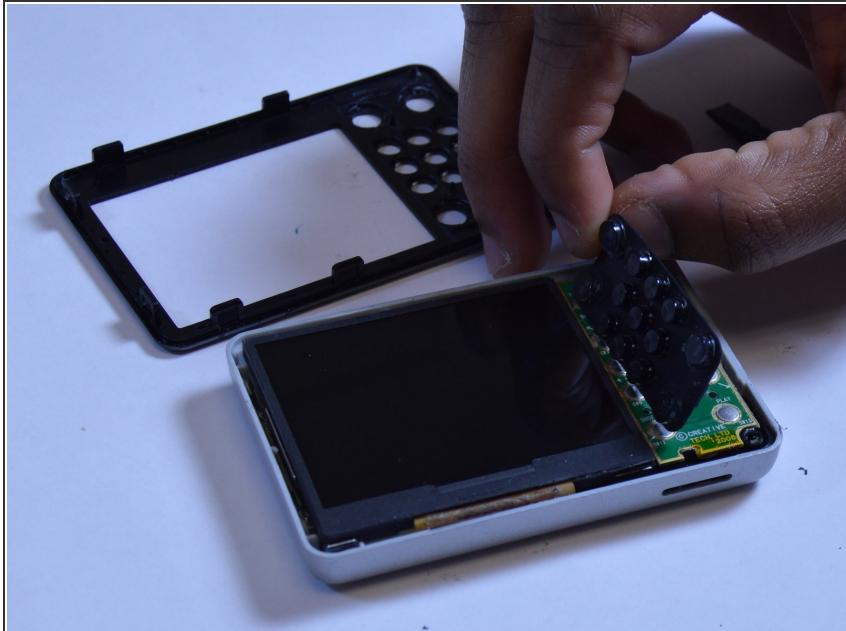

- The black rubber button pad can be removed by simply picking it up.

To reassemble your device, follow these instructions in reverse order.