




# Replacing IBM ThinkPad 560z RAM

Written By: Derek Driscoll

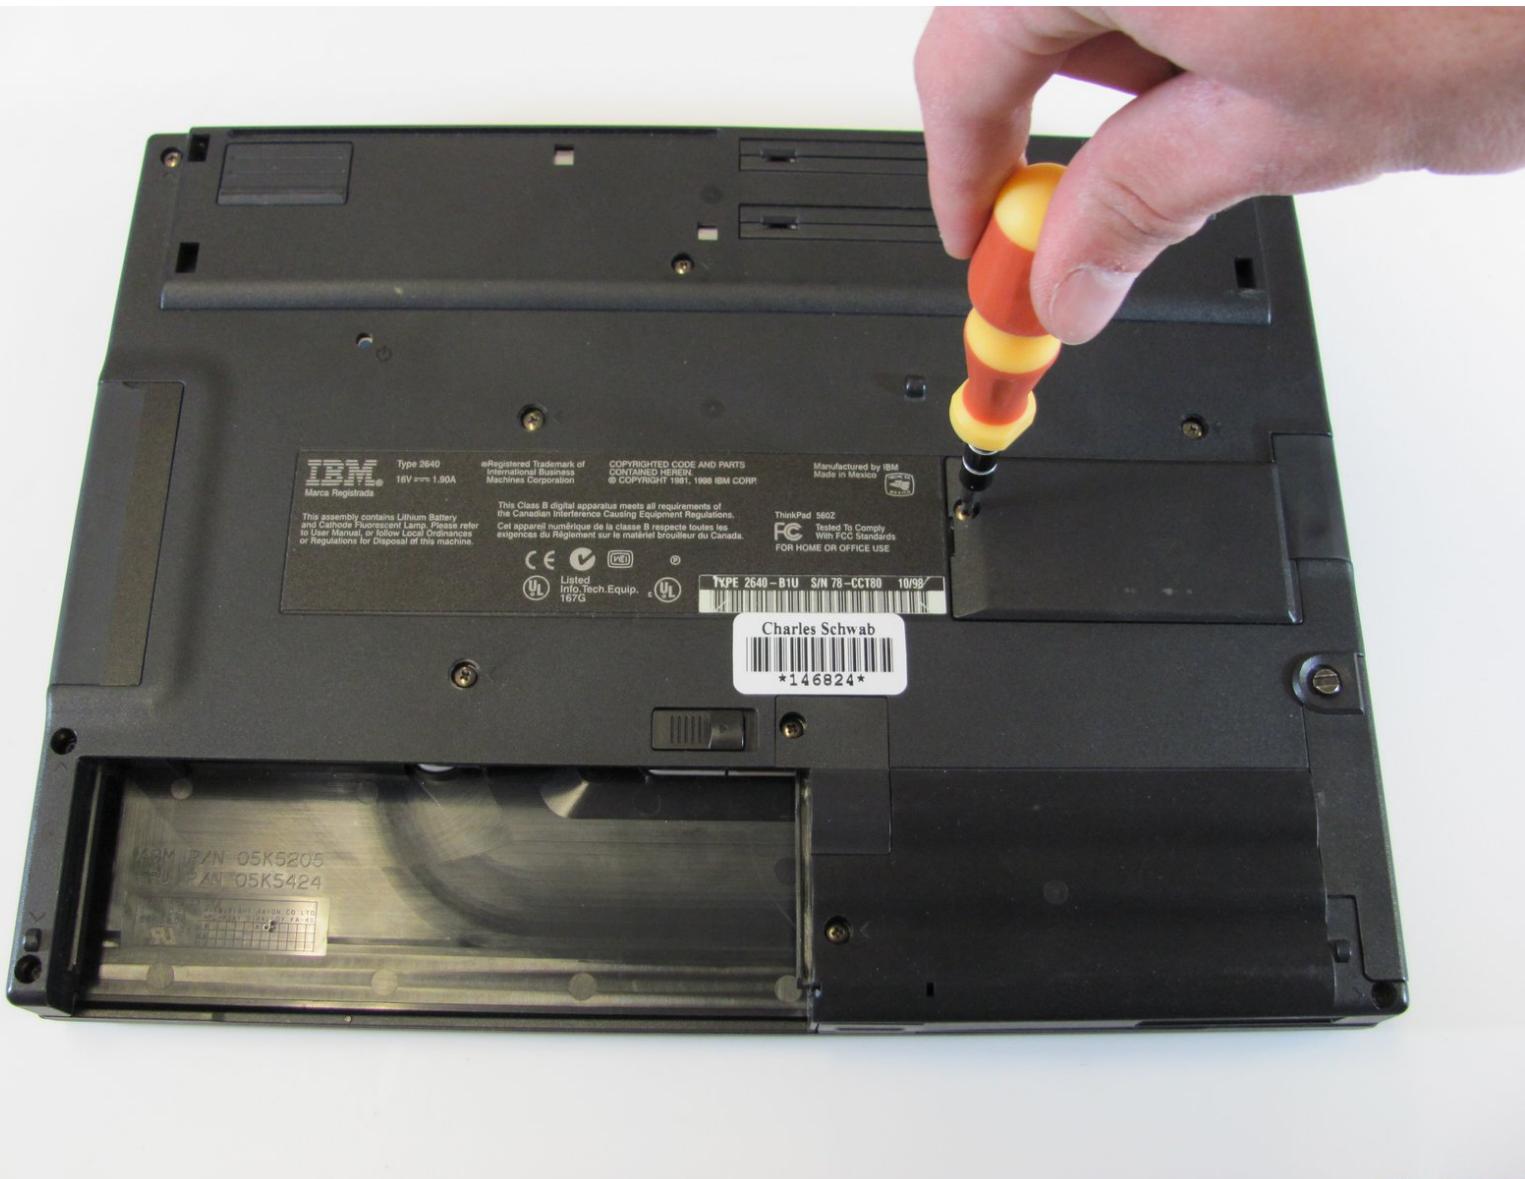

# INTRODUCTION

How to remove the RAM for repairs or replacement.

## TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Battery Removal




- Slide the battery release latch to the right.
- Pull out the battery out towards the front of the device.

## Step 2 — RAM




- Remove a single phillips head screw.

## Step 3

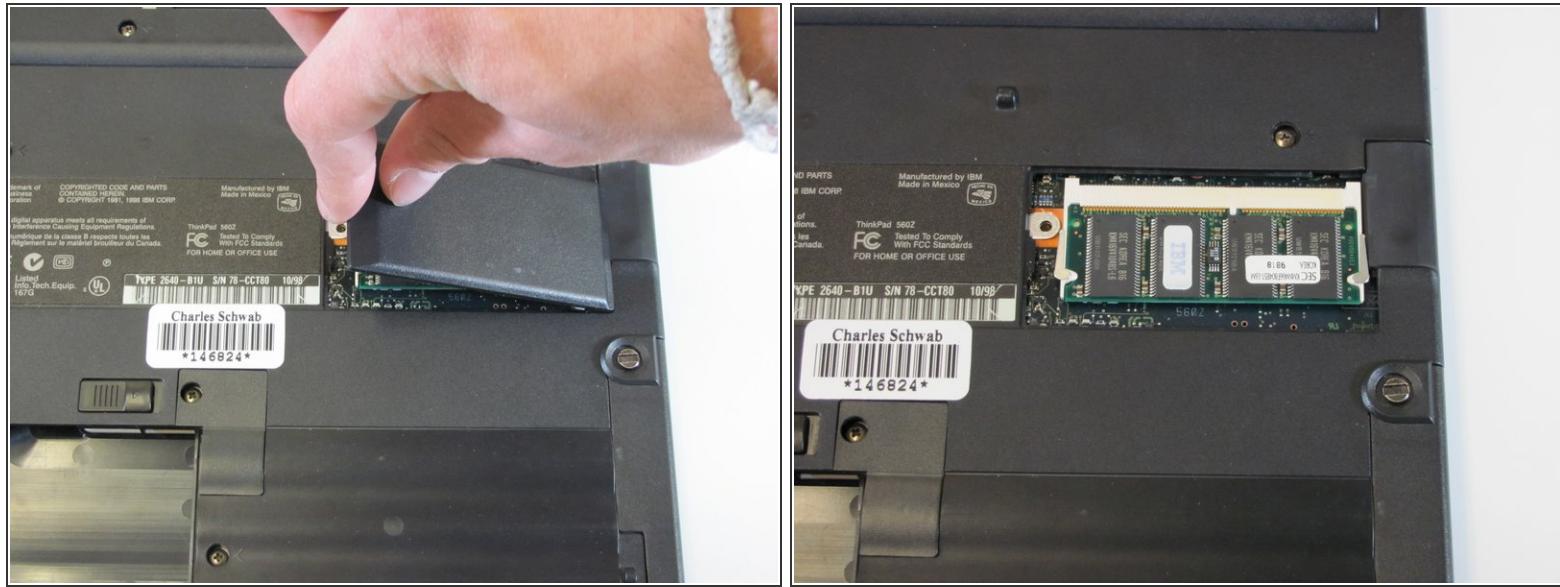

- Lift the cover to reveal the RAM.

## Step 4

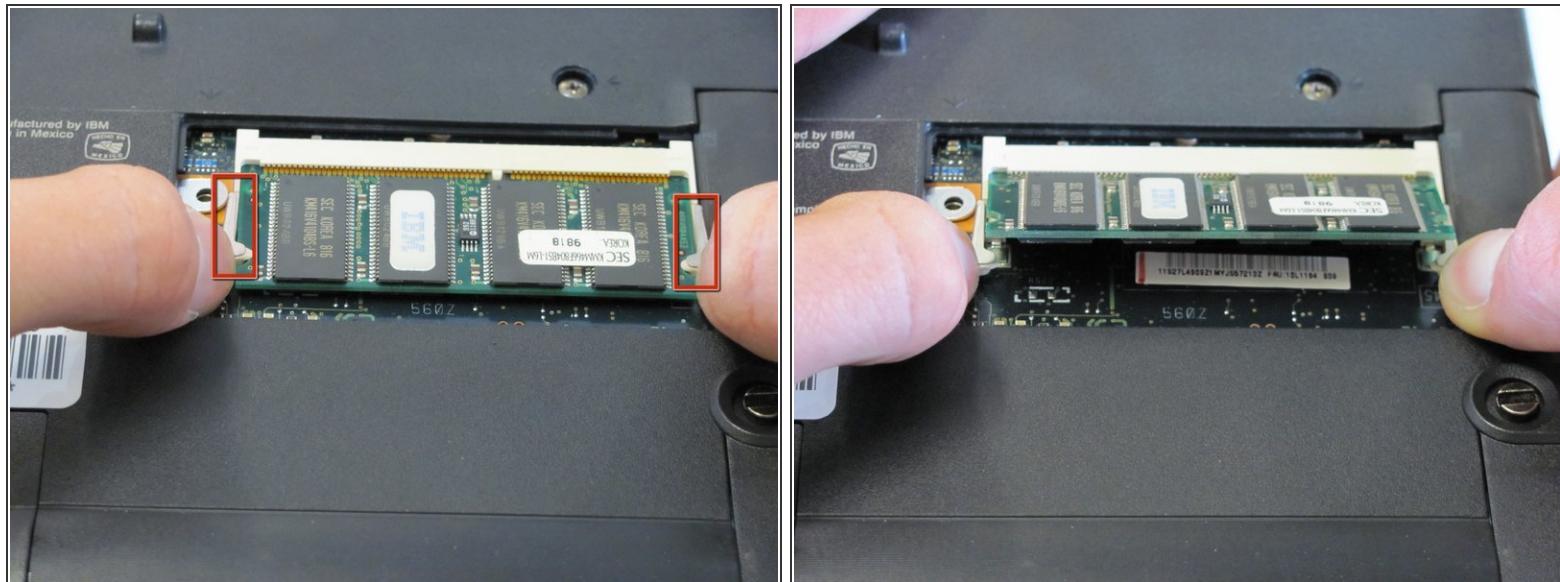

- Use your fingers to push apart the clamps holding the RAM.

## Step 5



- Use your fingers to pull out the RAM.

To reassemble your device, follow these instructions in reverse order.