



Replacing Olympus Stylus 1010 Battery

This guide gives step by step instructions on how to remove the battery from an Olympus Stylus 1010.

Written By: Max McIntyre



Step 1 — Battery




- Locate the battery compartment on the bottom of the camera.

Step 2



- Using your thumb, slide the gray button to open the battery compartment.

Step 3

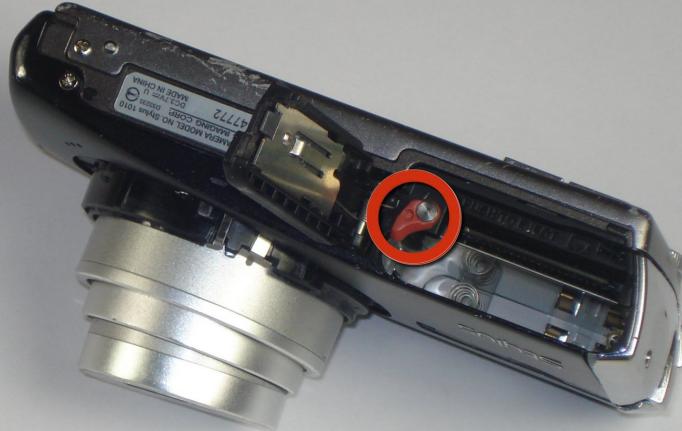

- Remove the battery by pushing the red lever to the side.

To reassemble your device, follow these instructions in reverse order.