



Resetting the Clock

This guide will show how to reset the clock on a Nextplay Fashion iPod Docking Clock Radio if the time displayed is currently flashing or incorrect.


Written By: Jacob Aube



INTRODUCTION

The following step-by-step guide will show you how to successfully reset the clock on a Nextplay Fashion iPod Docking Clock Radio, also known as NP109CR.

Step 1 — Resetting the Clock

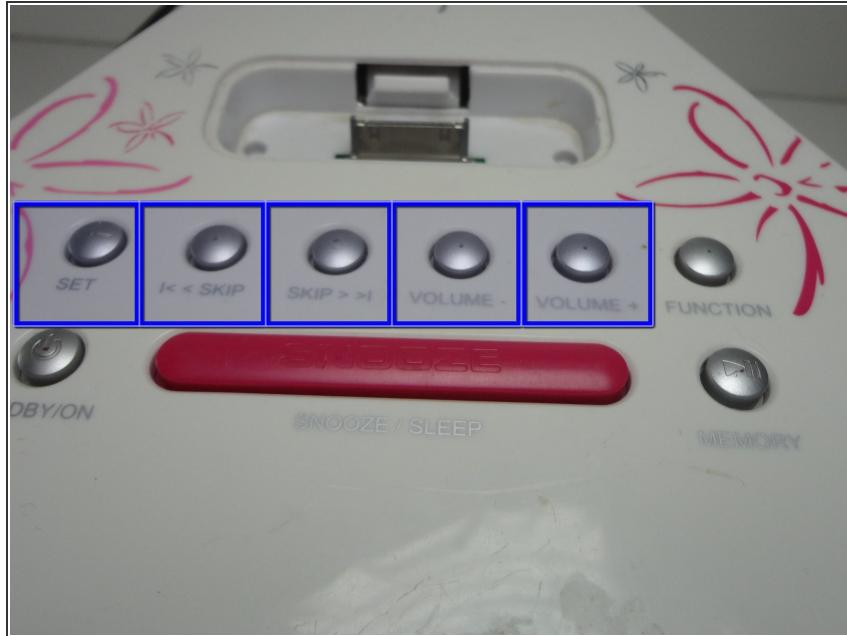


- Locate the buttons named "SET", "SKIP", "VOLUME -", and "VOLUME +", which are situated on the top portion of the Nextplay NP109CR.

Step 2



- Press the "SET" button, the first button from the left in the row located behind the pink snooze bar, three (3) times until the clock display is flashing.

Step 3

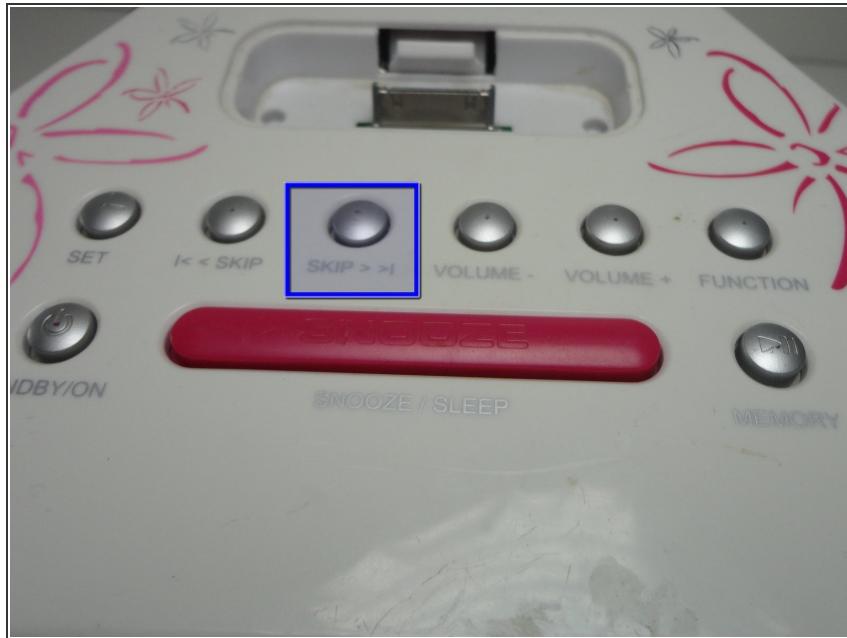


- Press the "SKIP" button with the two triangles next to it pointing to the right to advance the hour.

Step 4



- Press the "SKIP" button with the two triangles pointing to the left to retreat the hour.

Step 5

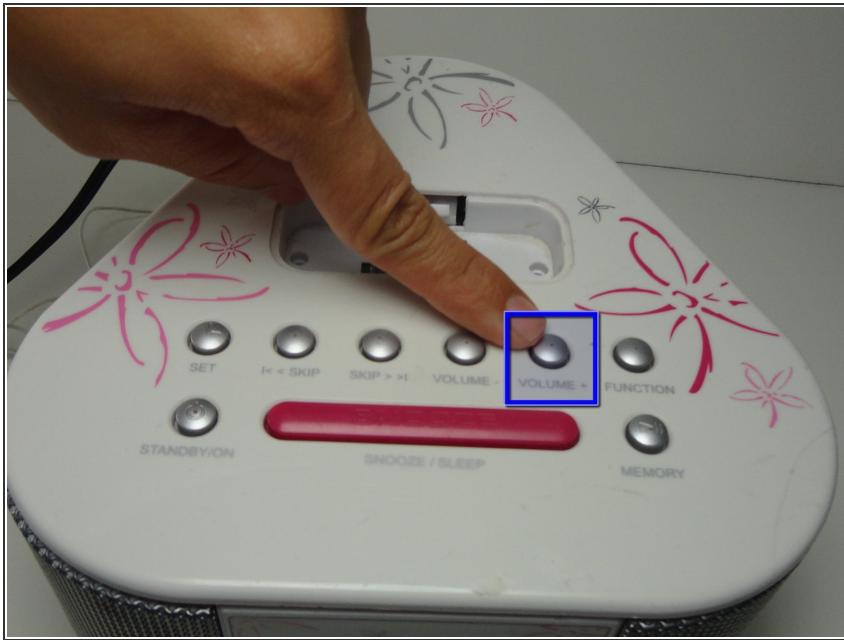

- Press the "VOLUME +" button to advance the minutes forward.

Step 6



- Press the "VOLUME -" button to decrease the minutes.

Once the desired time has been set, the display will continue flashing for about five (5) seconds. When the clock has stopped flashing the clock has been reset successfully. Setting the clock can be very useful when traveling or when living in an area with frequent power outages.