



Resetting the Netgear WGR64v9

Reset the device back to manufacturer settings. Take note, the device will return to the original username and password.

Written By: Ryan Murphy



INTRODUCTION

This guide will take you through the process required to reset your Netgear router.

TOOLS:


- [Spudger \(1\)](#)

Step 1 — Resetting the Netgear WGR64v9



- Rotate device so the back panel is facing you.
- Locate the reset button. It is located on the metal grating next to the antenna.

Step 2

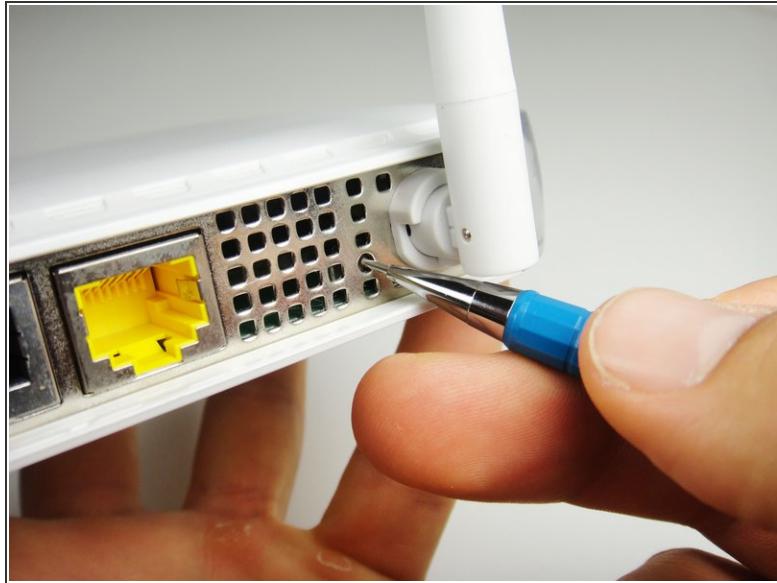

- Push the reset button using a tool, along the lines of a pencil or paper clip, until you hear the button click.

(i) The router has now reverted to original user name and password settings

To reassemble your device, follow these instructions in reverse order.