



Revlon 473 Disassembly

This involves cleaning the components of the head to keep the fan from getting clogged.

Written By: Jessica Leyva



INTRODUCTION

Clean the head of the hairdryer, including the vent, to prevent the fan from getting clogged. Debris in the fan may cause a rattling noise or cause the fan to stop working.

TOOLS:

- Paper Towels (1)
- Phillips #2 Screwdriver (1)
- Toothbrush (1)
- Tweezers (1)

Optional

Step 1 — Shell



⚠ Before disassembly, make sure that the device is unplugged.


- Unscrew the two 17.83 mm black screws located on the handle.

Step 2



- Separate the shell from the main component.
- Make sure that the each piece is free from debris.

Step 3

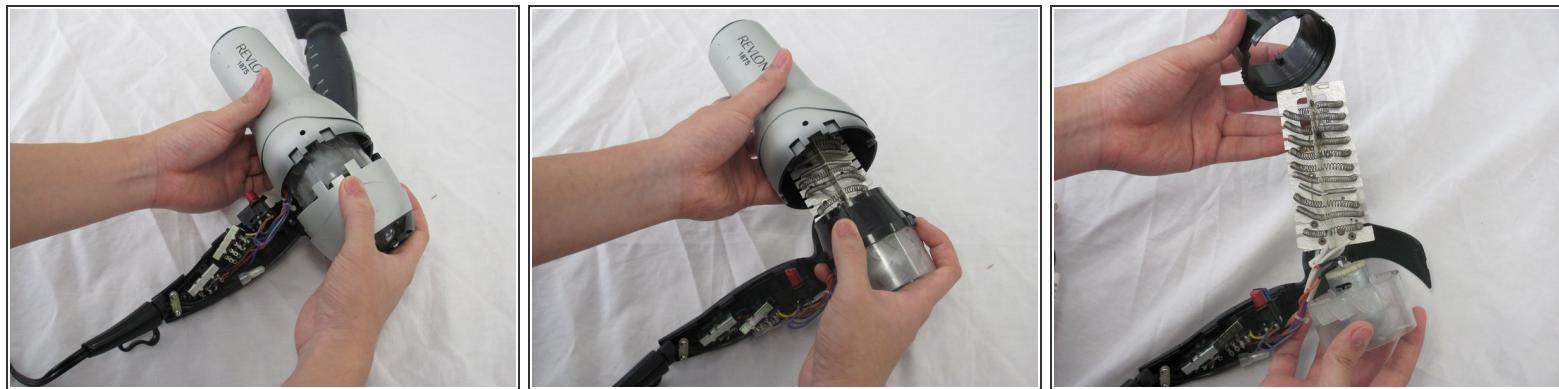

- Continue to pull the components apart.
- For reassembly, put the silver encasing on before the the black cover.

Step 4 — Revlon 473 Disassembly




- Take the head of the hairdryer and pull the pieces apart.

Step 5



- Remove the black vent from the grey cylindrical piece.


Step 6

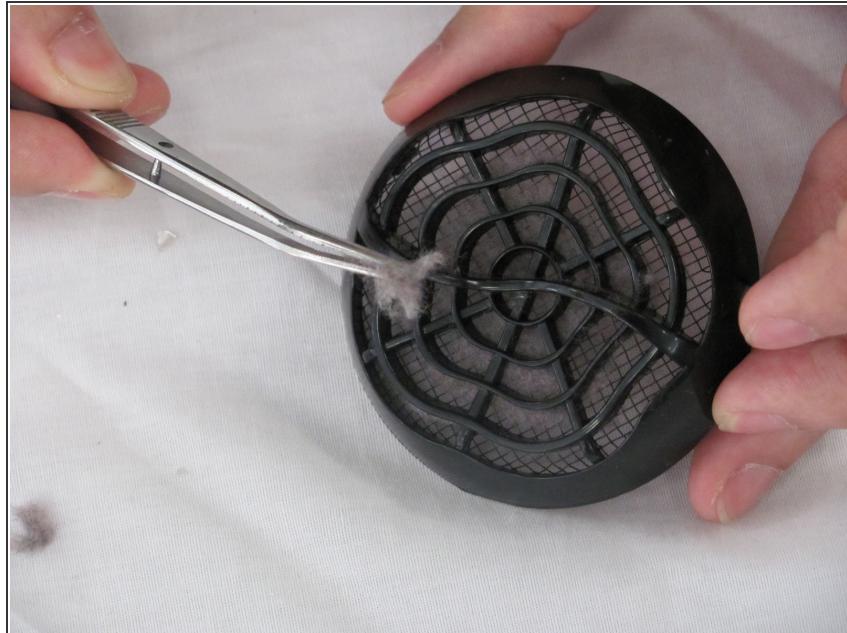

- If there is lint in the vent, use tweezers or a toothbrush to extract it from the vent.

i This will keep the fan from getting clogged and malfunctioning.

Step 7

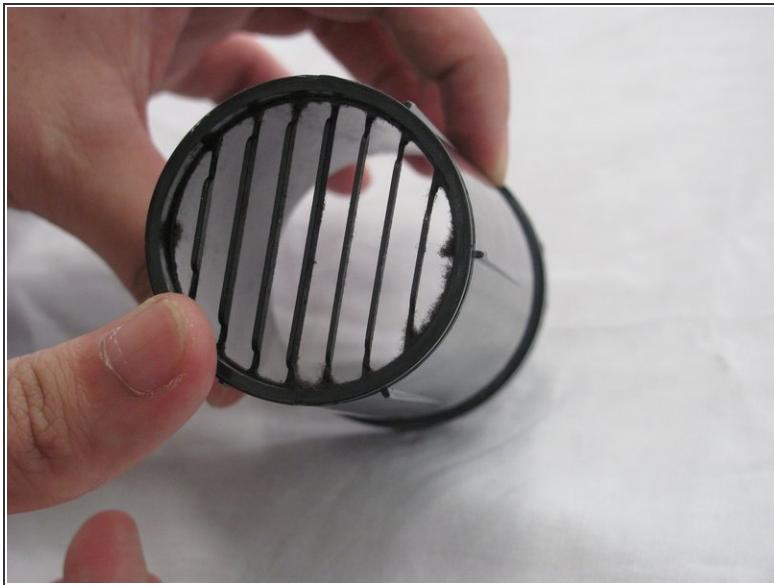

- Clean the other black vent with a toothbrush.

Step 8



- Clean these two components with a paper towel.

To reassemble your device, follow these instructions in reverse order.