



# Ricoh YF-20 Super Front Cover Replacement

This guide shows how to remove the Ricoh YF-20 Super camera front cover.

Written By: Eric Dazet



## INTRODUCTION

This process involves removing the back cover and the front cover of the camera.

### TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Front Cover



- Unscrew the seven indicated screws from the left, right, bottom, and back sides of the camera.


## Step 2



- Loosen the back cover from both the left and the right sides of the camera.

**⚠** Remove back cover. The lid of the battery compartment may fall off because it is not attached to anything.

## Step 3

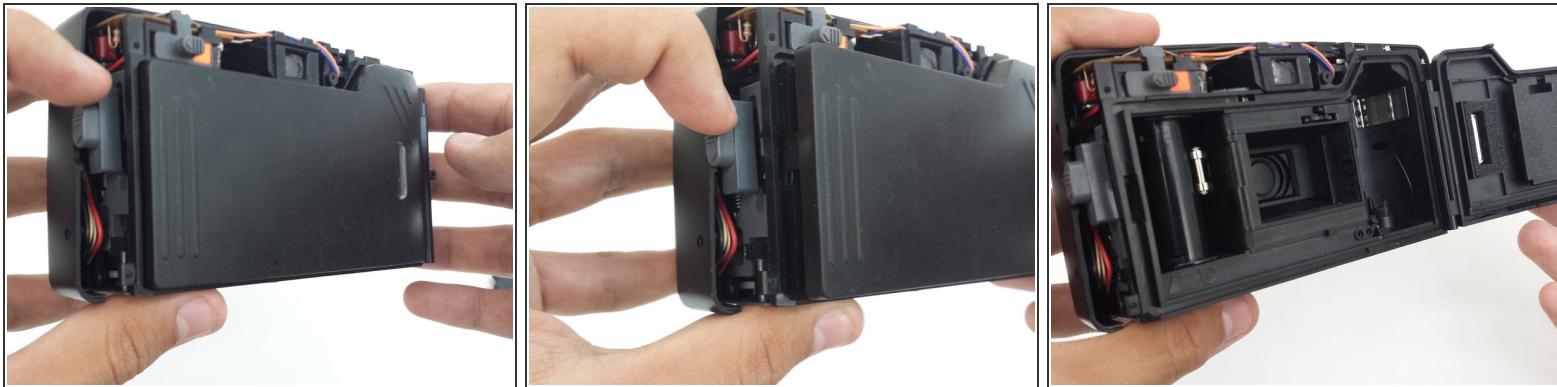

- Open the film compartment.
- Press your finger on top of the grey latch on the left side of the camera.


## Step 4



*(i)* Removing the film compartment door is optional. However, it may aid maneuverability in future steps.

- Use a thin object like a toothpick or a small screwdriver to push down on the metal pin holding the film compartment door in place.
- Use your fingers to completely remove the metal pin.
- Remove the film compartment door.

## Step 5

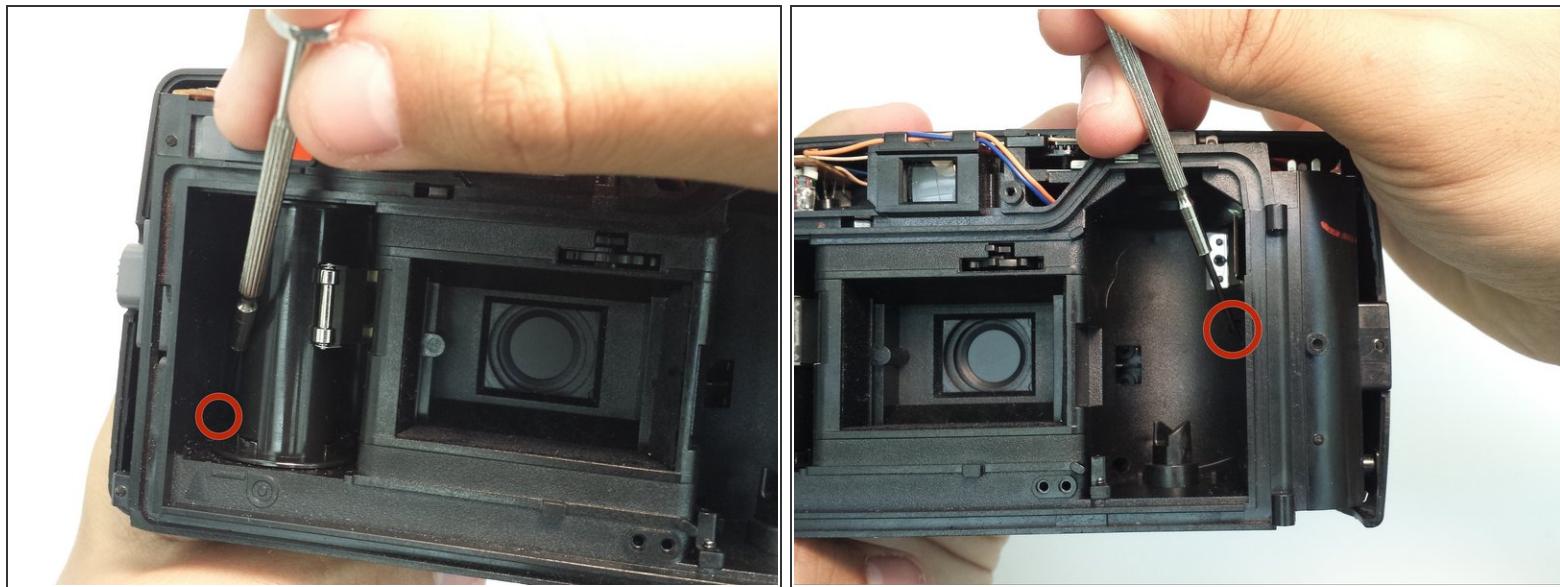

- Using a thin shaft screwdriver, unscrew the two indicated screws within the film compartment.

## Step 6



- Loosen the front cover from the left and right sides of the camera.
- Remove the front cover.

To reassemble your device, follow these instructions in reverse order.