



Ridgid Brushless R86040 Handle Replacement

This guide shows how to properly remove and replace the handle on your Ridgid Brushless R86040.

Written By: Corben Sroka



INTRODUCTION

This guide shows how to properly remove and replace the handle on your Ridgid Brushless R86040. This may be necessary if it has become damaged and it becomes a safety hazard to use while operating the device, or if you feel like upgrading to a better handle. Before attempting any of the following steps, make sure you turn off your device and remove the battery.

Step 1 — Handle



- To remove the handle, firmly turn it counterclockwise while pulling it away from the device until it comes out.

To reassemble your device, follow these instructions in reverse order.