



Ridgid R2601 Top Cover Replacement

This guide shows how to remove the top cover — a prerequisite for other replacements.

Written By: Ellie Lott



INTRODUCTION

In order to replace most other parts in the sander, you must remove the top cover. All you will need is a T10 screwdriver. Make sure that the device is unplugged before following this guide.

TOOLS:

- [T10 Torx Screwdriver \(1\)](#)

Step 1 — Top Cover



- Remove the four M3.5 x 16 mm screws from the top cover using a Torx T10 screwdriver.

Step 2



- Pull off the top cover.

To reassemble your device, follow these instructions in reverse order.