



# Ridgid R2611 Hook and Loop Backing Pad Replacement

This guide will show how the hook and loop backing pad can be easily repaired.

Written By: Luke Stokes



## INTRODUCTION

The hook and loop can wear down over time, which is completely normal due to constant use. The replacement parts for this guide can be easily purchased.

### TOOLS:

- Flathead Screwdriver (1)

### PARTS:


- Hook and Loop Backing Pad (1)

## Step 1 — Hook and Loop Backing Pad




- Flip the sander on its side to expose the bottom.

## Step 2

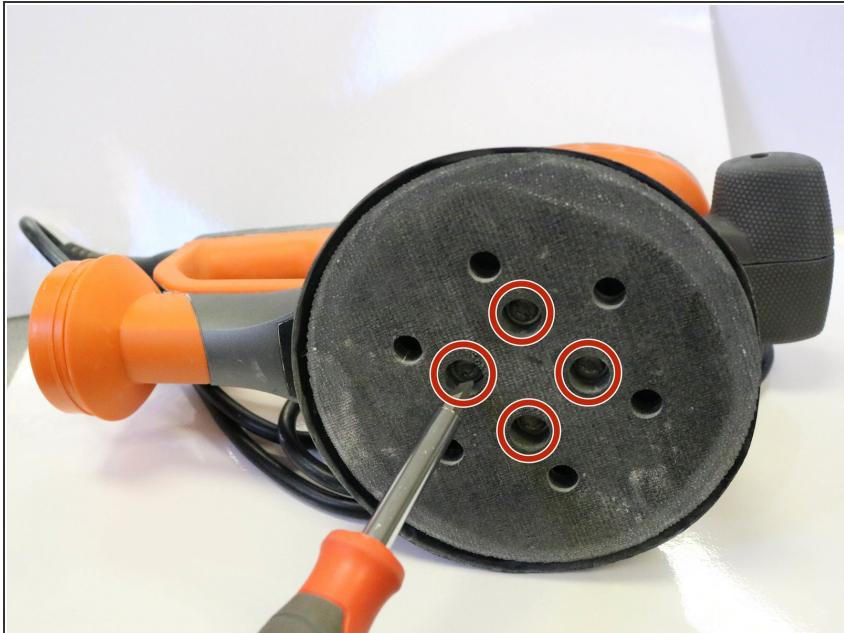

- Remove the four 2.5 mm Phillips #1 screws with the flathead screwdriver.

## Step 3

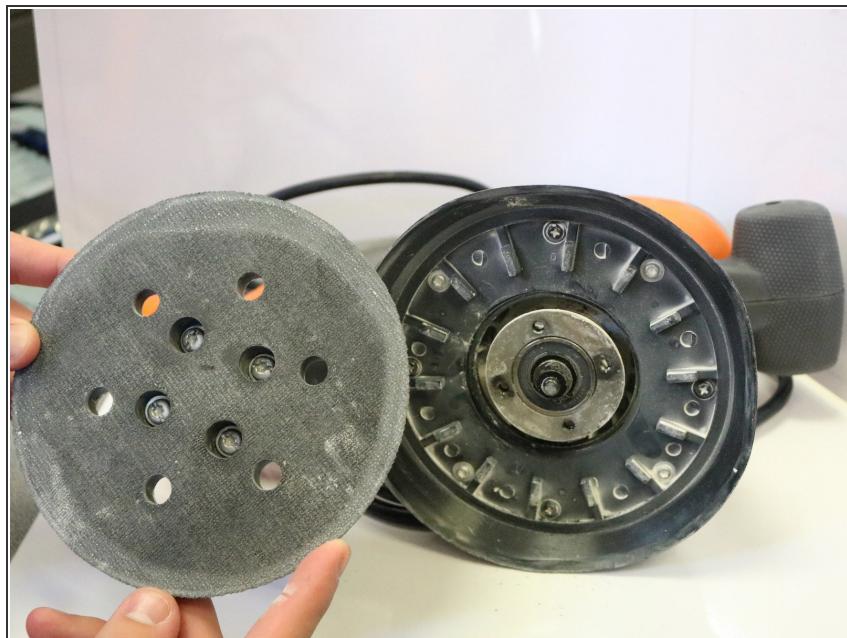

- Remove the hook and loop backing pad from the sander.

To reassemble your device, follow these instructions in reverse order.