




Rival 16131 Toaster Bread Shelf Replacement

This guide will inform you how to fix your bread shelf if it keeps getting caught.

Written By: Kristen

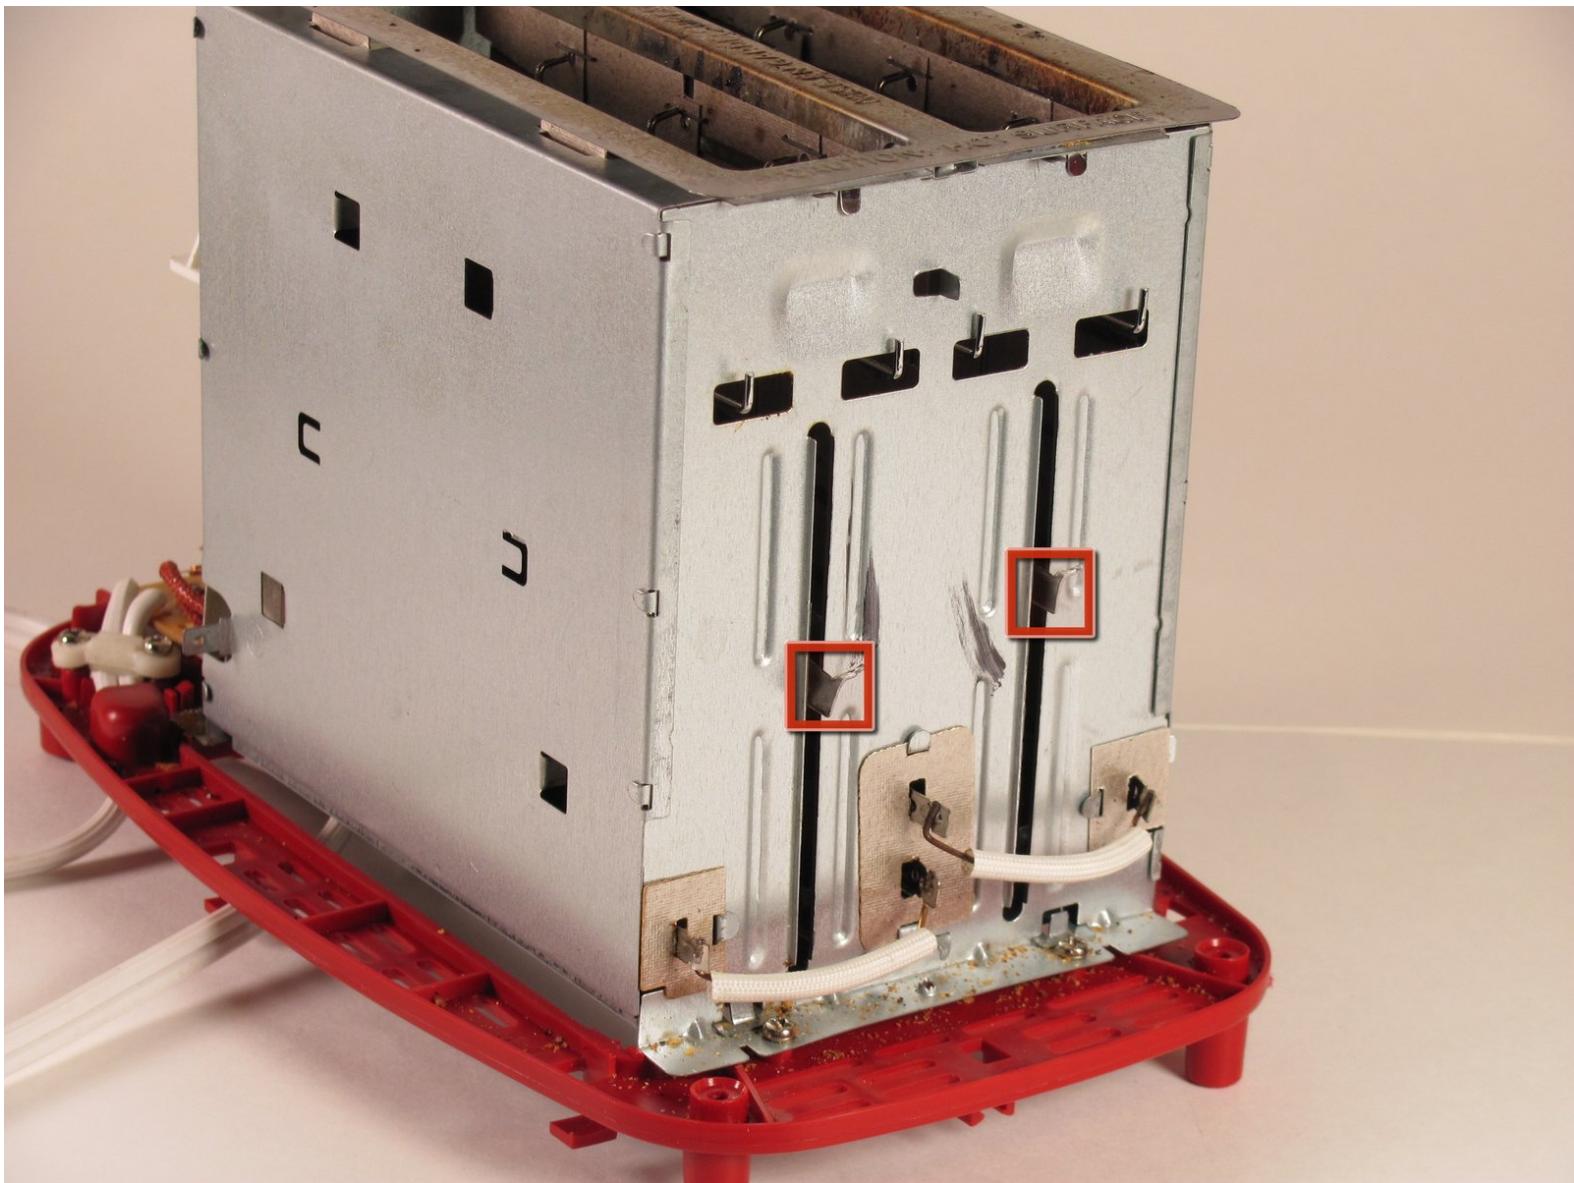

 **TOOLS:**

- **Tweezers** (1)
- **Phillips #2 Screwdriver** (1)

Step 1 — Shell Removal



 Make sure the toaster is unplugged before starting.

- Turn the toaster upside down and remove the rubber feet.

Step 2



- Using a #2 Phillips head screwdriver, remove the four 12mm screws that attach the toaster shell.

Step 3



- With the dial facing you, push the toaster base up and away until the base is just over the lip of the shell. This will disconnect the browning dial from the rest of the toaster.
- (i)* When reassembling the toaster, make sure that the back of the dial lines up with the slot both in position and orientation (the dial and slot are not perfect circles - they have a notch).
- The only object holding the shell onto the toaster now is the grey part of the lever.

Step 4




- Reach under the shell and grab the back, white part of the lever.
- Grab the grey lever between your index finger and your middle finger and pull.

 Pulling too hard will break the mechanism that holds the grey handle onto the white lever.


- Remove the shell.

Step 5 — Bread Shelf Repair

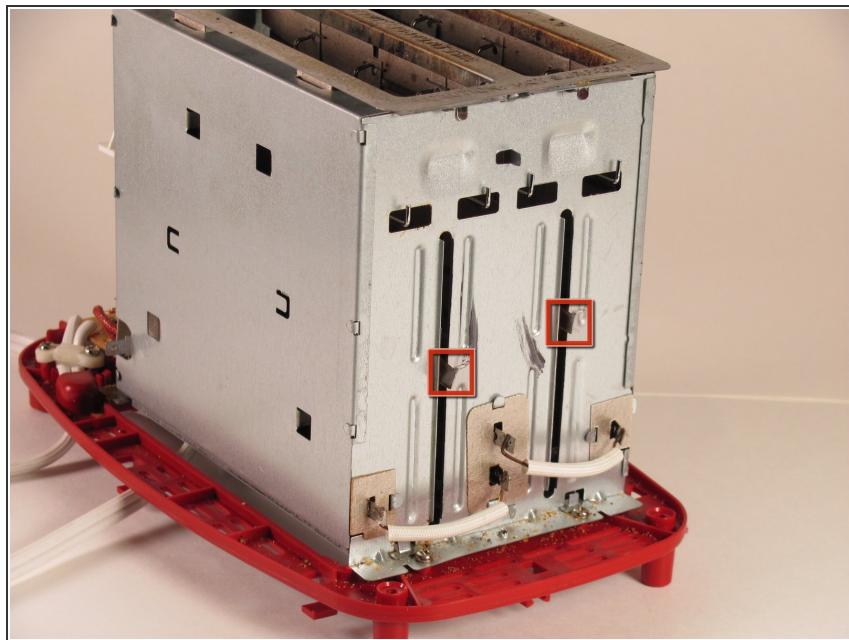

- After disassembling the toaster, turn the back side of the toaster towards you.
- On the back of the toaster the metal tabs attached to the bread shelf should be visible.
- These tabs will sometimes get caught in the shaft which disables your toaster from returning the bread.

Step 6

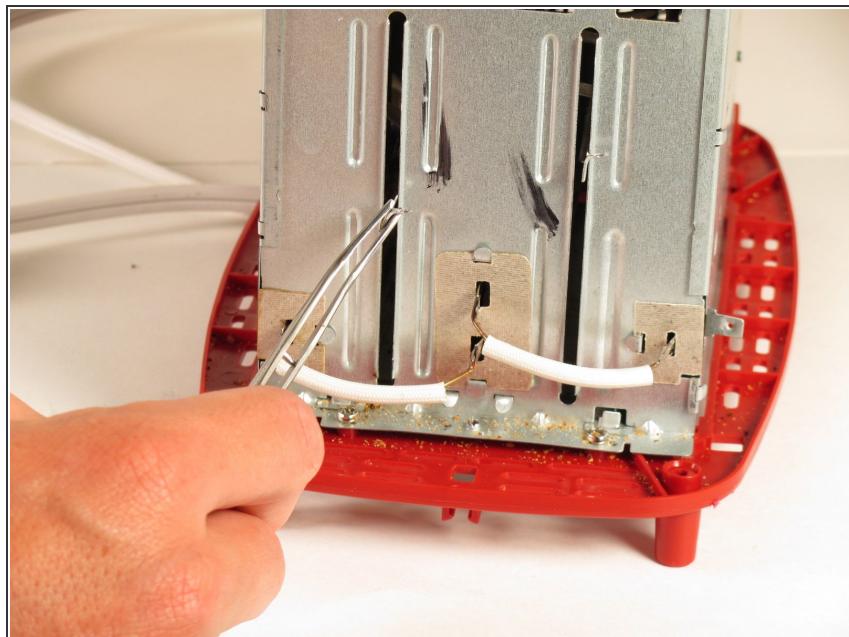

- Twist the metal tabs to vertical position to allow them to glide along the slot.
- Push down on the white lever on the opposite side repeatedly to ensure that the metal tabs will no longer stick.

To reassemble your device, follow these instructions in reverse order.