



Ryobi CSB125 Blade Replacement

Use this guide to replace the blade on your Ryobi CSB125.

Written By: Curtis Melo



INTRODUCTION

This guide will show you how to properly install a new blade to your Ryobi CSB125 circular saw. When performing cuts, if there is a burning smell then most likely the blade is either dirty or dull. In this case, the blade should be replaced with a new one. This [troubleshooting page](#) will help diagnose any potential problems occurring due to a faulty blade. In the event that a new blade is needed, this guide will show the steps to properly install a new one. The only tool you will need is a 7/32 allen key.

TOOLS:

- [Allen Wrench 7/32"](#) (1)

Step 1 — Blade



- Place the saw down on a flat surface with the blade facing up.


⚠ Make sure that the saw is unplugged from any power source.

Step 2




- Use the 7/32 allen key to loosen the 5/16-18 x 9/16 in. blade screw.

Step 3

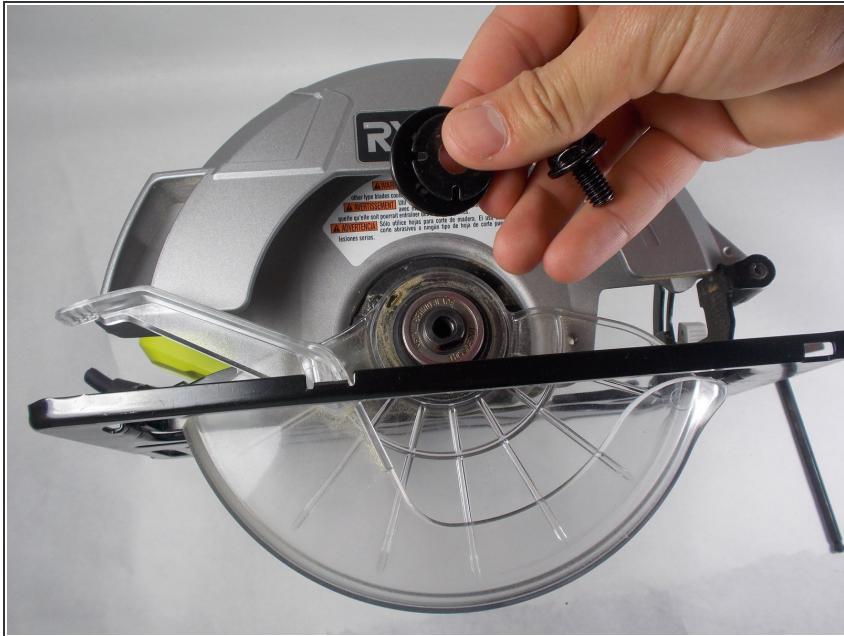

- Remove the 5/16-18 x 9/16 in. blade screw, spring washer, and the outer blade washer.

Step 4

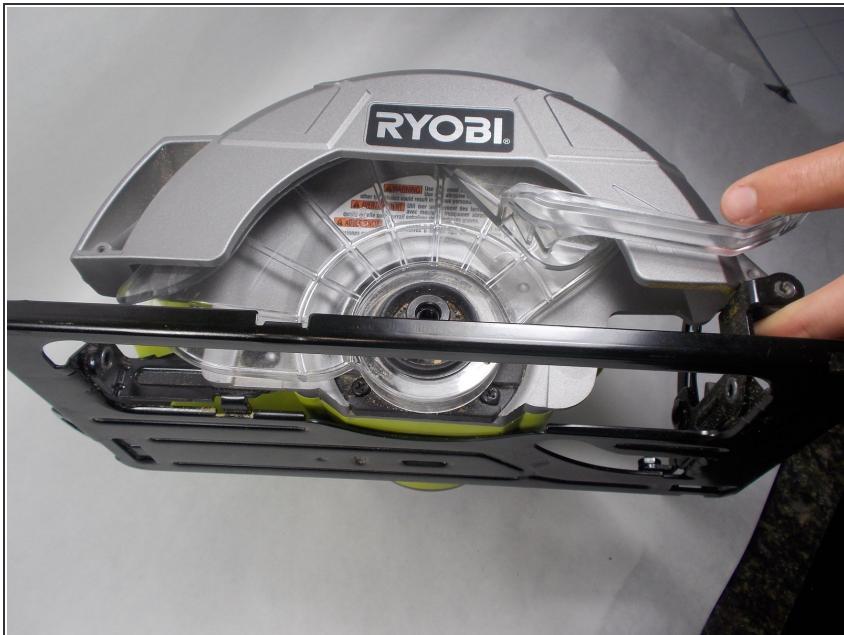

- Remove the blade from the saw.

To reassemble your device, follow these instructions in reverse order.