



# Ryobi CSB125 Protective Shell Replacement

Use this guide to replace the protective shell on your Ryobi CSB125.

Written By: Curtis Melo



## INTRODUCTION

This guide will show you how to properly install a new protective shell to your Ryobi CSB125 circular saw. If the protective shield is cracked/damaged, or isn't functioning properly, then the protective shell should be replaced. This [troubleshooting page](#) will help diagnose any potential problems occurring due to a faulty protective shell. In the event that a new shell is needed, this guide will show the steps to properly install a new one. The only tools you will need are a 7/32 Allen key and T20 Torx screwdriver.

### TOOLS:

- [T20 Torx Screwdriver](#) (1)
- [Allen Wrench 7/32"](#) (1)
- [Phillips #2 Screwdriver](#) (1)

## Step 1 — Protective Shell



- Place the saw on a flat surface with the blade facing up.


**⚠** Make sure that the saw is unplugged from any power source.

## Step 2



- Remove the bumper by using the T20 Torx screwdriver to loosen the M5 x 20mm screw.

## Step 3

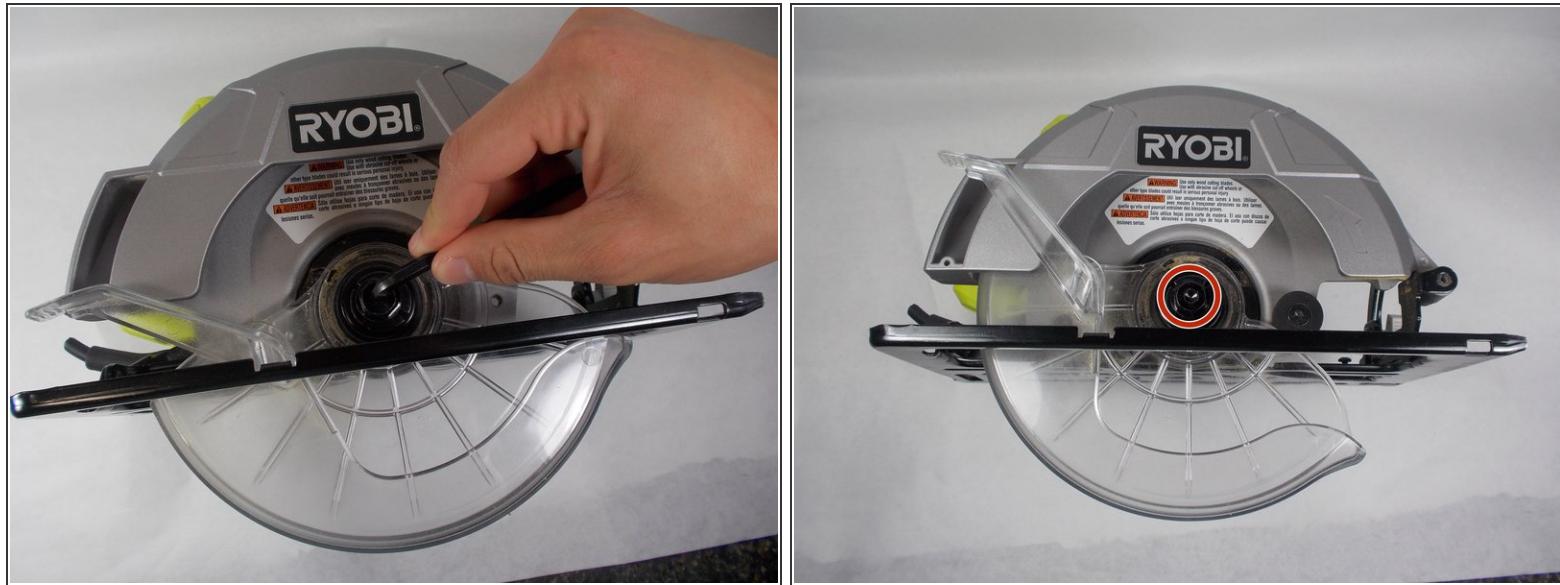


- Use the 7/32 allen key to loosen the 5/16-18 x 9/16 in. blade screw.

## Step 4



- Remove the 5/16-18 x 9/16 in. blade screw, spring washer, the outer blade washer, the blade, and the inner blade washer.

## Step 5

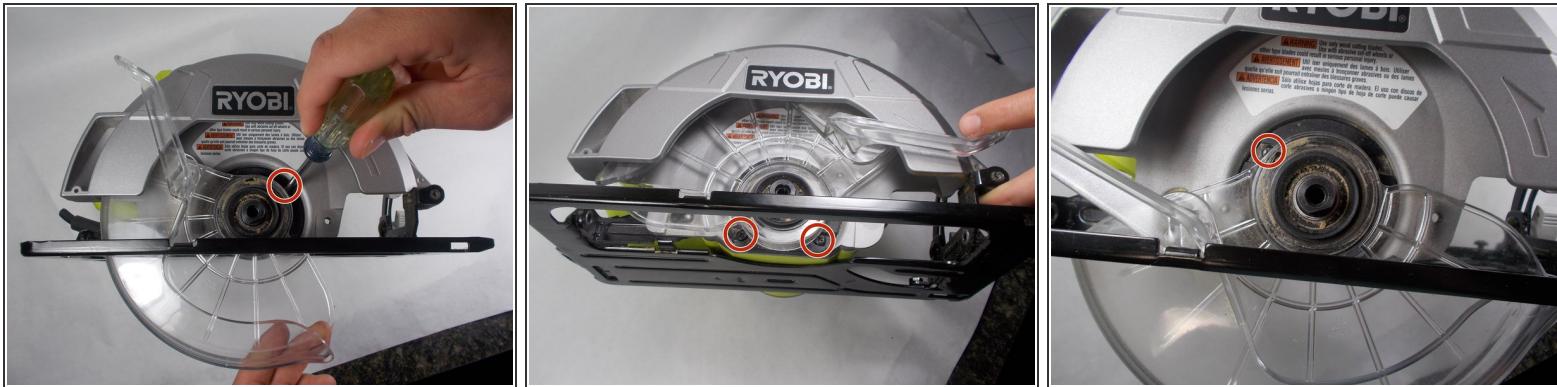

- Use the Phillips #2 screwdriver to remove the four M4x16mm screws shown.

*(i)* You will need to rotate the protective shell around in order to access them.

## Step 6



- Remove the lower blade guard support assembly from the rest of the saw.
- Remove the protective shell.

To reassemble your device, follow these instructions in reverse order.