



# Ryobi P271 Trigger Replacement

How to replace a Ryobi P271 trigger.

Written By: nathan krehbiel



 **TOOLS:**

- [Soldering Iron \(1\)](#)
- [Essential Electronics Toolkit \(1\)](#)

## Step 1 — Battery




- Detach the battery unit from the drill body by pressing the battery release buttons on both sides of the unit and pulling outwards.

## Step 2 — Trigger




- Remove the screws from the drill's casing to gain access to the interior.

## Step 3

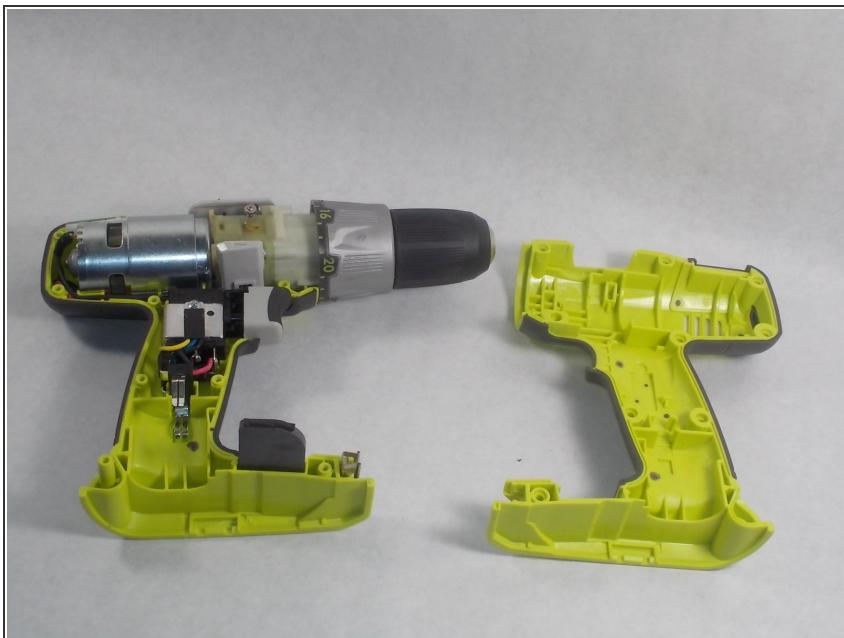


- Lift and remove the casing off of the drill body.

## Step 4

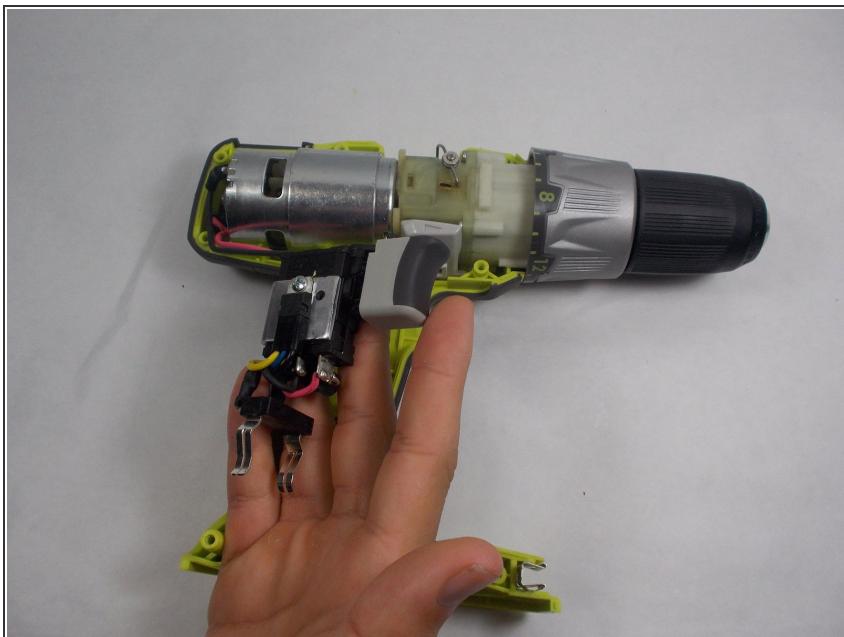

- Carefully lift and remove the battery clip, trigger, motor, and everything connected to the wires and pull straight out of the drill.

## Step 5

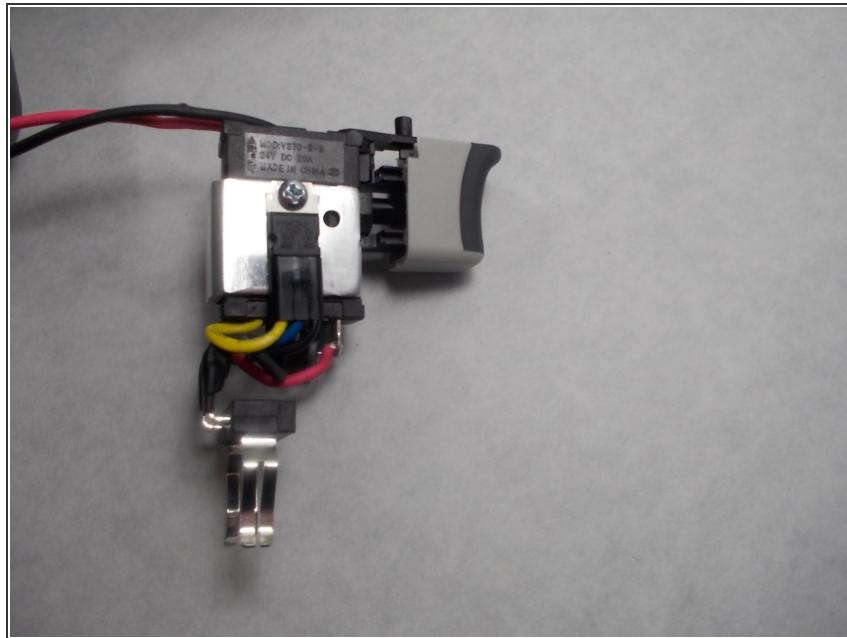

- Separate the wiring from the trigger and the motor using a soldering iron to remove the wiring.

***i*** Follow [this guide](#) for soldering tips.

To reassemble your device, follow these instructions in reverse order.