




SAMSUNG ATIV Book 9 Plus NP930X5J-S01US

Screen Replacement

This guide will cover how to remove the screen of a Samsung ATIV Book 9 Plus.

Written By: Sean Kim

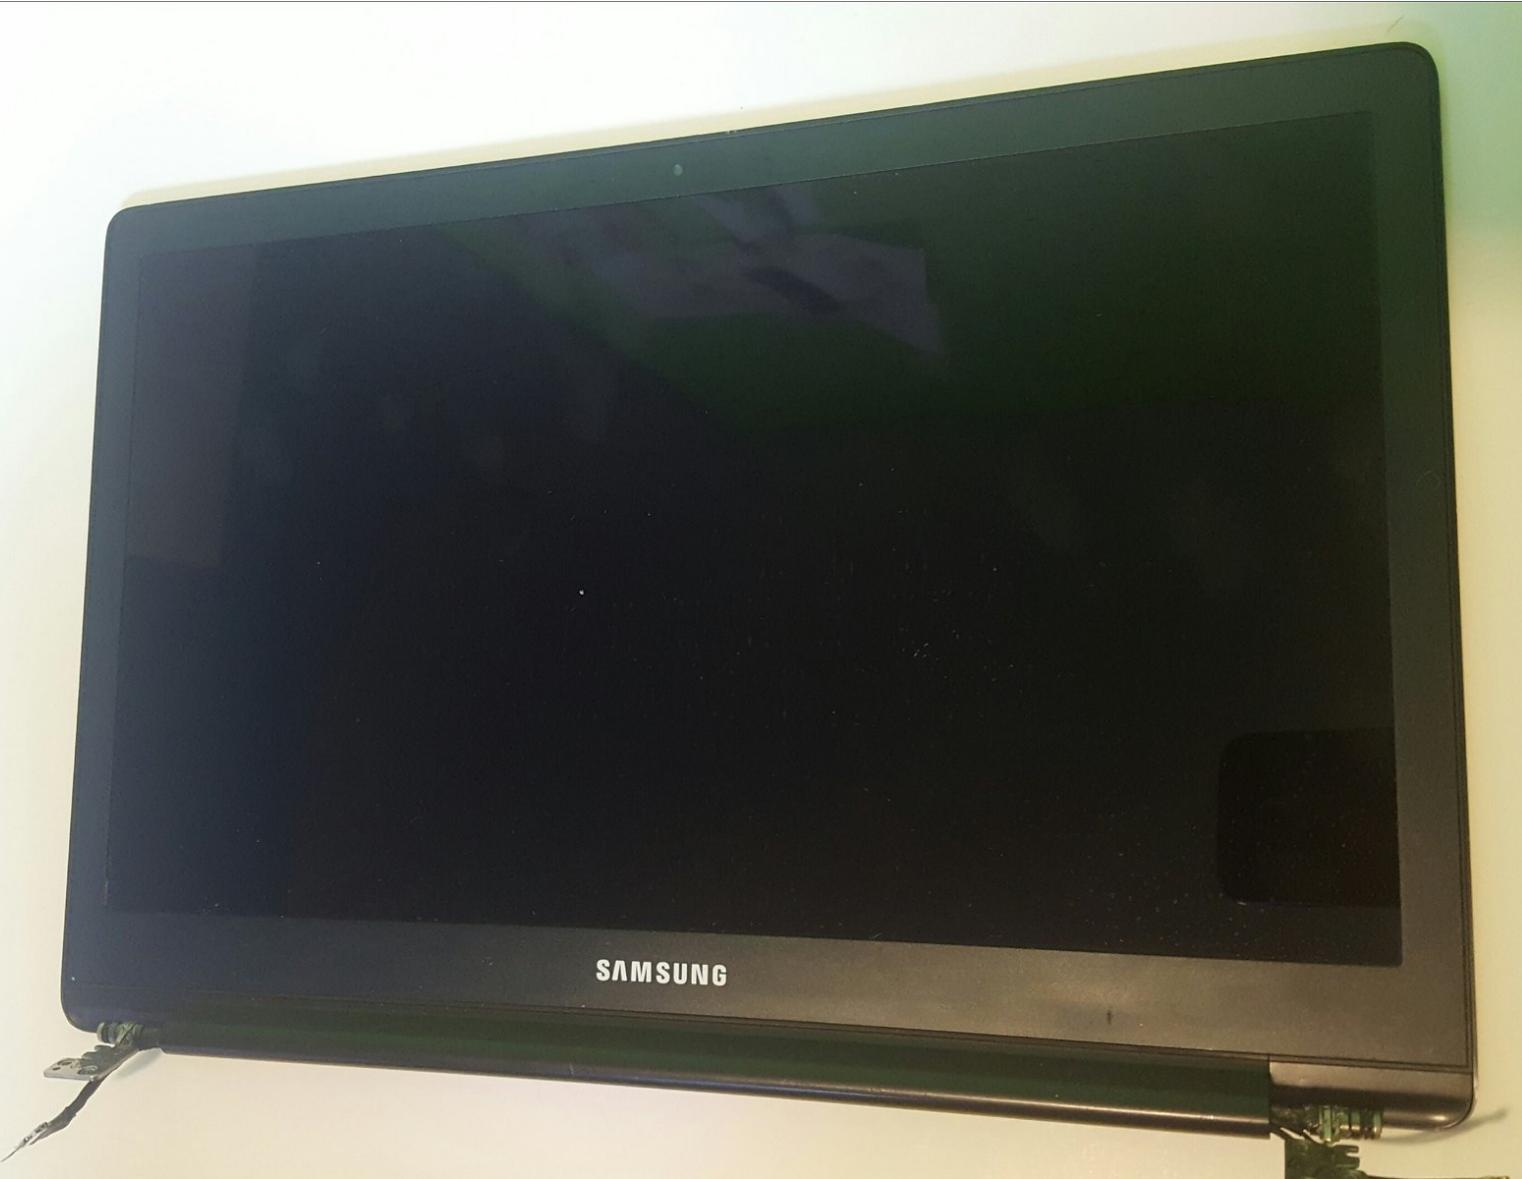

INTRODUCTION

This guide will cover how to remove the screen of a Samsung ATIV Book 9 Plus.

TOOLS:




- Metal Spudger (1)
- Phillips #00 Screwdriver (1)

Step 1 — Battery





- Remove the ten 4.3mm Phillips #00 screws from the bottom cover of the laptop.

Step 2

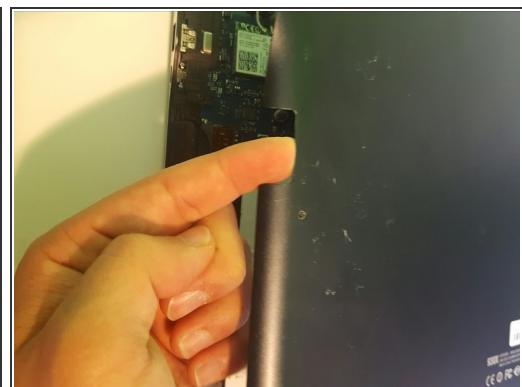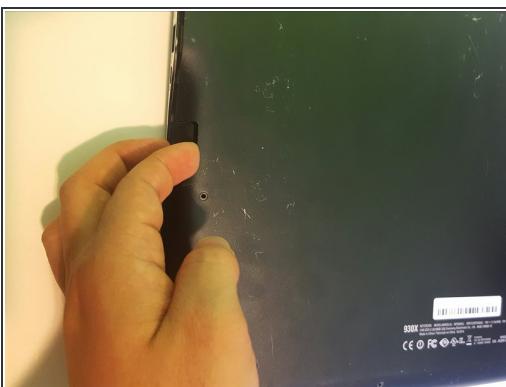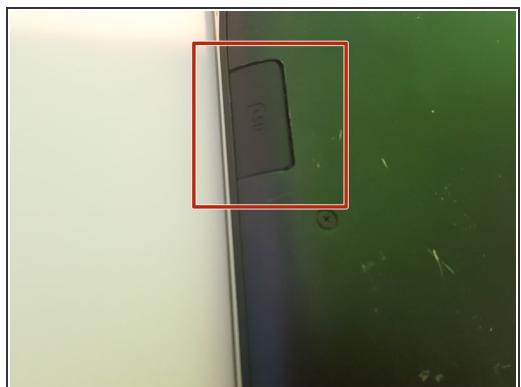



- Press the button to release the bottom cover.

Step 3

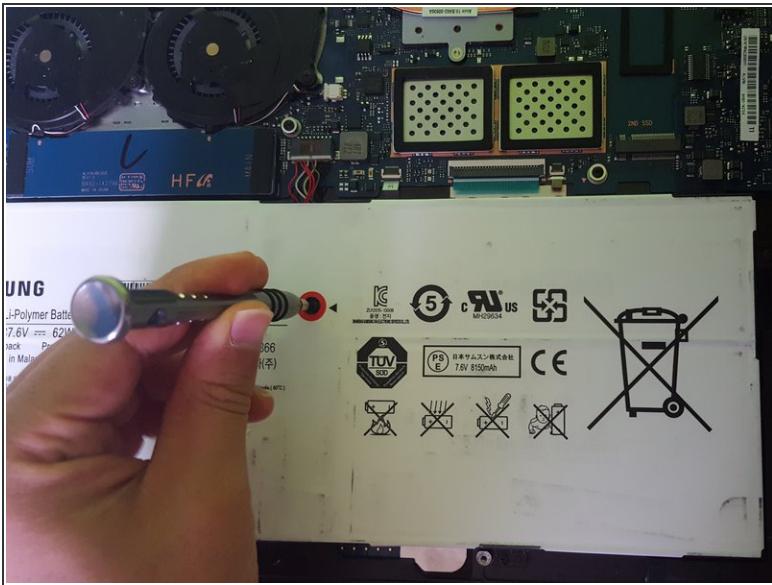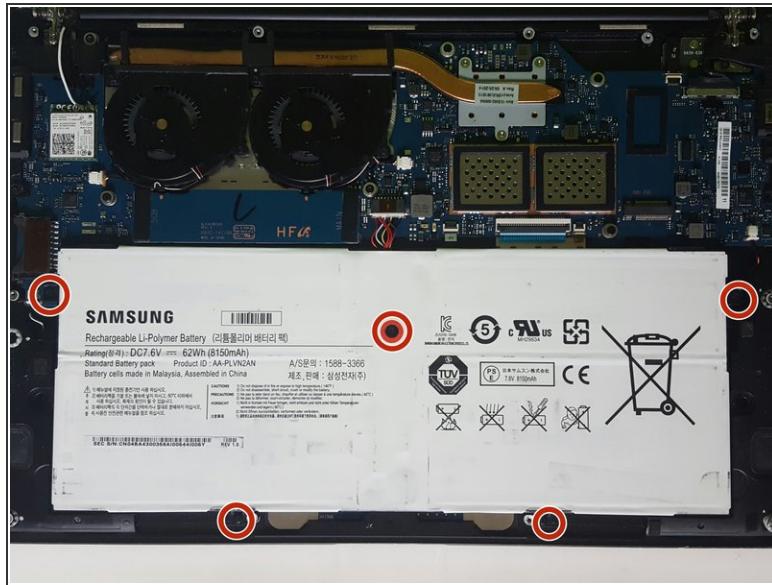


- Remove the five 4.3mm Phillips #00 screws from the battery.

Step 4

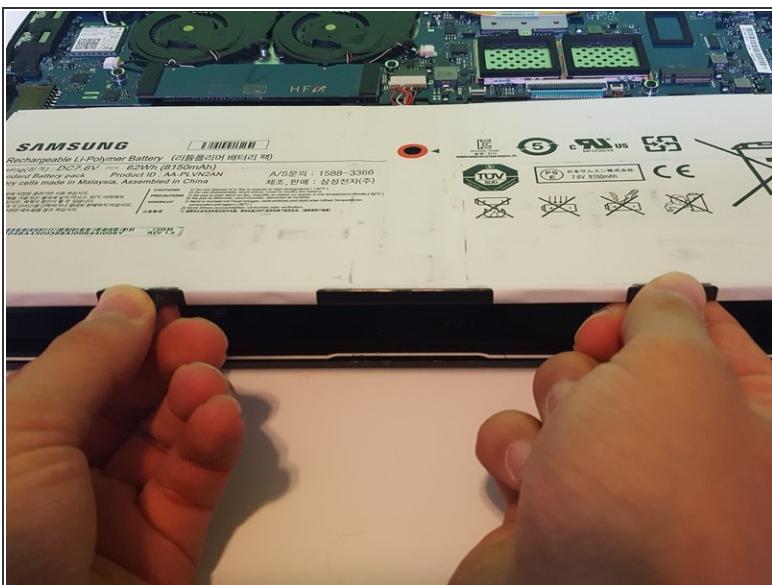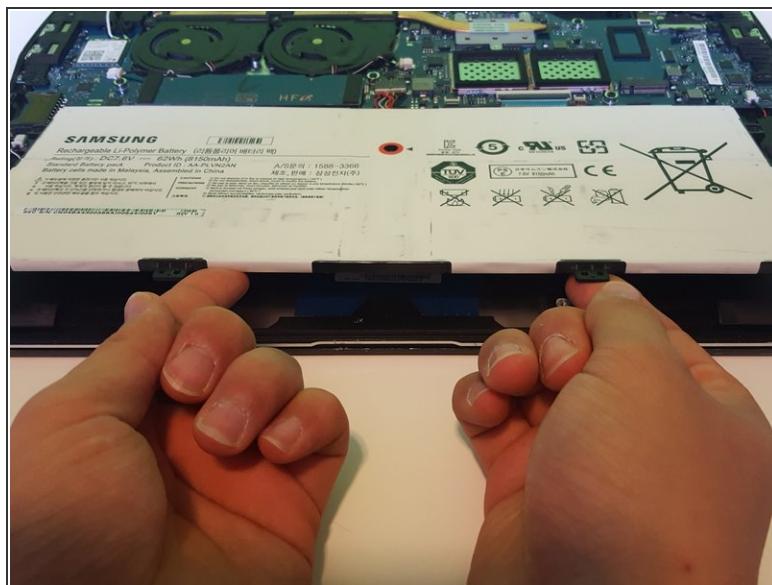


- Lift the battery with both hands and remove.

Step 5 — Screen

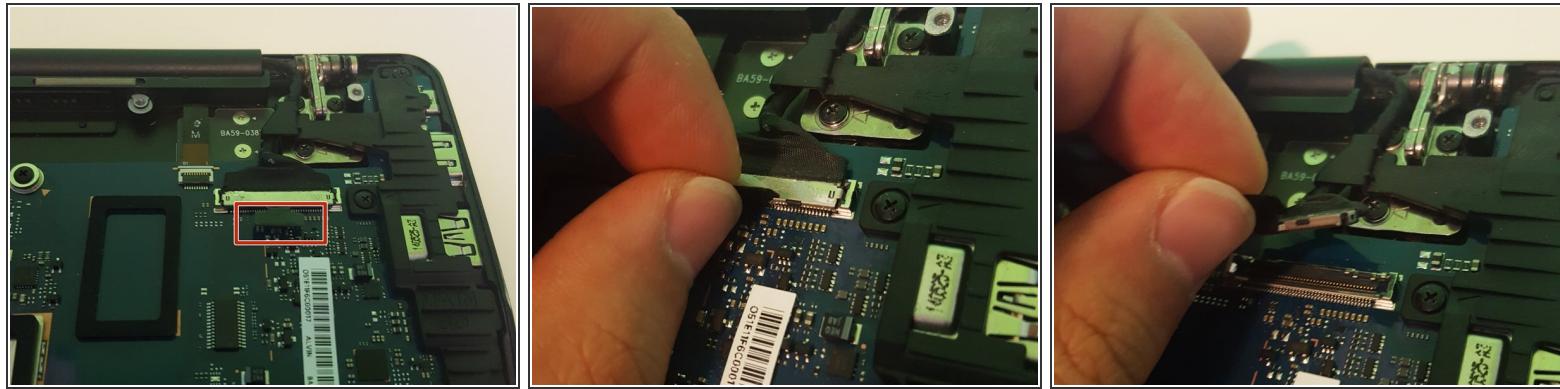



- Disconnect the display cable from the motherboard.

Step 6

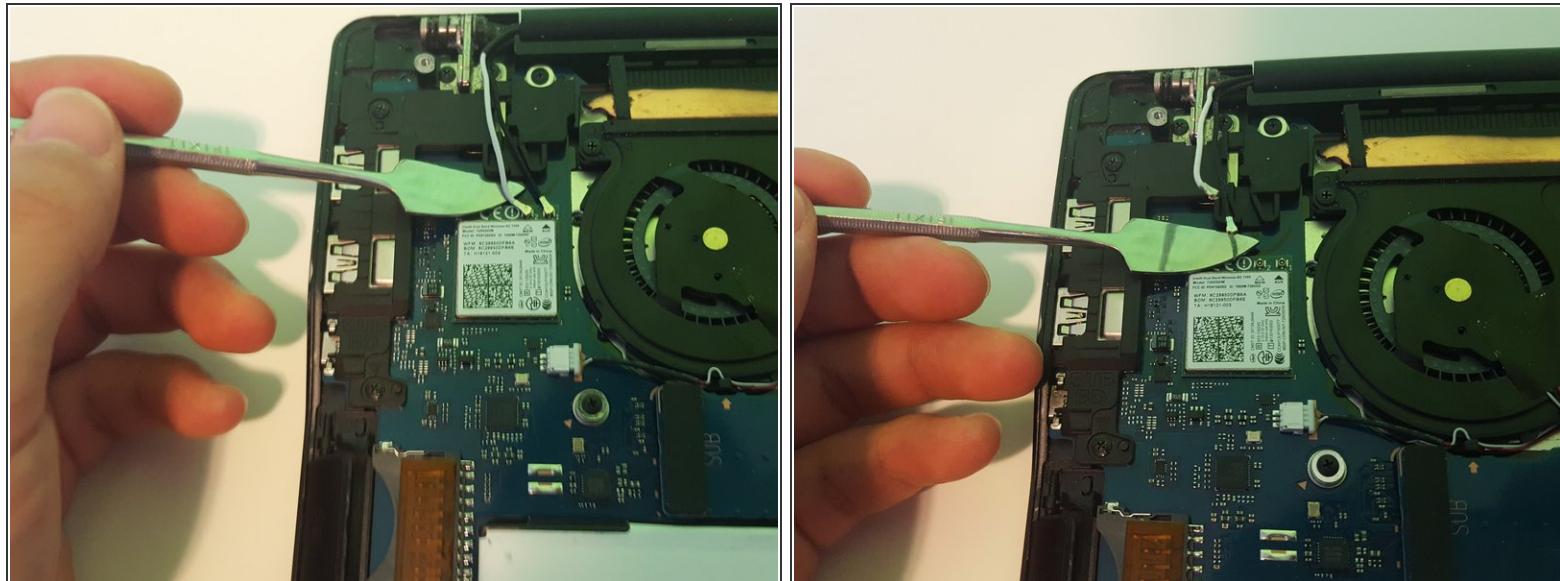


- Disconnect the black and white antenna cables from the Wi-Fi card.

Step 7

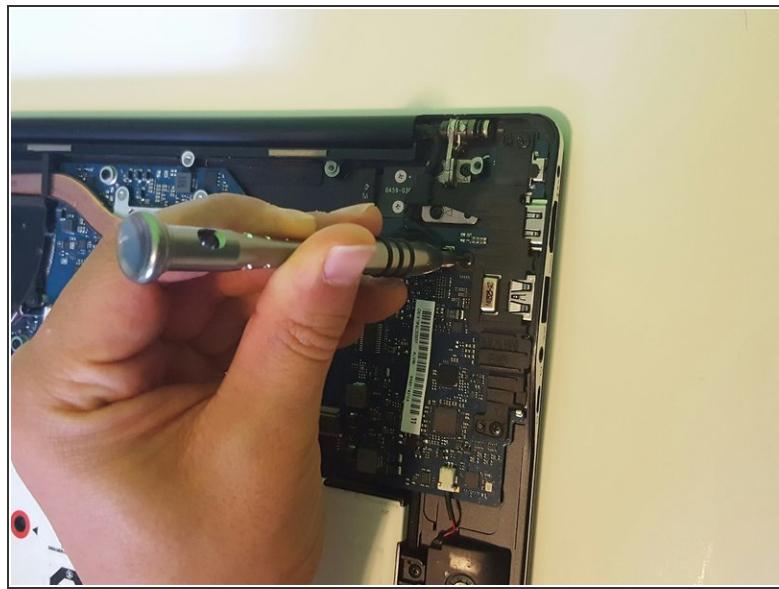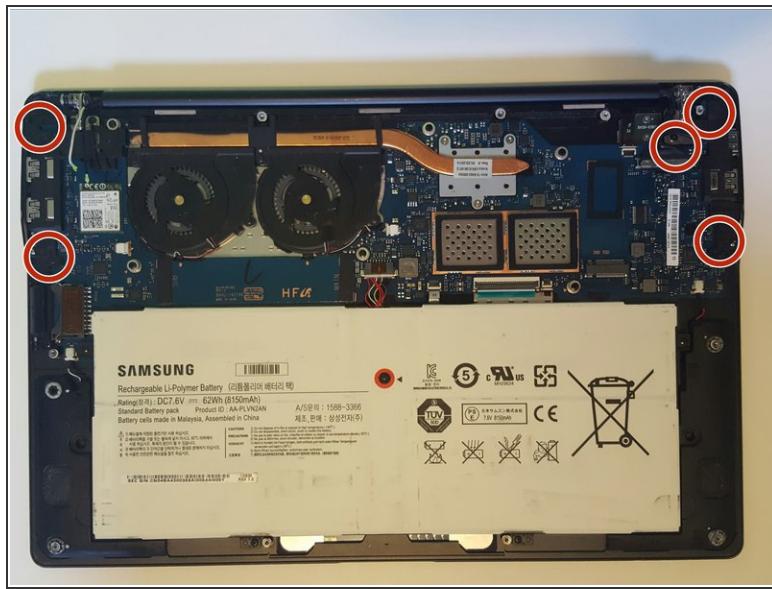


- Remove the five 4mm Phillips #00 screws from the motherboard retaining brackets.

Step 8

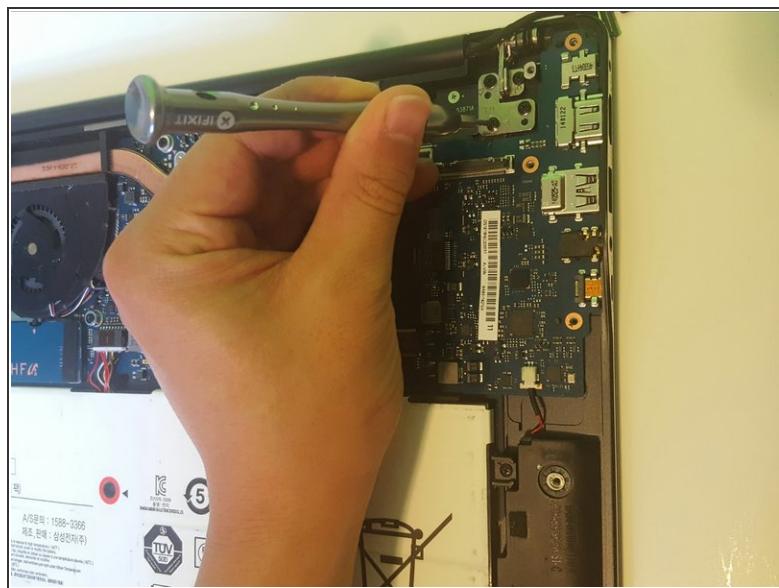

- Remove the eight silver 4.2mm Phillips #00 screws from the corner.

Step 9

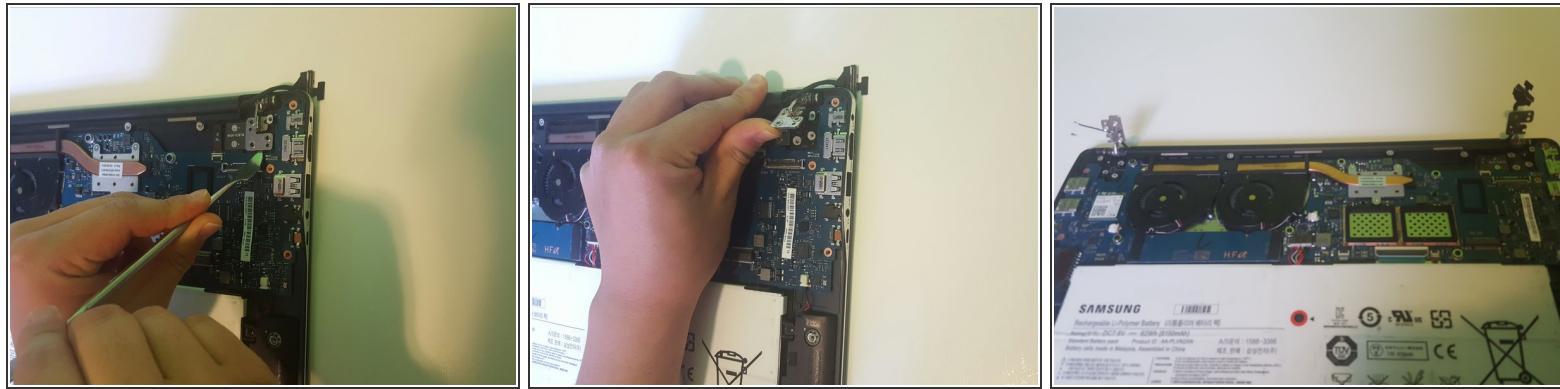

- Pry up the metal hinges from the laptop.

Step 10



- Place the screen on its back side and hold the battery-side of the laptop. In an upward motion, remove the back set off and set it aside.

To reassemble your device, follow these instructions in reverse order.