


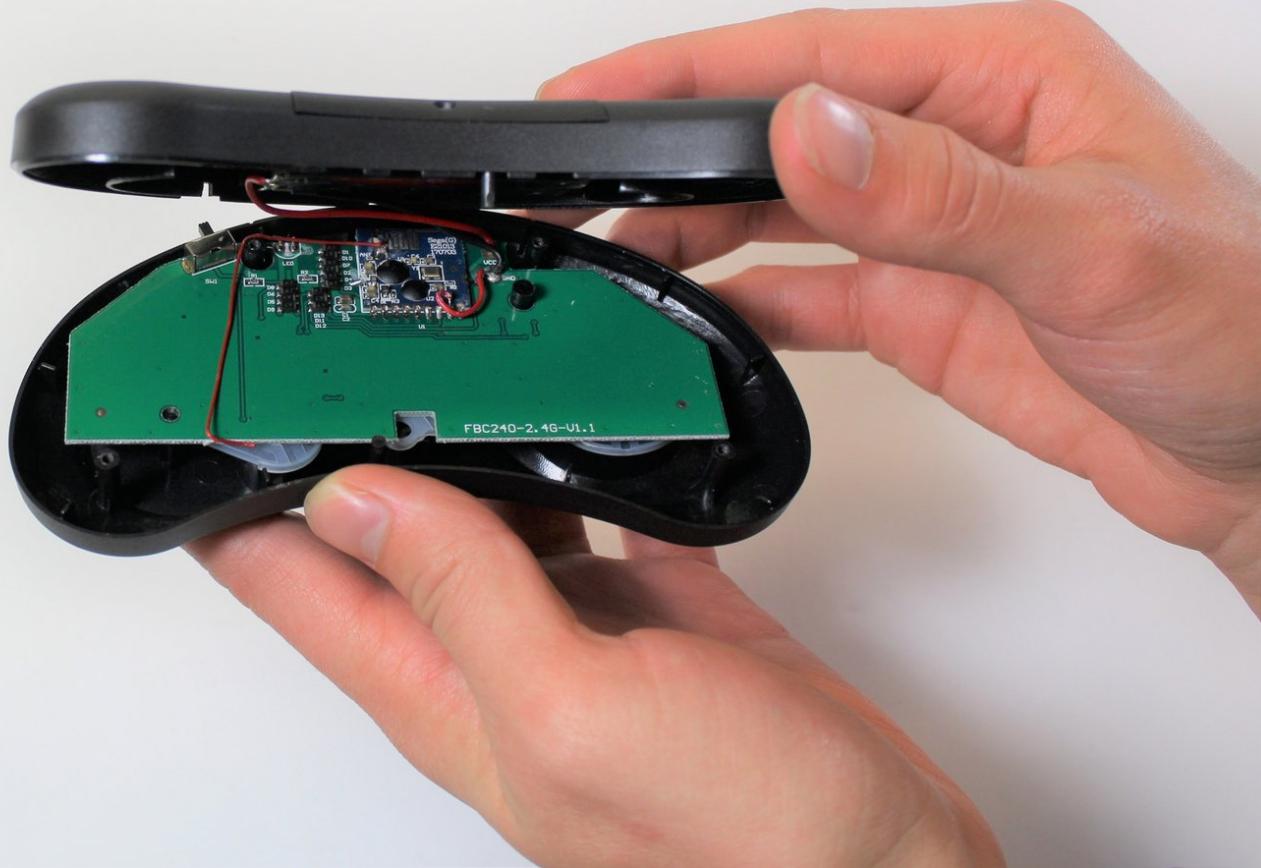

SEGA Genesis Flashback Controller Back Cover Replacement

This guide will teach you how to disassemble the SEGA Genesis Flashback controller.

Written By: Omar Shorab




INTRODUCTION

This guide will help you replace the back cover of your controller. You'll only need a Phillips #000 screwdriver to complete this guide.

TOOLS:

- [54 Bit Driver Kit \(1\)](#)
- [Magnetic Project Mat \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Controller Back Cover

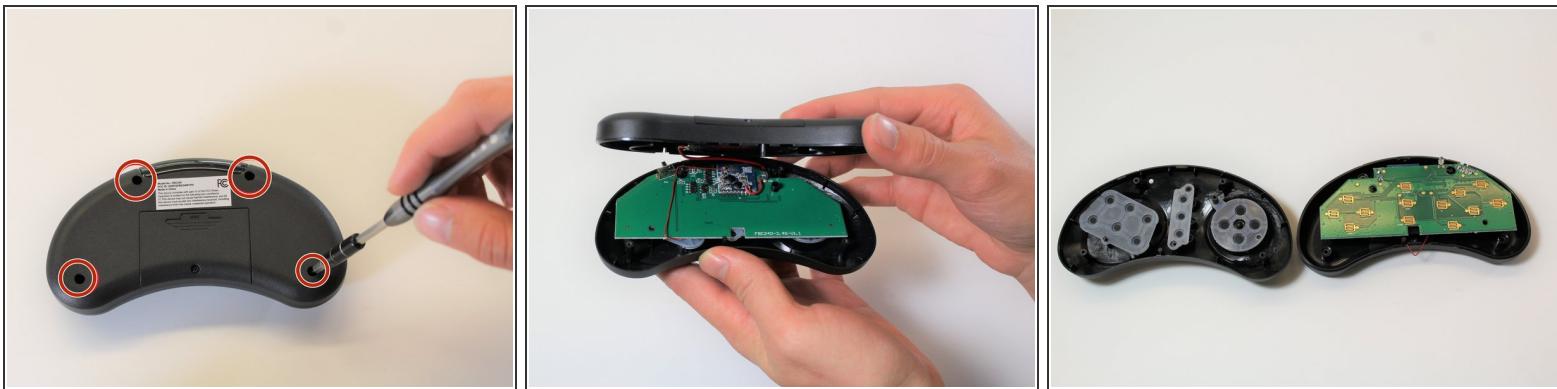

- Remove the screws on the back of the controller with the Phillips #000 screwdriver.
- Hold the controller with the bottom plate facing up, gently remove the top plate that is connected to the motherboard of the controller. Set the top plate aside.

⚠ Be sure to separate the two plates with the bottom facing up, to keep the buttons from falling out.

ⓘ Place screws on magnetic project mat to avoid losing any screws.

To reassemble your device, follow these instructions in reverse order.