




# Samsung ATIV Book 7 NP740U3E-K01UB

## Speaker Replacement

This would aid in the replacement of the speakers of your Samsung ATIV Book 7 NP740U3E-K01UB.

Written By: Alexander Nwonye

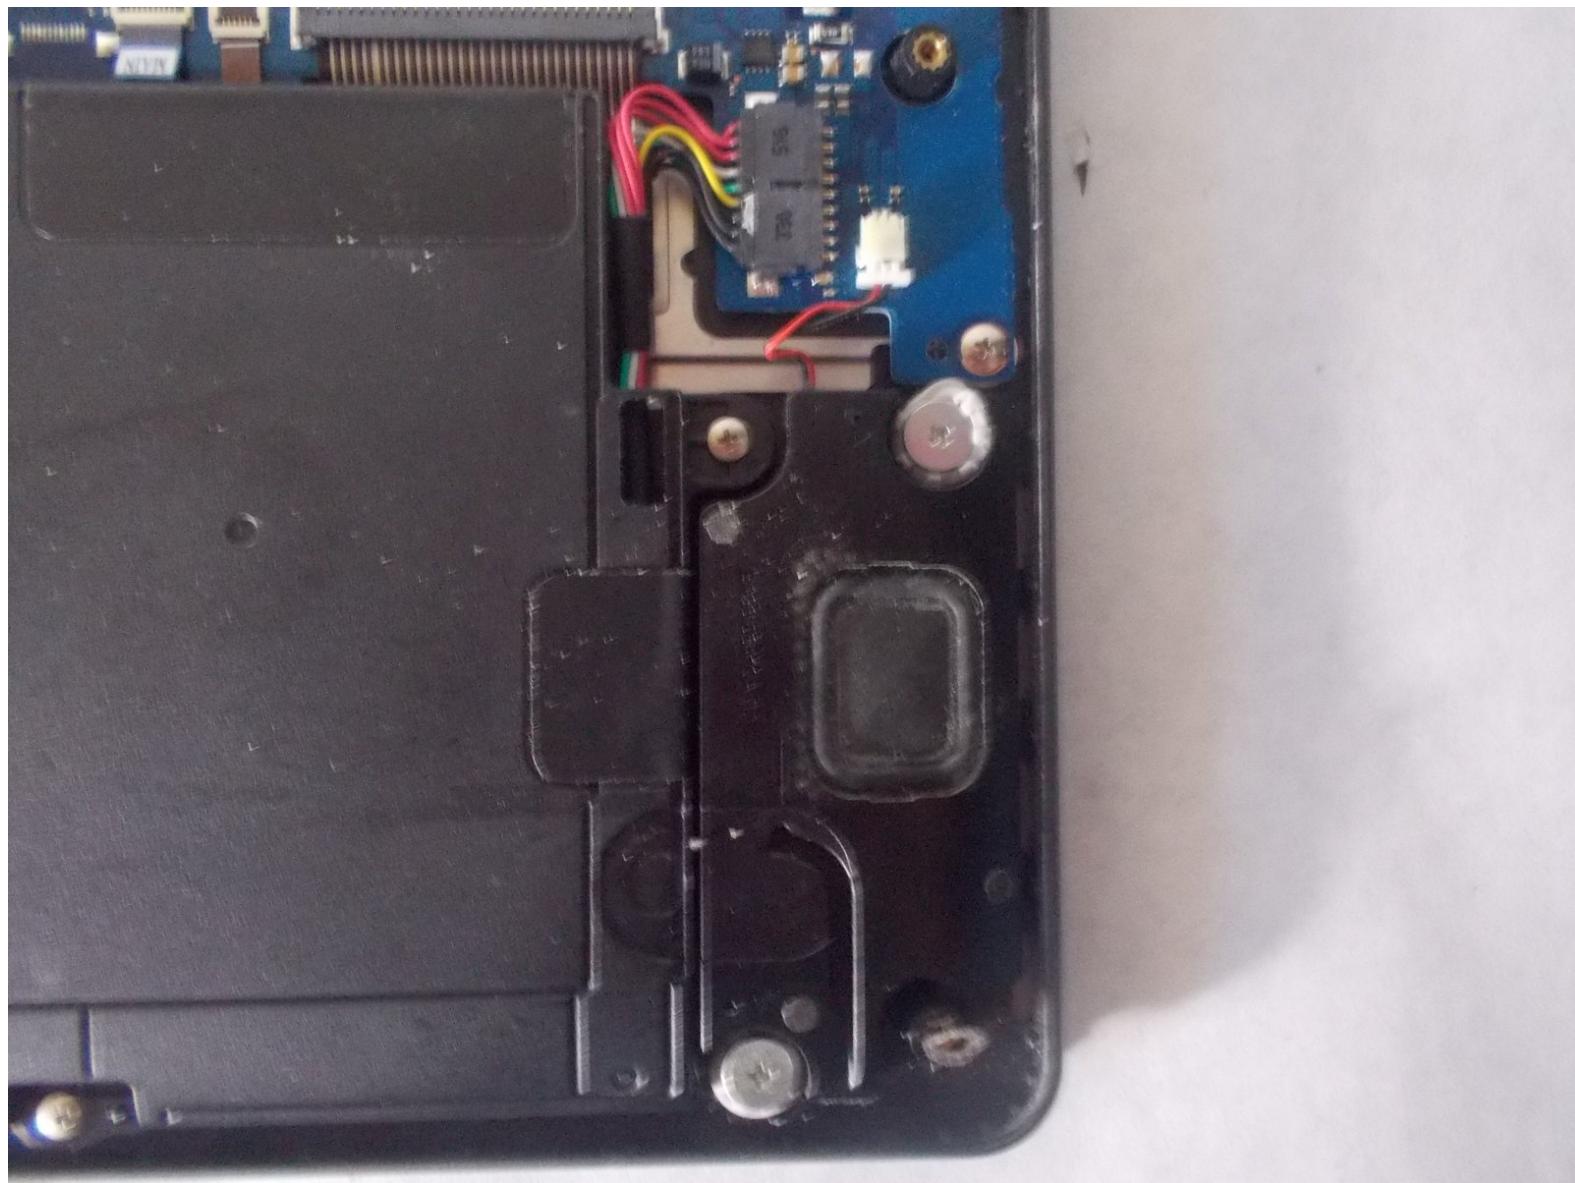

This document was generated on 2020-01-22 02:37:39 AM (MST).


## INTRODUCTION

This replacement guide will aid the replacement of the speakers showing you a thorough breakdown on what steps to follow to achieve this task efficiently.

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Backplate

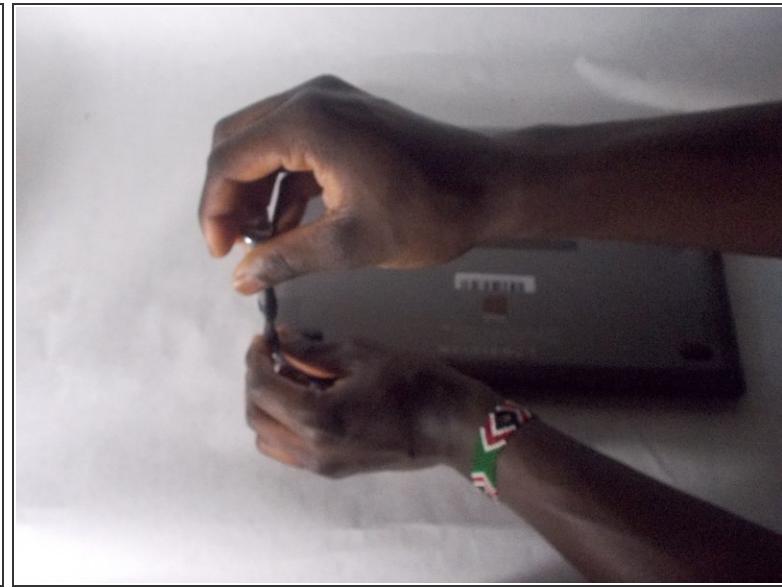


- Remove the ten 5 mm screws that hold the backplate using the Phillips #000 screwdriver.

## Step 2

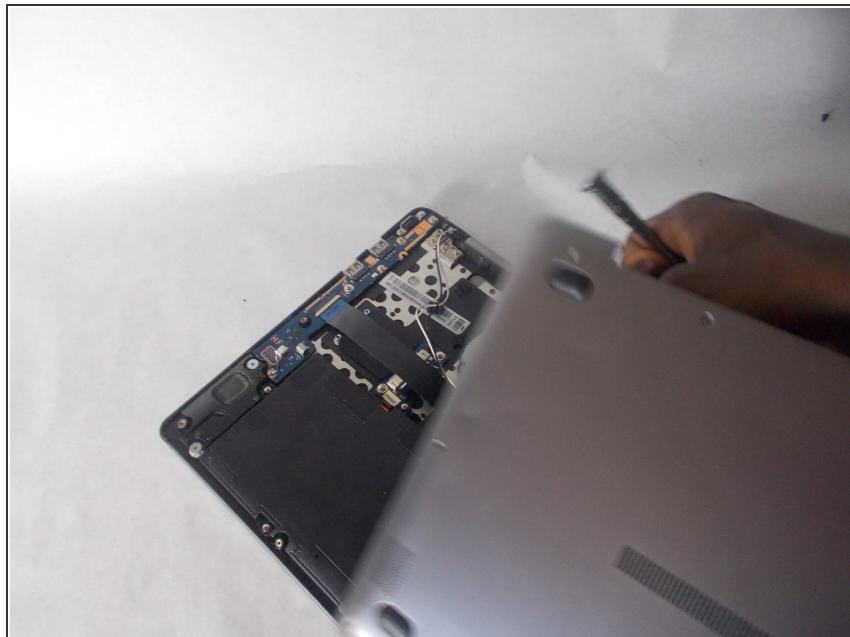


- Remove the backplate.

## Step 3 — Battery

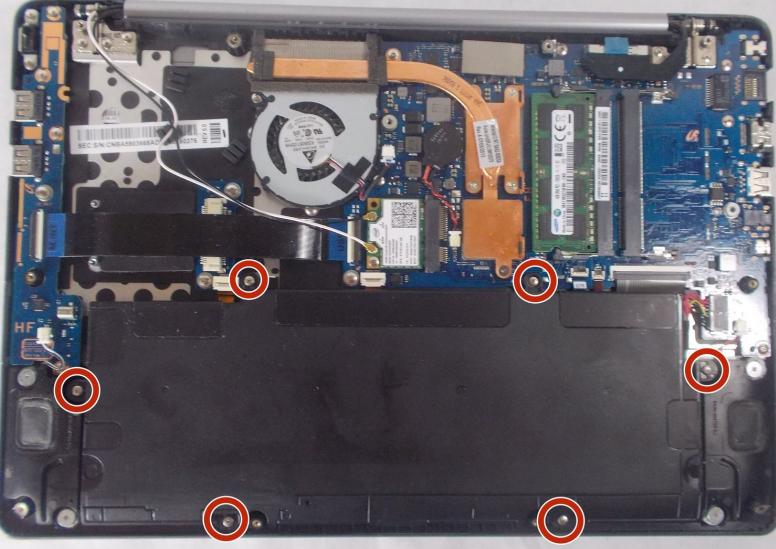


- Remove the six 5mm screws that hold the battery by using the Phillips #0 screwdriver.

## Step 4

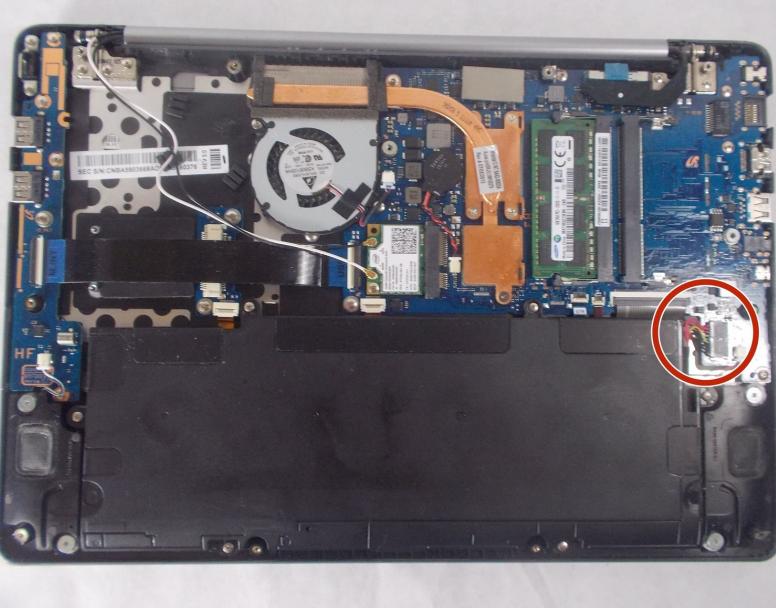


- Disconnect the battery from the motherboard and remove the battery.

## Step 5 — Speaker

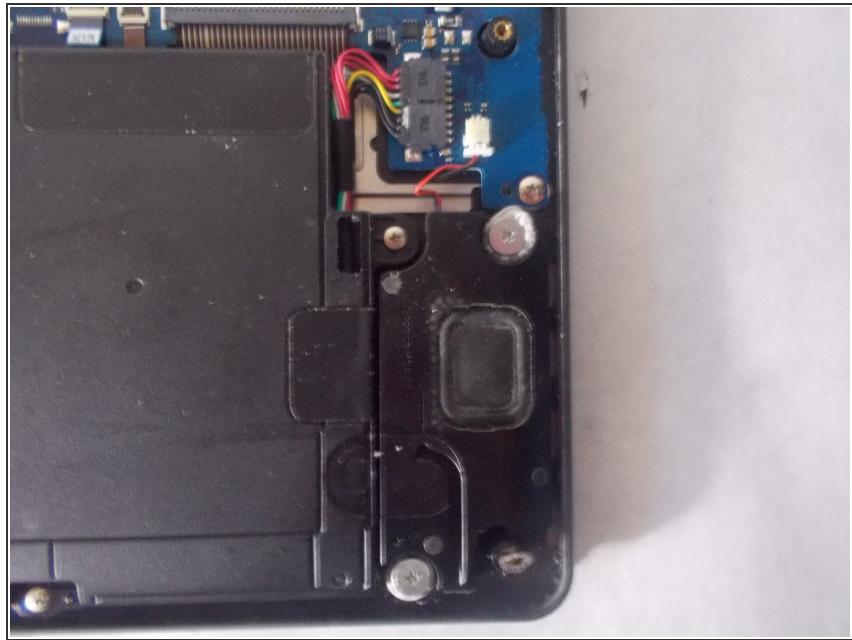


- There are two speakers which are found on the lower left and right side of the laptop, beside the battery.

## Step 6

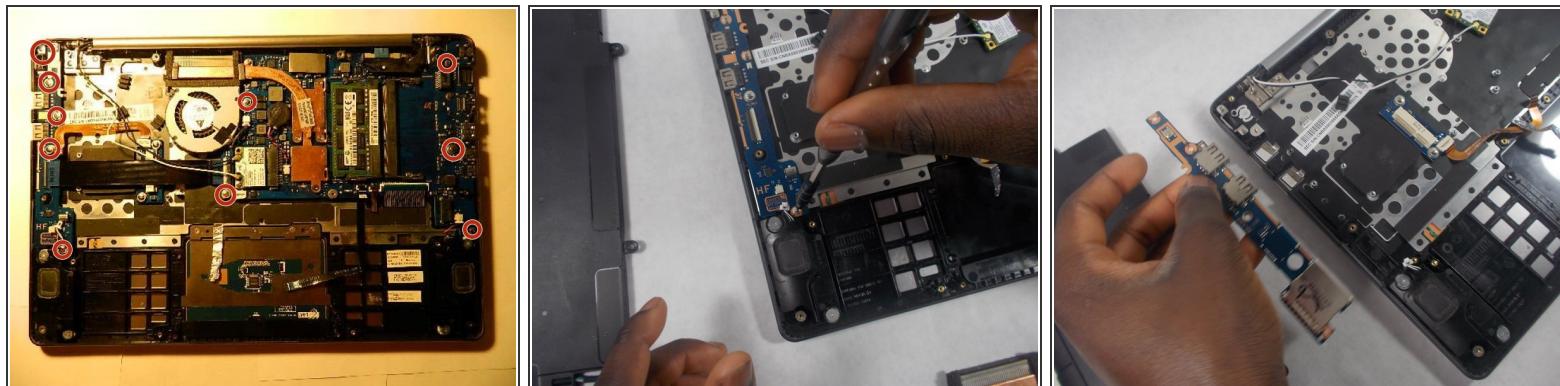

- Remove the screws of the motherboard to disconnect the motherboard from the speakers using a Phillips #0 screwdriver.

## Step 7

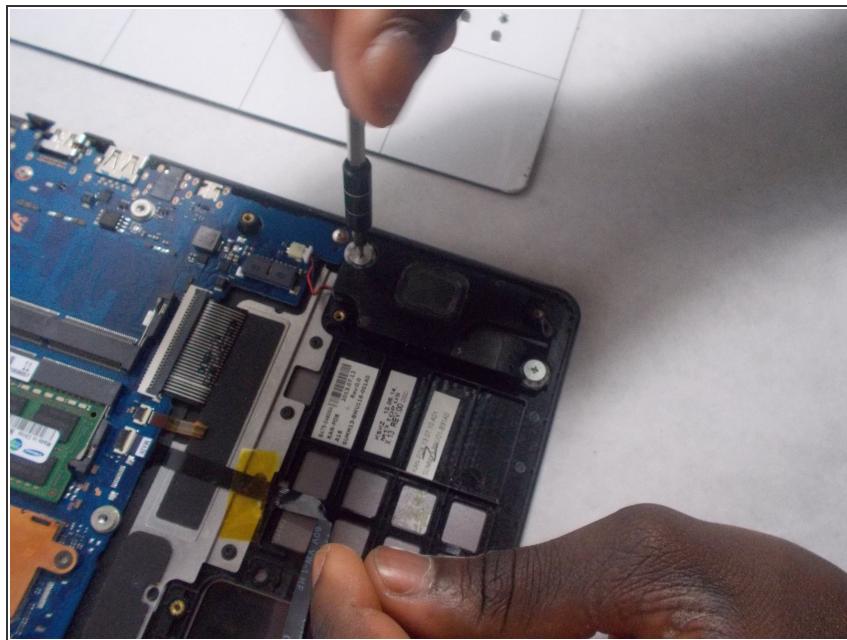

- Remove the 4 mm screw with the Phillips #000 screwdriver and remove the speaker.

To reassemble your device, follow these instructions in reverse order.