



Samsung ATIV Book 7 NP740U3E-K01UB USB Ports Replacement

This guide will show you how to replace the USB and other ports on the right hand side of your Samsung ATIV Book 7 NP740U3E-K01UB.

Written By: Jonathan Robidoux



This document was generated on 2020-01-30 05:19:38 PM (MST).

INTRODUCTION

This guide will show you how to replace the board containing the USB ports and the SD card reader on your laptop.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Backplate




- Remove the ten 5 mm screws that hold the backplate using the Phillips #000 screwdriver.

Step 2

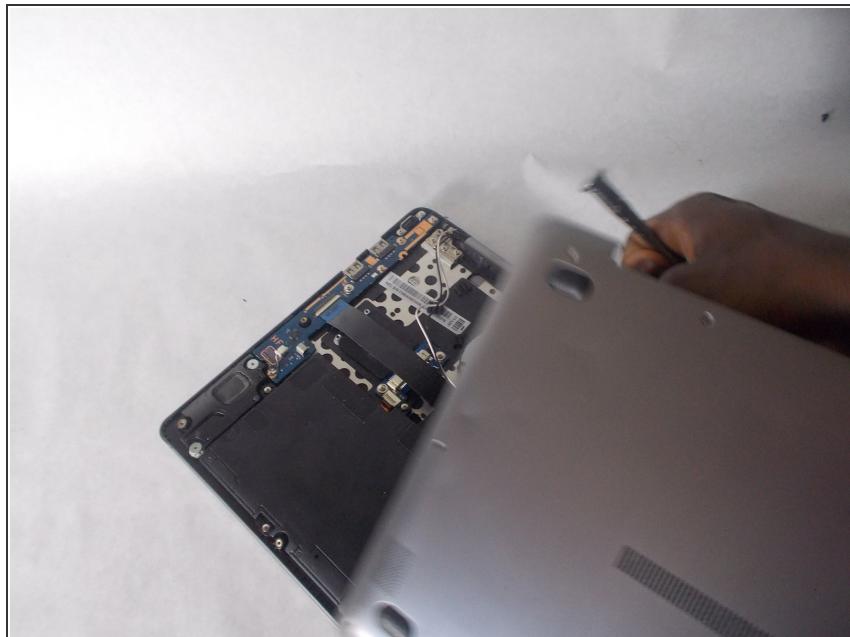


- Remove the backplate.

Step 3 — Battery

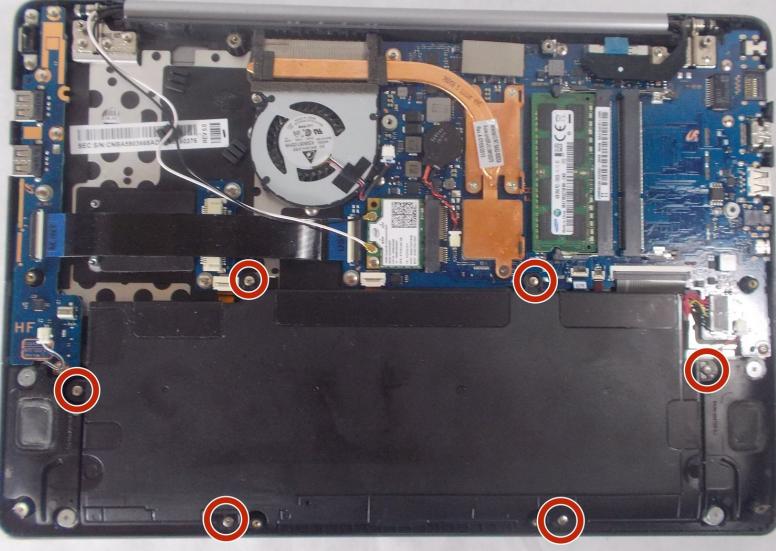



- Remove the six 5mm screws that hold the battery by using the Phillips #0 screwdriver.

Step 4

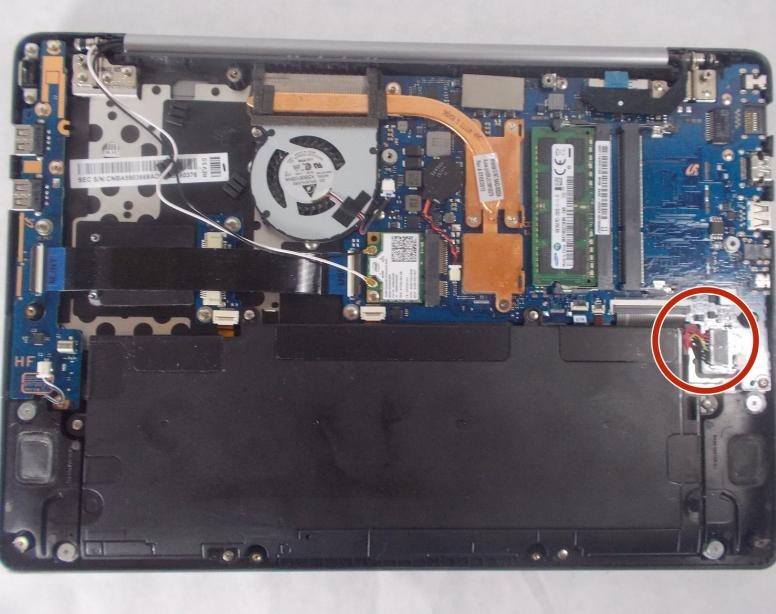



- Disconnect the battery from the motherboard and remove the battery.

Step 5 — USB Ports

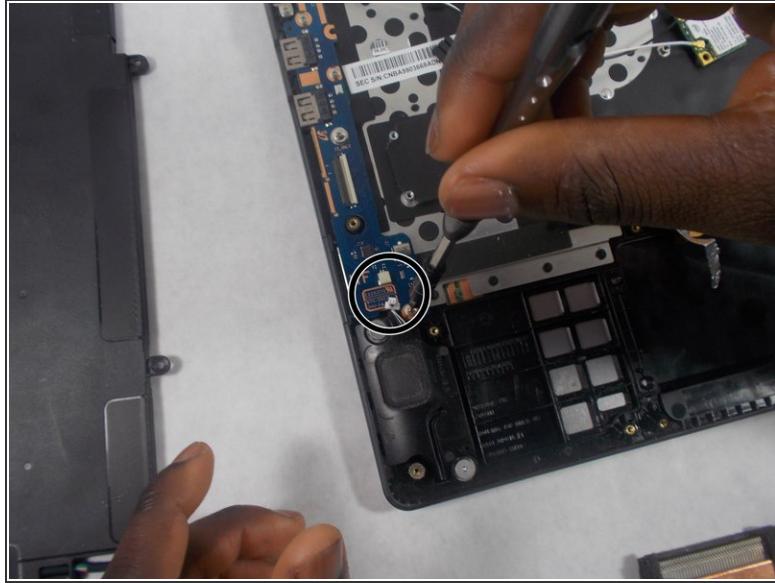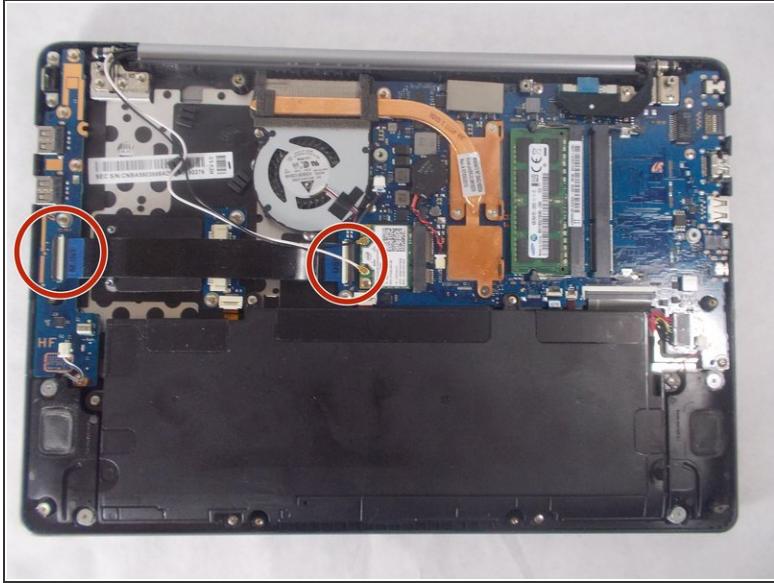

- Disconnect the ribbon connecting the motherboard with the USB ports .
- Disconnect the speaker from the board

Step 6

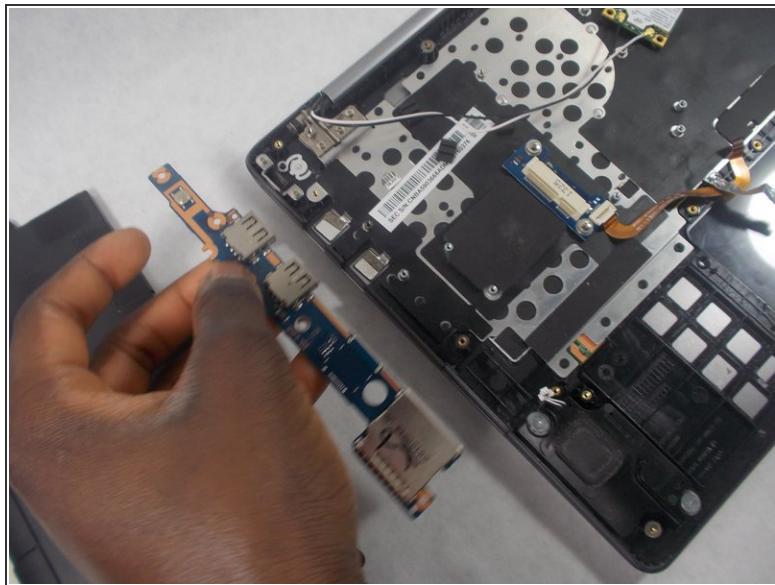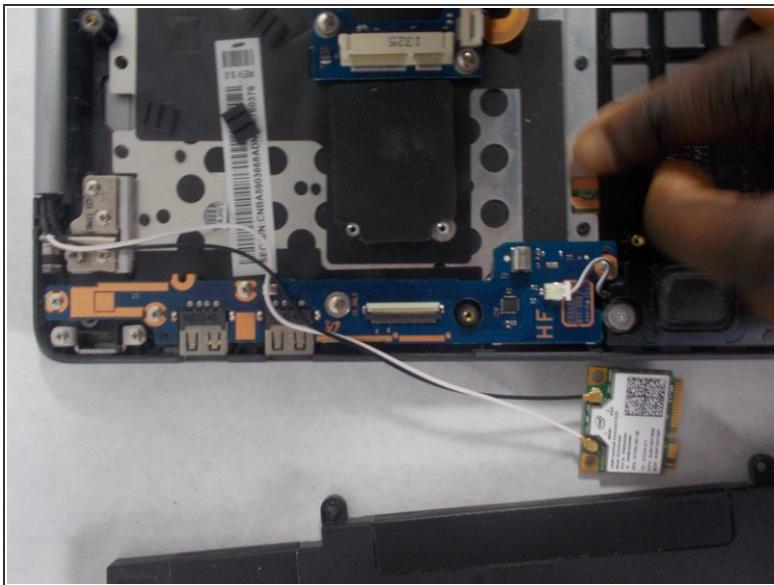

- Unscrew the 5mm screws with the Phillips #0 screw driver.
- Lift the board out of the laptop.

To reassemble your device, follow these instructions in reverse order.