



# Samsung ATIV Book 9 NP900X3K-S01US

## Bottom Case Replacement

Replacing bottom case of your Samsung ATIV Book 9 NP900X3K-S01US by using a #00 Phillips screwdriver

Written By: Daniella Aloni



This document was generated on 2019-09-19 04:18:09 AM (MST).

---

## INTRODUCTION

Is the bottom case of your Samsung ATIV Book 9 NP900X3K-S01US damaged? This guide is here to help you remove and replace it.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-


## Step 1 — Bottom Case



**⚠** Make sure that the Samsung ATIV Book 9 is powered off and not connected to any power outlets.

- Close the device and rest it on a flat surface.
- Flip the device over to access the ten 4.3 mm screws located on the bottom case.
- Remove all ten screws using the Phillips #00 screwdriver.

## Step 2

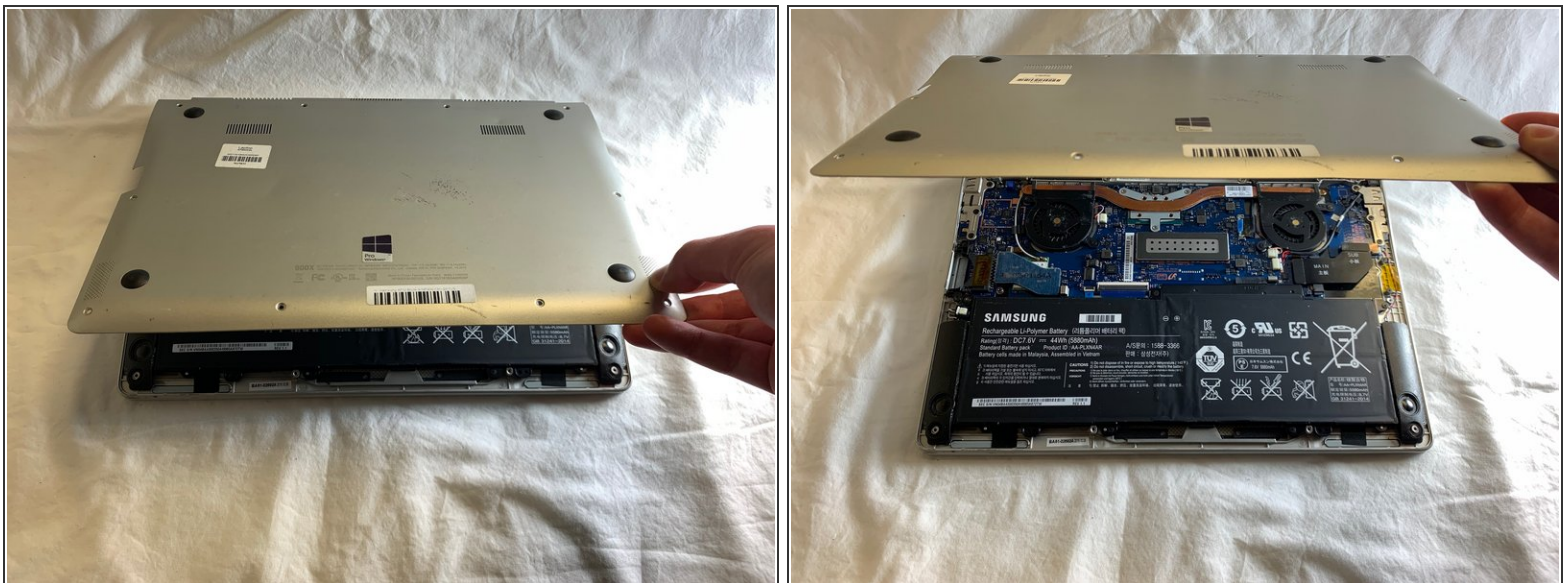

- Gently lift and remove the bottom case.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-19 04:18:09 AM (MST).

