



# Samsung Blackjack Keypad Replacement

Replace the keypad on your Samsung Blackjack.

Written By: Kristin Manna



---

# INTRODUCTION

Use this guide to replace the keypad.



## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery Cover



- Hold the device with the screen facing away from you and the camera towards you.
- Place your thumb on the bottom half of the phone and slide the cover off while gently pushing down on the cover.

## Step 2 — Battery

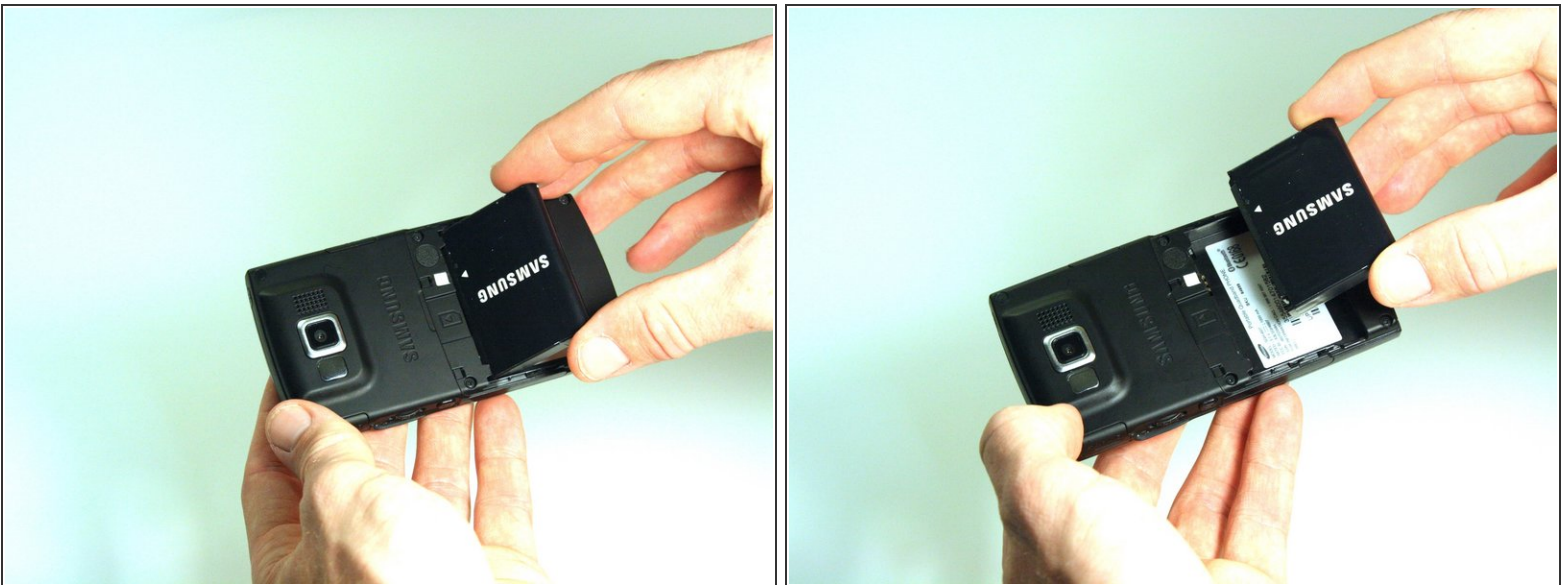

- Place your fingers on both sides of the bottom of the battery and lift upwards.
- Pull the battery away from the phone.




### Step 3 — Back Phone Casing



- Use the spudger to remove the rubber stoppers from the top of the cover.
- Use the Phillips 00 screw driver to remove the screws from each of the four corners and the two on sides (six total).

## Step 4

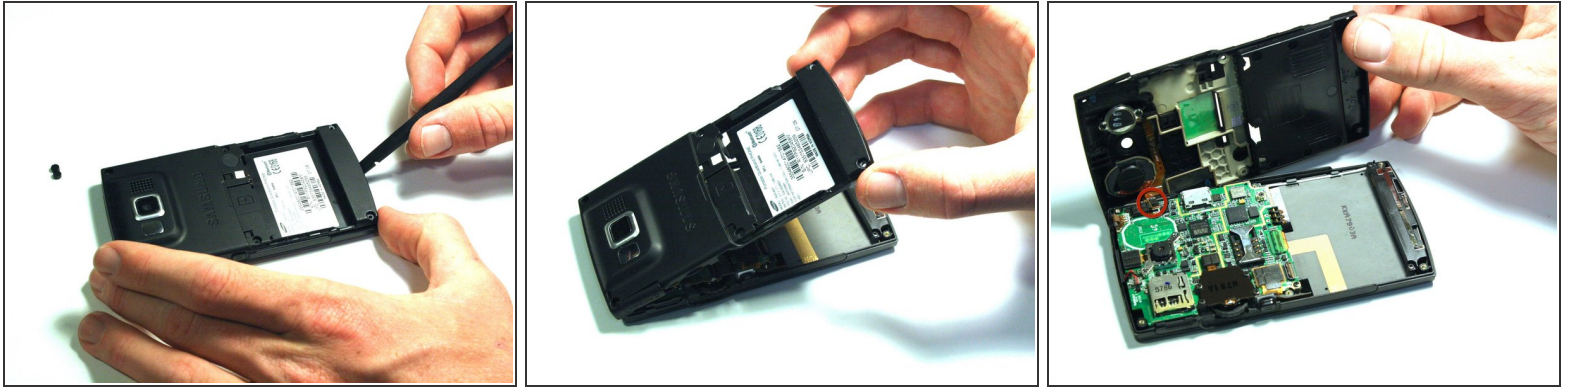


- Use the spudger to loosen and separate the front and back covers.
- Pick up the back cover once loosened.

**⚠ The front and back covers will be attached to each other by a gold wire.**

- Remove the gold wire connecting the back cover to the motherboard to completely separate the covers.



## Step 5 — Motherboard

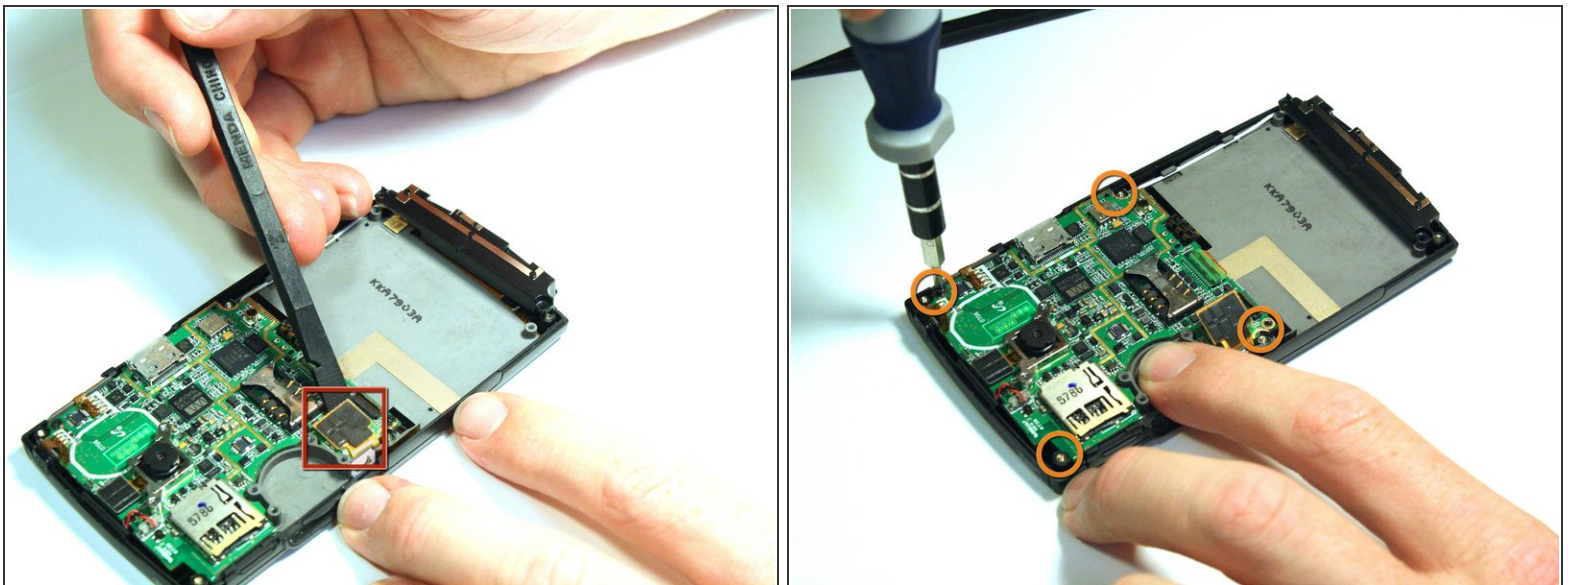

- Use the spudger to unsnap the black rectangular connection from the motherboard.
- Use the Phillips 00 screwdriver to remove all of the screws that hold the motherboard in place.




## Step 6

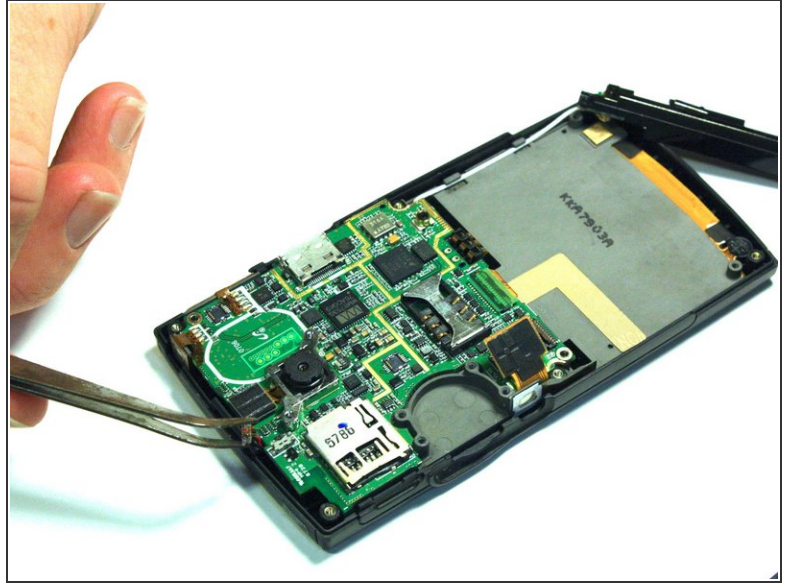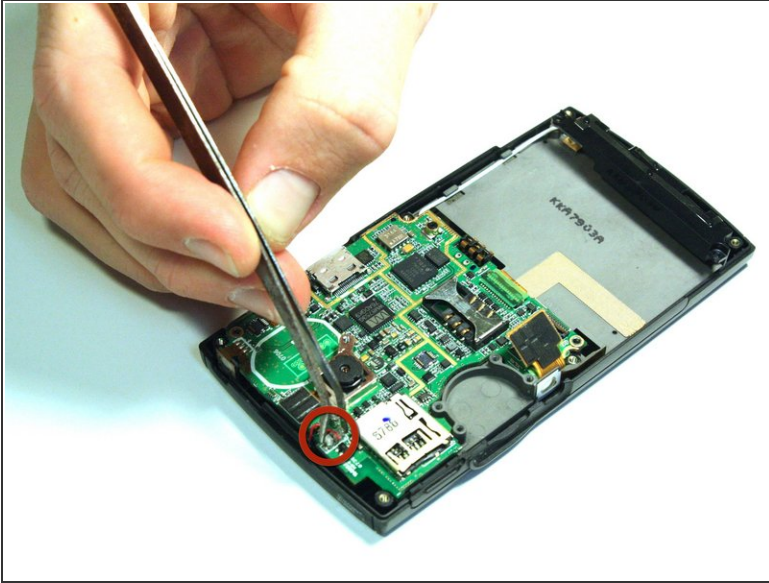

- Use the tweezers to unsnap the connection between the motherboard and the speaker. The speaker is attached to the front casing.

## Step 7

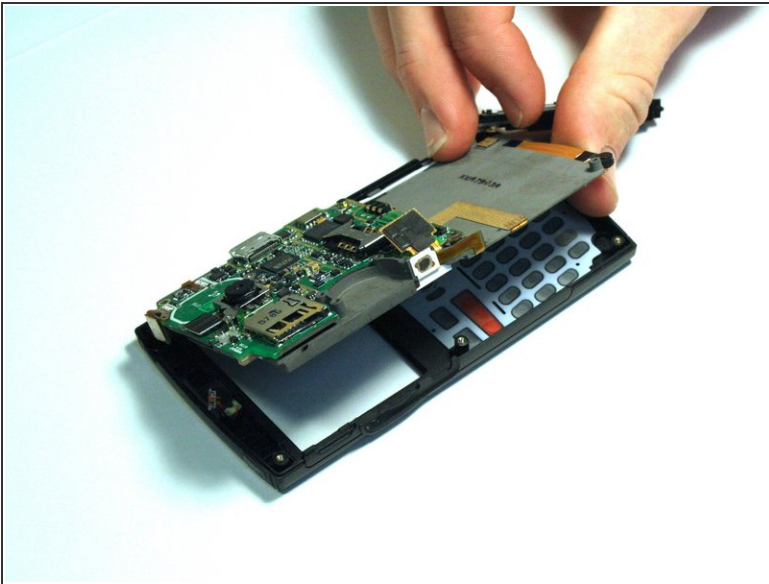

- ① Once all of the connections have been snapped off of the motherboard, the motherboard can be removed.
- Lift up on the motherboard and it will come free of the front casing.

## Step 8 — Keypad



- Hold the front cover with the keypad facing you.
- Push down on the keypad to remove it from the case. The keypad will come right out because there is nothing connecting it to the front casing.

To reassemble your device, follow these instructions in reverse order.