



# Samsung Chromebook 2 Screen Replacement

If your screen is no longer functioning to its full capacity, follow this guide to replace it.

Written By: MacKenzie Colson



## INTRODUCTION

You may need to perform this replacement if your Chromebook 2 has a faulty screen, resulting in display issues. Ensure your device is powered off before beginning this replacement.

**In order to reduce shock hazard during this replacement, the steps to remove the battery are included as a prerequisite.**

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

### PARTS:

- [Samsung Chromebook XE500C12 LCD](#) (1)

## Step 1 — Battery



- Make sure your Chromebook is turned off before you begin.
- Set the laptop face down on a flat surface.

## Step 2



- Remove the nine 5 mm screws on the bottom cover using a Phillips #0 screwdriver.

## Step 3




- Loosen the back cover panel with a plastic opening tool, and work it all the way around the computer.

## Step 4




- Once the cover is loose, remove the back cover panel using your hands.

## Step 5

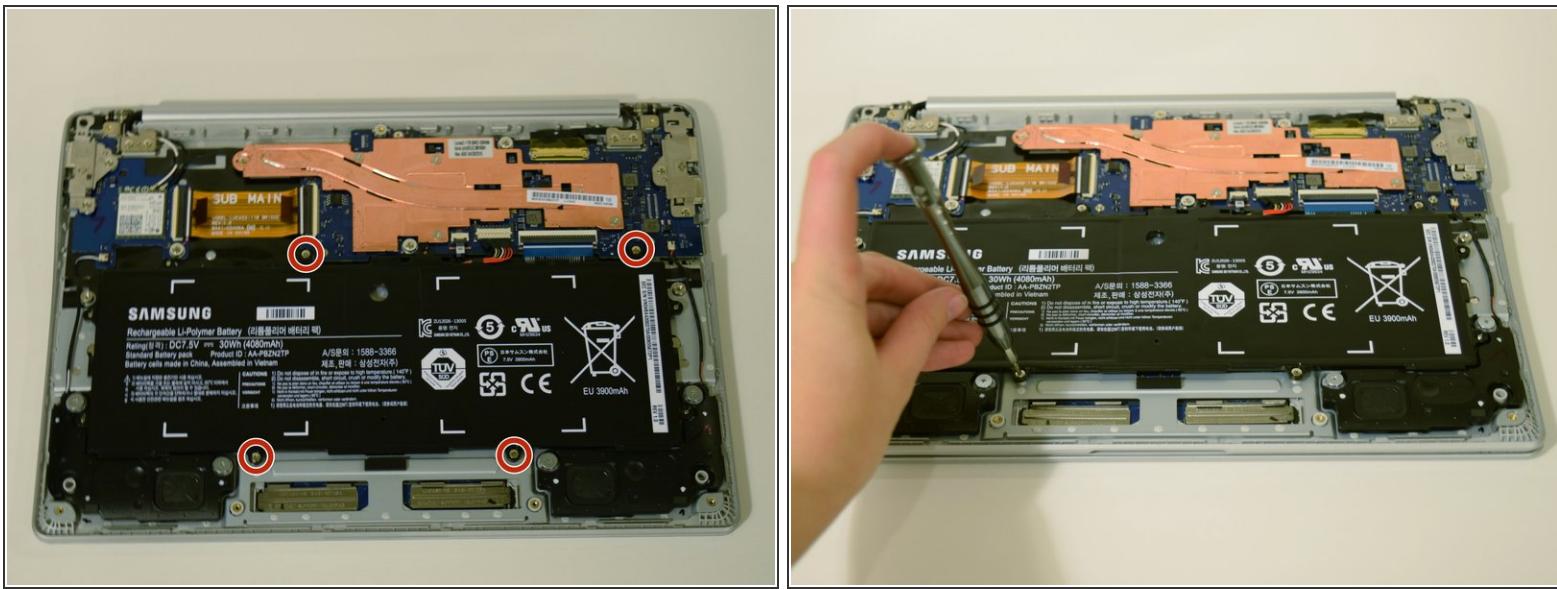


- Unscrew the four 4 mm screws holding the battery in place with a Phillips #0 screwdriver.

## Step 6

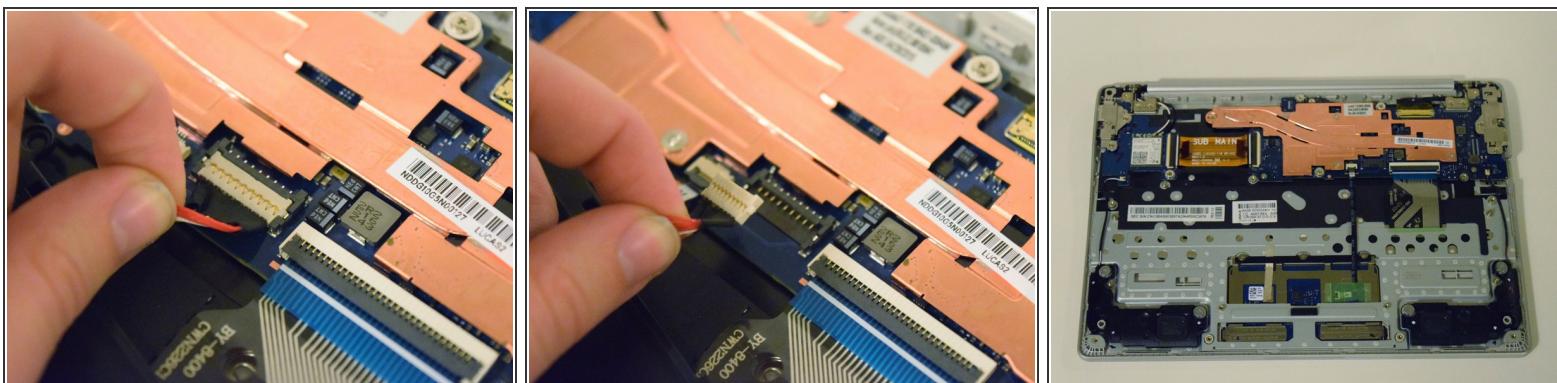


- Disconnect the wire that connects the battery to the motherboard by pulling upward.

## Step 7 — Screen

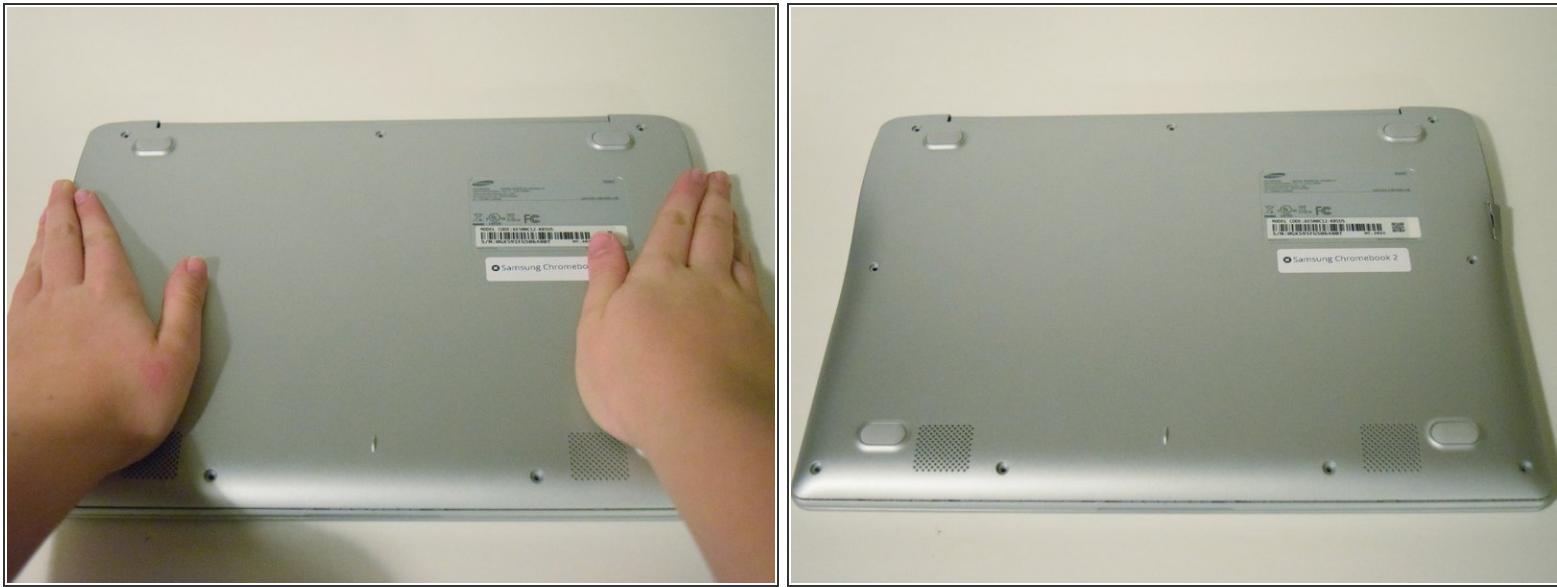

- Replace the back cover by clicking it into place with your hands.
- ⓘ No need to replace the screws, this is just to protect the internal hardware while working on the screen.

## Step 8

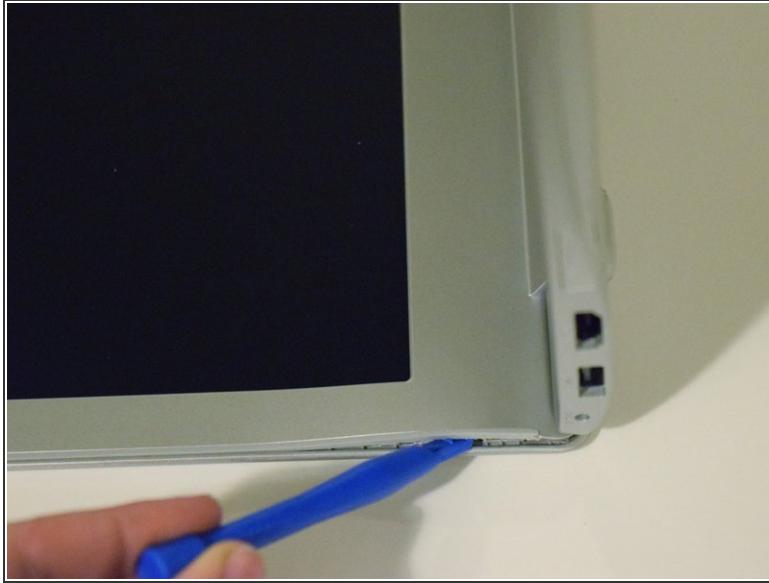

- Open the laptop and place it so that the back of the screen is laying on a flat surface.
- Insert a plastic opening tool between the front cover and plastic screen trim.
- Work the plastic opening tool all around the trim.

***(i)*** Don't be afraid to use your hands to pull the trim from the front panel.

## Step 9





- Flip the computer over so that the keys and screen are facing down.
- Insert the spudger between the back and front panel, at the hinge, and push the trim out.

## Step 10





- Place the laptop in a position where it is resting on the back of the screen.
- Remove the trim from the front panel by pulling up with your hands.

## Step 11

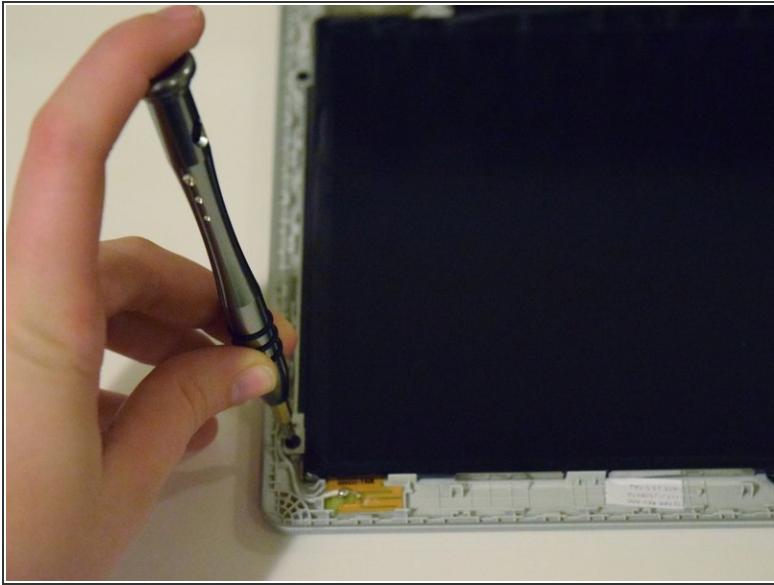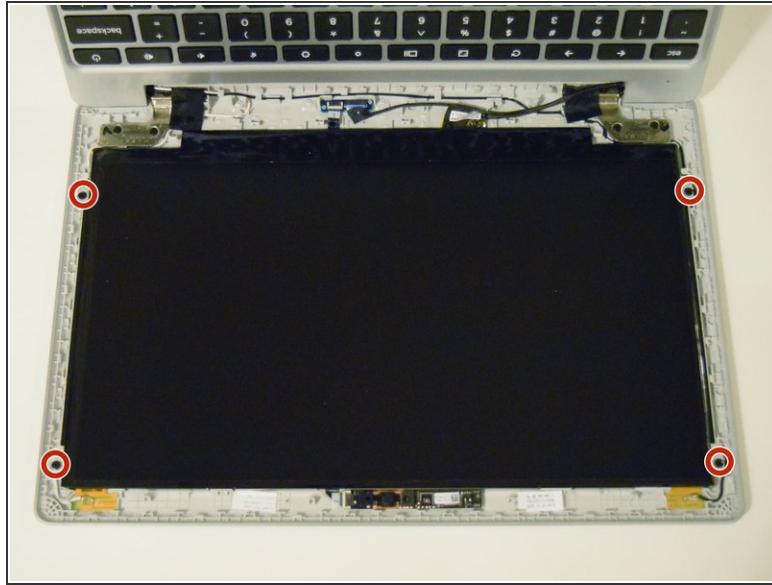

- Using a Phillips #0 screwdriver to unscrew the four 3 mm screws keeping the screen in place.


## Step 12

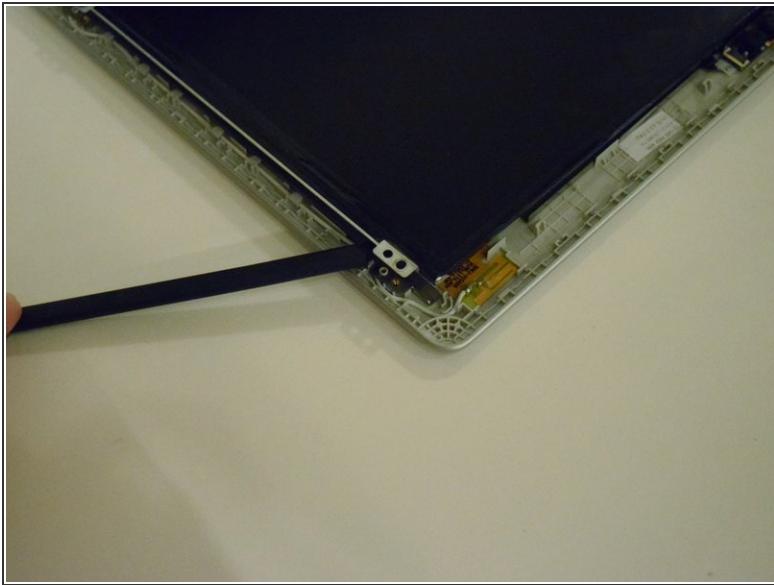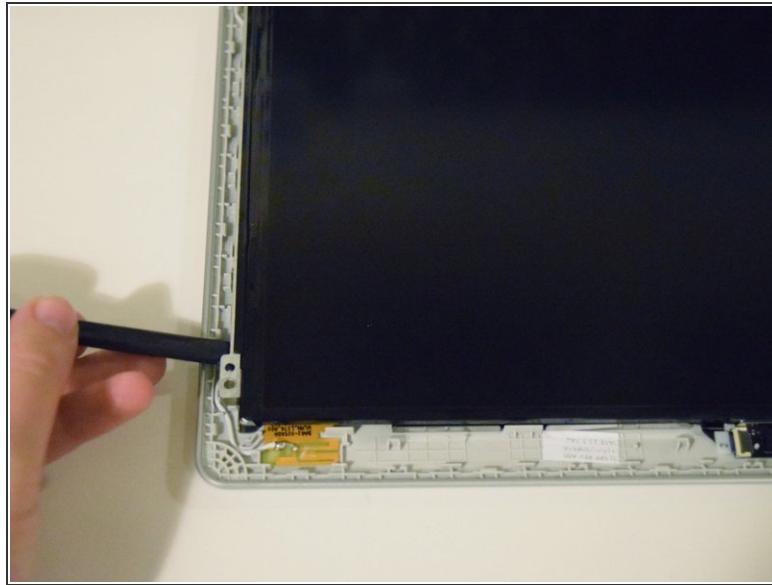

- Using the spudger, pry the screen loose from the front panel.

**⚠** Do not try to remove the screen yet, it is still connect by a wire.

## Step 13

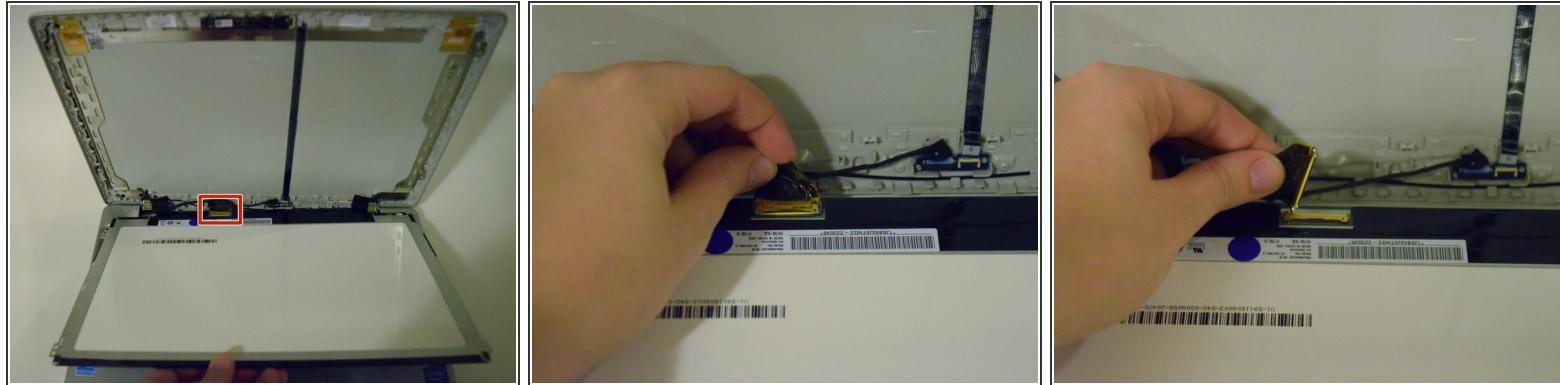

- Place the laptop in an upright position.

 When you place the Chromebook in this position the screen may fall off, so make sure to hold onto it.

- Pull back the screen to locate the LCD cable, and disconnect it by pulling the black tape that surrounds it towards you.

## Step 14



- Pull the screen from the front panel using your hands to fully remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-18 07:30:55 AM (MST).

