



Samsung Chromebook 3 XE500C13-K02US

Bottom Case Replacement

This Guide illustrates how to remove the back cover of a Samsung Chromebook 3 XE500C13-K02US.

Written By: Mick McCarty



This document was generated on 2020-01-11 10:44:33 AM (MST).

INTRODUCTION

This guide will show you how to remove the bottom case of the Samsung Chromebook 3. This will allow you to get into your device for other repairs or replacements.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Bottom Case



- Place the laptop back cover facing up to expose the screws.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

Step 2



- Use an iFixit opening tool to wedge in between the case and body of the laptop.
- Once the tool is wedged in between the case and laptop, slide it around the entire laptop's edge to disengage the retaining clips.

i You should hear a popping sound as you slide the iFixit opening tool around the laptop.

Step 3



- Remove the cover exposing the inside of the laptop.

To reassemble your device, follow these instructions in reverse order.