



Samsung Chromebook Pro Screen Replacement

This guide will demonstrate the steps needed to complete a screen replacement for the Samsung Chromebook Pro.

Written By: Amber Castro-Beltran



This document was generated on 2020-03-12 08:35:27 AM (MST).

INTRODUCTION

Replace the screen for the Samsung Chromebook Pro by following the guide below.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS #000 Screwdriver](#) (1)
- [Precision Tweezers Set](#) (1)

Step 1 — Screen



- Lay the Samsung Chromebook Pro flat on your work surface.

Step 2




- Insert the plastic opening tool between the hinge and plastic lining and pry upwards.
- Continue to use the plastic opening tool along to the plastic lining to completely remove.

Step 3



- Remove the three silver 30 mm screws connected to the screen by using the JIS J000 screw bit.

Step 4

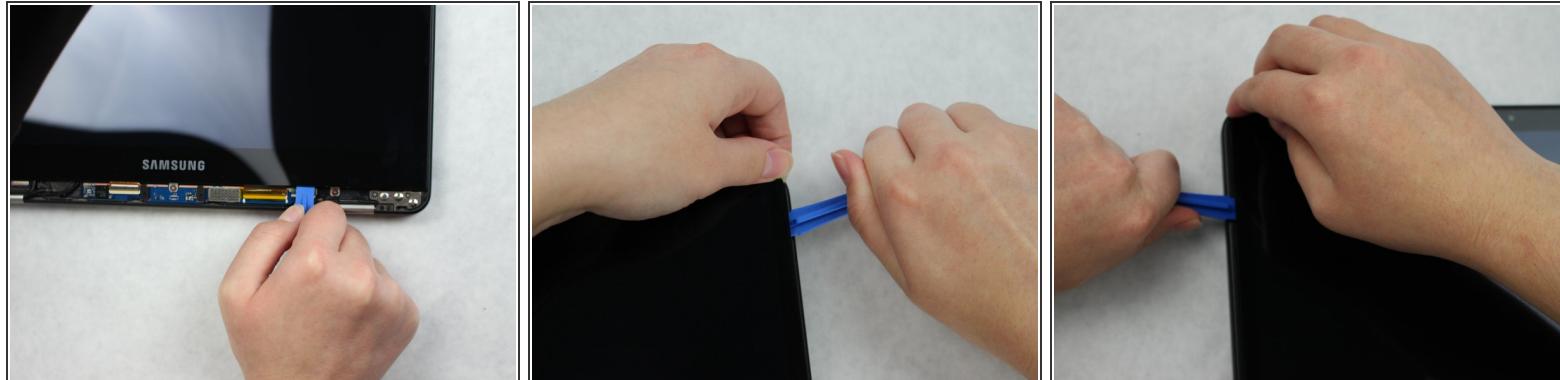

- Begin lifting the screen by prying upward using the plastic opening tool.
- Work around the screen by lifting upward with the plastic opening tool until the screen is completely off.

Step 5



- Locate the black and gold wire on the left side of the screen, and pry the bar upward using the precision tweezers.
- Disconnect the wire using the precision tweezers.

Step 6



- Disconnect the wire connected to the right side of the screen using the precision tweezers.

Step 7



- Gently lift to remove screen.

To reassemble your device, follow these instructions in reverse order.