



Samsung Chromebook Pro Speaker Replacement

This guide will demonstrate the steps needed to replace the speaker in the Samsung Chromebook Pro.

Written By: Amber Castro-Beltran



This document was generated on 2020-03-12 08:35:22 AM (MST).

INTRODUCTION

Follow the quick and easy guide below to replace the speaker for the Samsung Chromebook Pro.

TOOLS:

- [JIS #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Precision Tweezers Set](#) (1)

Step 1 — Speaker




- Remove the eight 30 mm screws from the edges of the case with the JIS J000 screw bit.

Step 2




- Slide the plastic opening tool in a corner at a steep angle, and lift up to remove the outer case.

Step 3

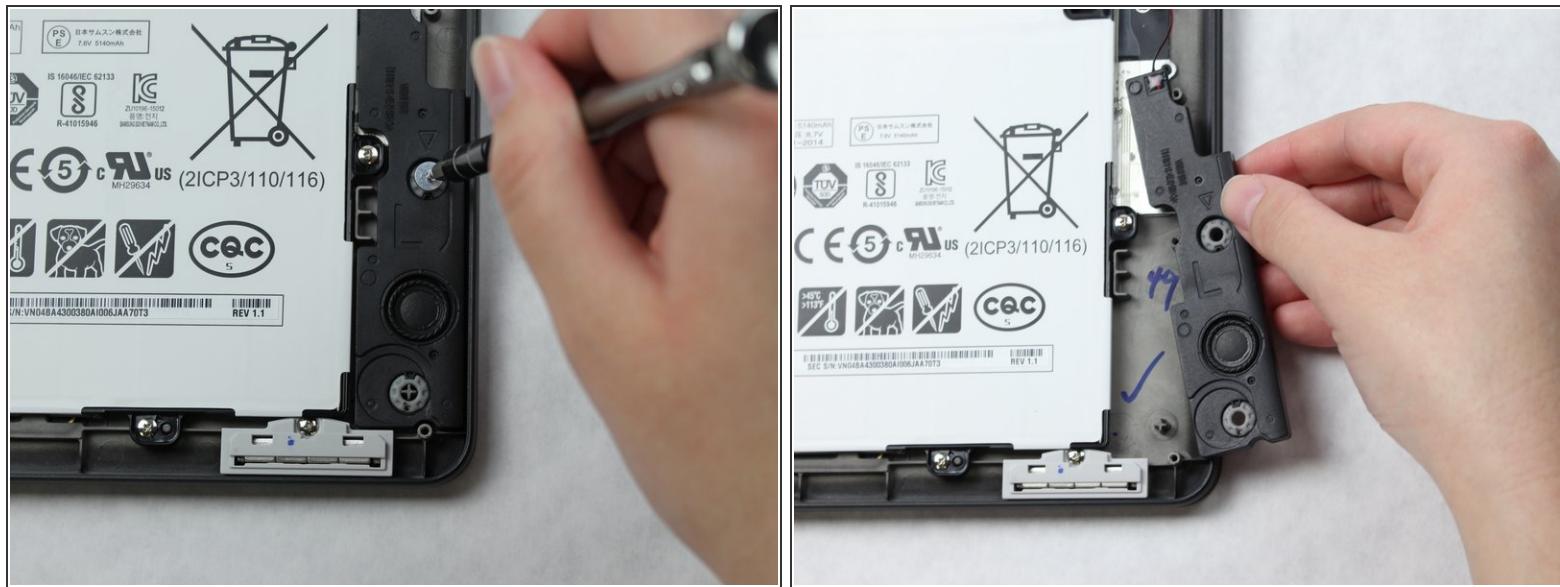

- Remove the one 40 mm silver screw using the JIS J000 screw bit.

Step 4

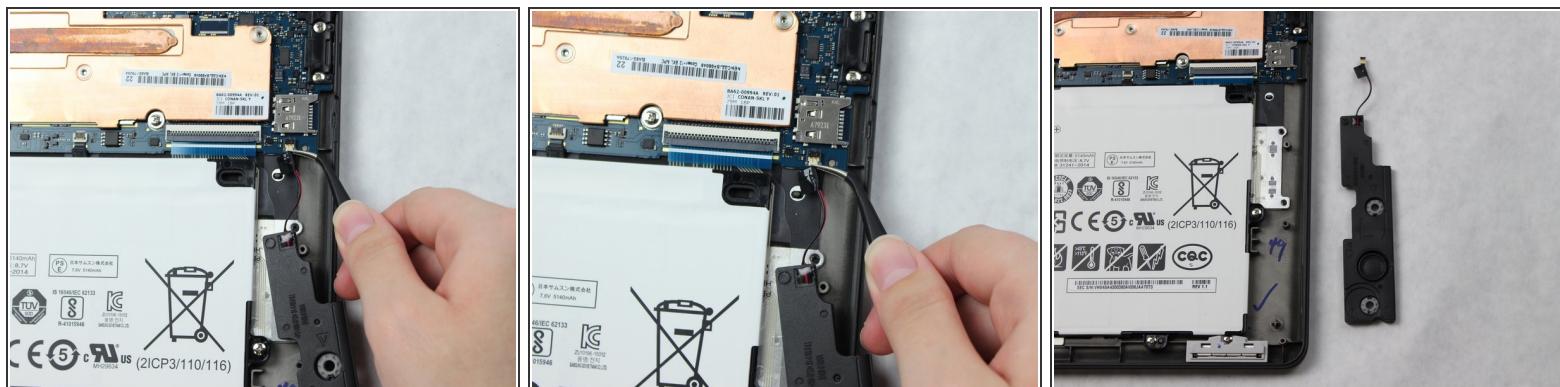

- Using the precision tweezers lift the wire to disconnect.
- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.