


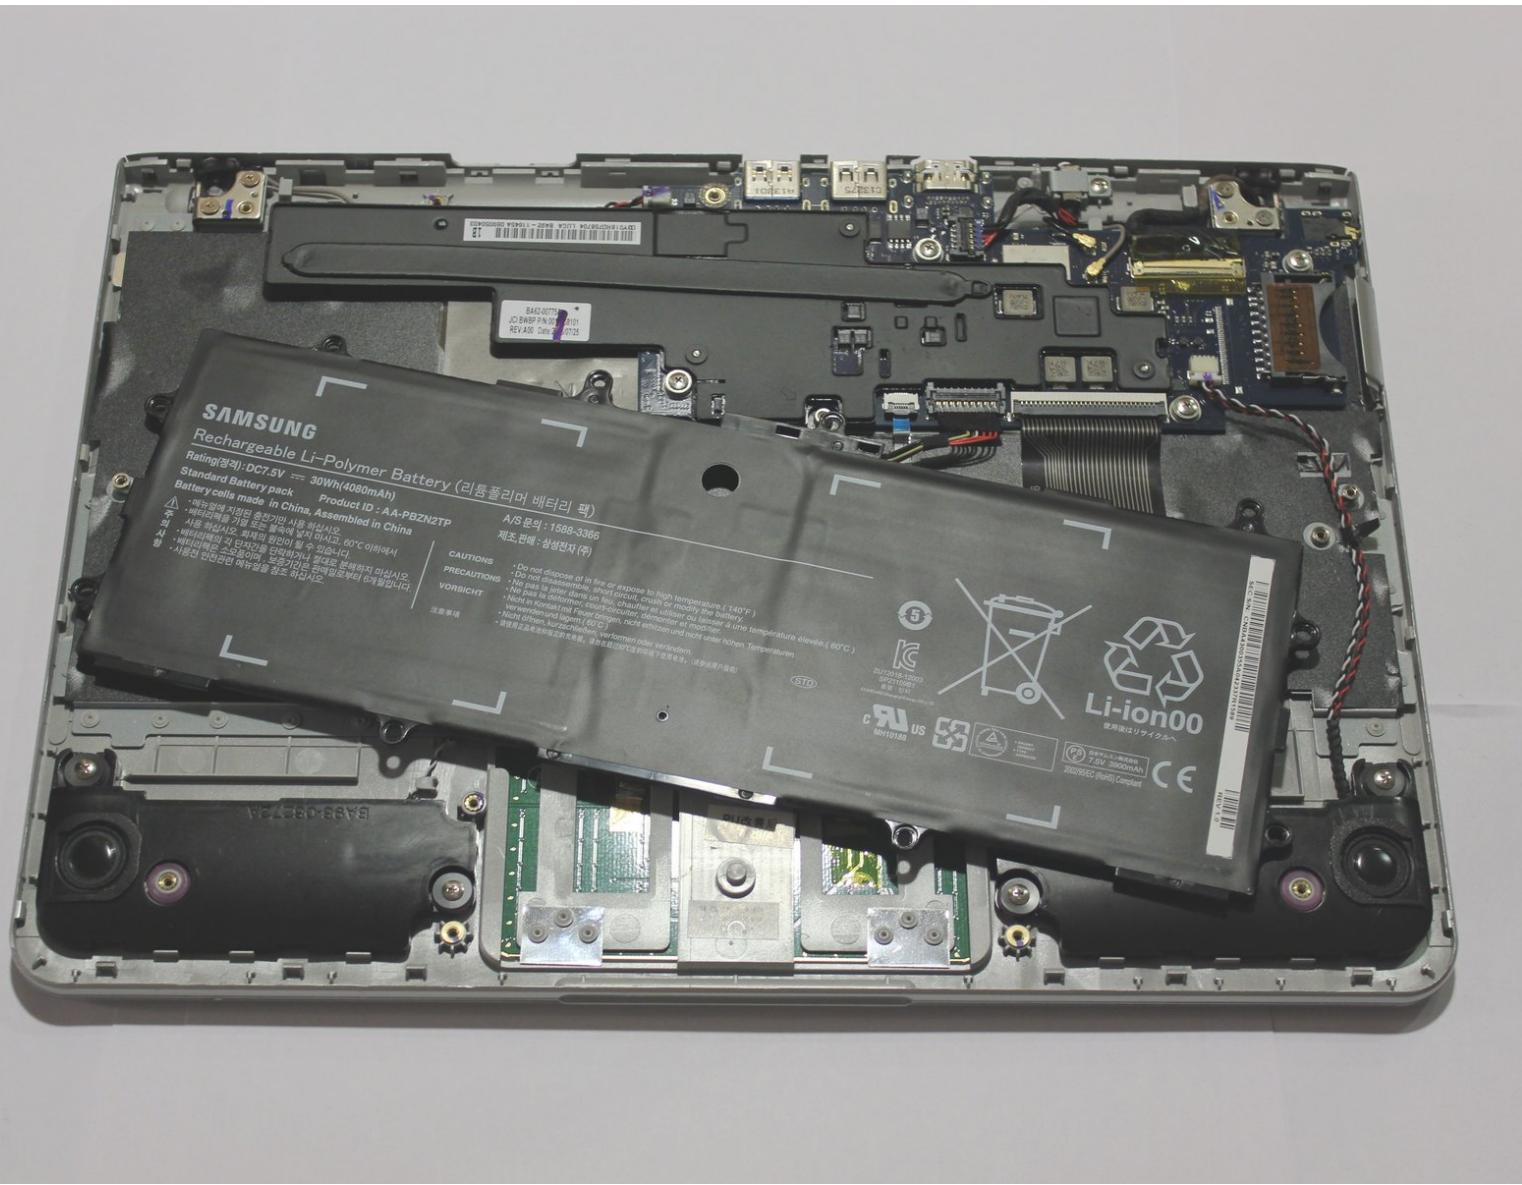

# Samsung Chromebook Series 3 Battery Replacement

Replace a problematic battery in your Samsung Chromebook Series 3.

Written By: Andrey Radchishin



This document was generated on 2019-09-19 11:54:37 AM (MST).

## INTRODUCTION

This guide will help you change the battery in your Chromebook. It requires you to take the Chromebook apart, since the battery is located inside.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

### PARTS:

- [Samsung Chromebook XE303C12 Battery](#) (1)

## Step 1 — Bottom Cover



- Lay the Chromebook down so that the bottom cover is facing up.
- Remove the rubber feet on the four corners of the Chromebook in order to get to the screws underneath. They are stuck on with an adhesive.

## Step 2



- Remove the nine 4.7 mm screws on the bottom cover using a Phillips #00 screwdriver.

## Step 3




- Pry up the plastic strip on the back of the Chromebook using a plastic opening tool.
- *i* It is not necessary to remove it completely. It just needs to be separated from the bottom cover.

## Step 4




- Pry off the bottom cover using a plastic opening tool.

## Step 5 — Battery

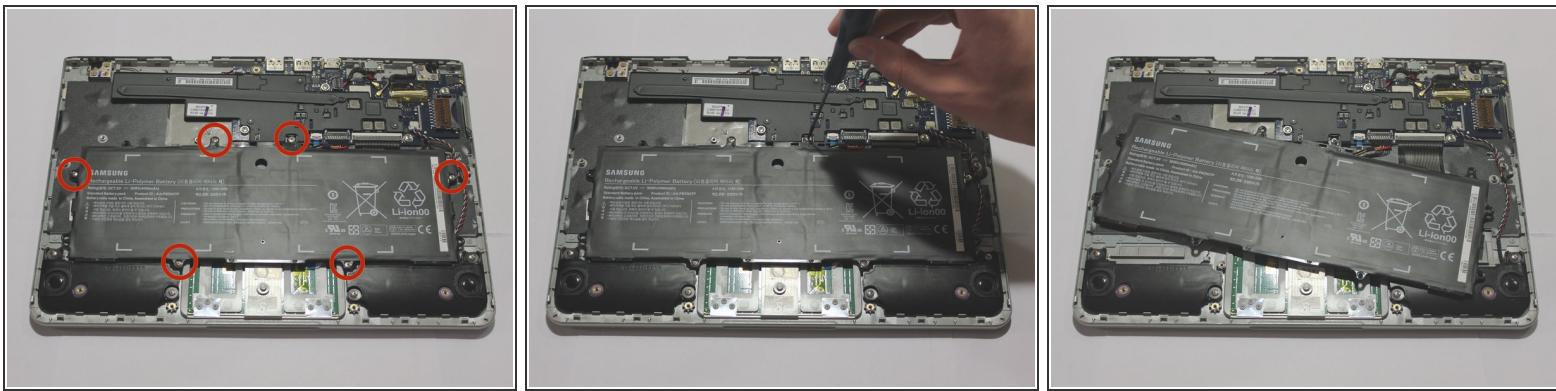

- Remove six 3.5 mm screws holding the battery using a Phillips #00 screwdriver.
- Pull out the battery partway in order to easily get to the battery connector.

## Step 6

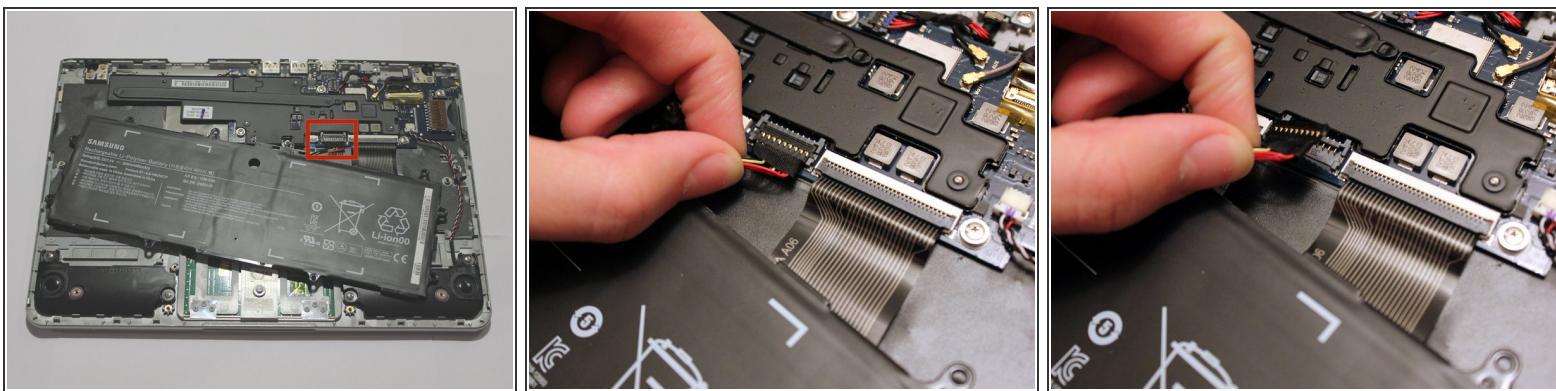

- Disconnect the battery connector by pulling straight up at its base.
- ☒ When reassembling, simply position the connector above it's original place, and push down.

## Step 7



- You can now remove the battery.

To reassemble your device, follow these instructions in reverse order.