



# Samsung Chromebook Series 3 Bottom Cover Replacement

Change the bottom cover of your Samsung Chromebook Series 3.

Written By: Andrey Radchishin



## INTRODUCTION

A quick guide on how to take off the bottom cover on your Chromebook. This procedure is a prerequisite for doing most repairs to your Chromebook.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

### PARTS:

- [Samsung Chromebook XE303C12 Bottom Cover](#) (1)

## Step 1 — Bottom Cover



- Lay the Chromebook down so that the bottom cover is facing up.
- Remove the rubber feet on the four corners of the Chromebook in order to get to the screws underneath. They are stuck on with an adhesive.

## Step 2



- Remove the nine 4.7 mm screws on the bottom cover using a Phillips #00 screwdriver.

## Step 3



- Pry up the plastic strip on the back of the Chromebook using a plastic opening tool.
- ⓘ It is not necessary to remove it completely. It just needs to be separated from the bottom cover.

## Step 4



- Pry off the bottom cover using a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.