




Samsung Chromebook Series 3 Front Camera Replacement

How to replace the front camera assembly on a Samsung Chromebook Series 3 (XE303C12-A01US).

Written By: Tyler Schultz

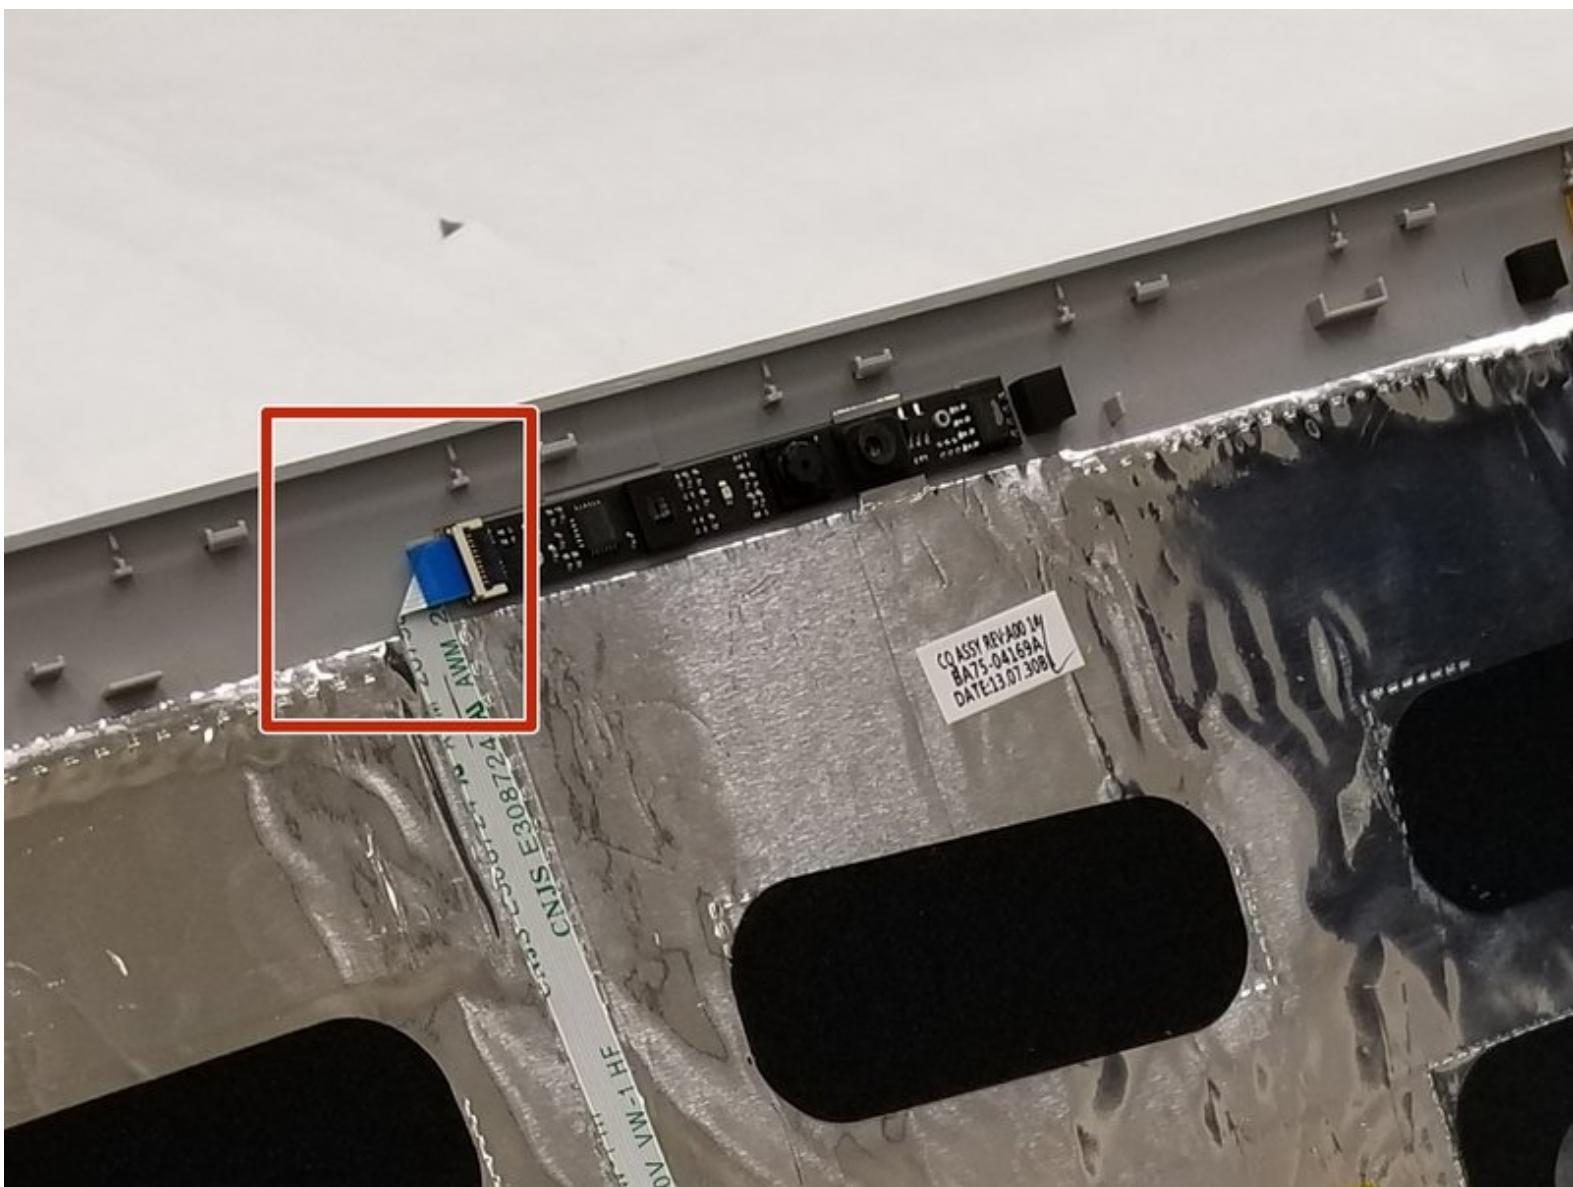

This document was generated on 2019-10-10 06:48:14 PM (MST).


INTRODUCTION

This guide will demonstrate how to remove and replace the front camera assembly on your Samsung Chromebook Series 3.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Screen

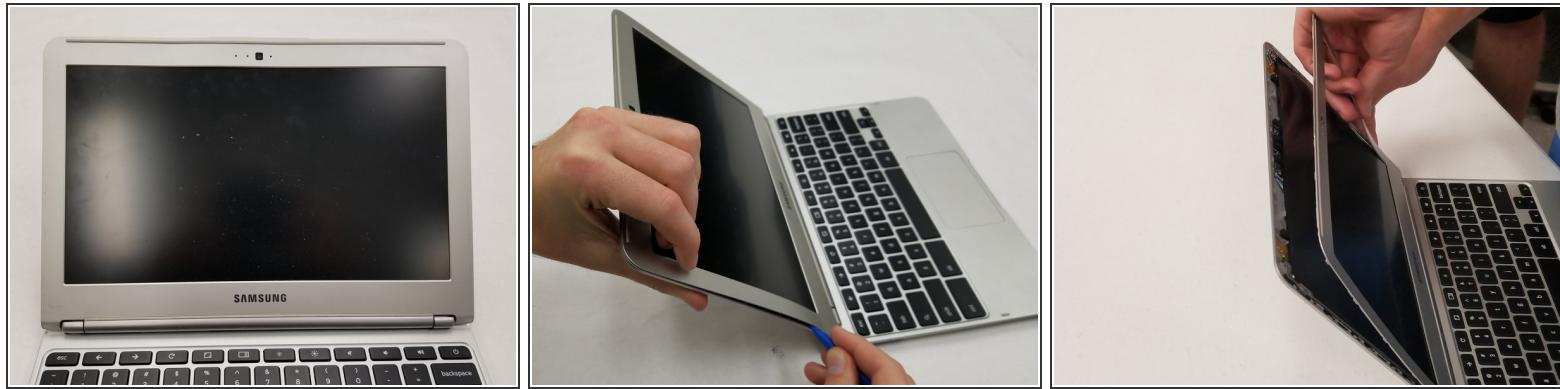

- Use the iFixit opening tool to get under the front cover and pop it out of place

Step 2




- Remove the four 2.9 mm screws with the Phillips #00 Screwdriver bit.
- Using the iFixit opening tool, try to lift up the screen (it is held down by some adhesive).

Step 3




- Lift the lever to release the cable and pull the cable out.

Step 4

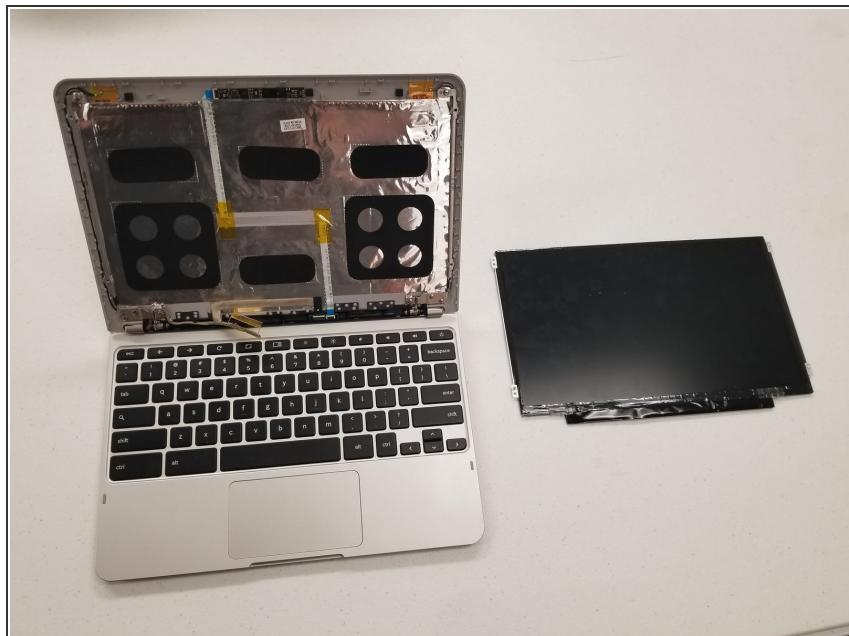


- You can now remove the screen.

Step 5 — Front Camera

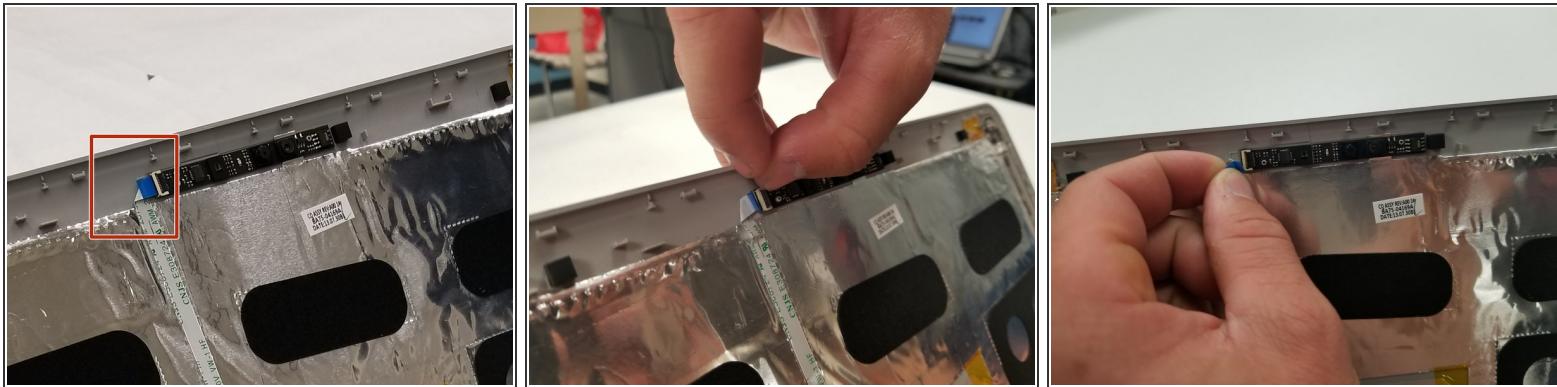

- Disconnect the ribbon cable connected to the front camera assembly.
- You will need to flip up the little black lever to release the cable.

Step 6

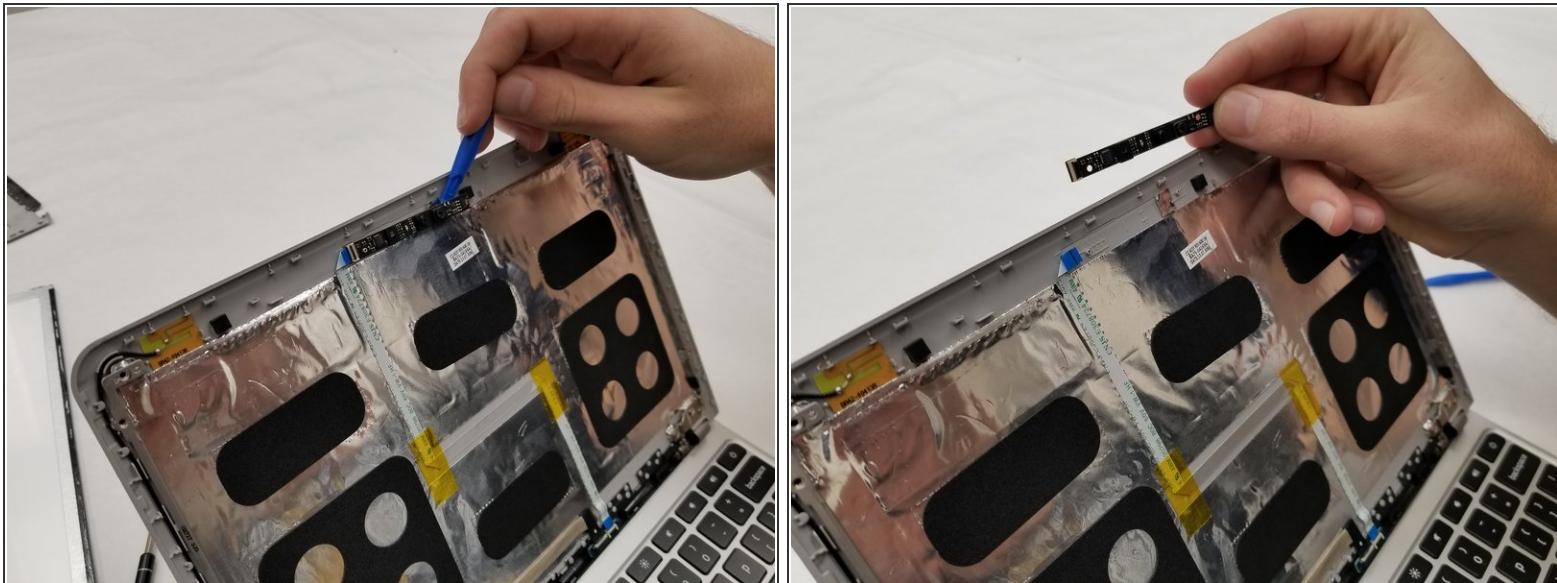

- Use an iFixit opening tool to pry the front camera assembly from the adhesive holding it in place.

To reassemble your device, follow these instructions in reverse order.