



# Samsung DV180F Repair Back control buttons Replacement

Replace back buttons panel when damaged.

Written By: maria



## INTRODUCTION

This guide shows how to replace the back buttons panel of a Samsung DV180F when damaged. This procedure is very simple since the device is not entirely disassembled. It only involves loosening a few screws and unplugging the connecting ribbons.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Back Buttons Panel



⚠ Ensure the camera is turned off and battery is taken out before you begin.

- Remove the two external screws from the camera using a Phillips 000 screwdriver.

## Step 2





- Insert a plastic opening tool in the gap between the camera body and back panel.
- Pry along the right side of the camera to separate the back panel.

## Step 3



- Once the camera is open, remove the two internal screws using a Phillips 000 screwdriver.


## Step 4

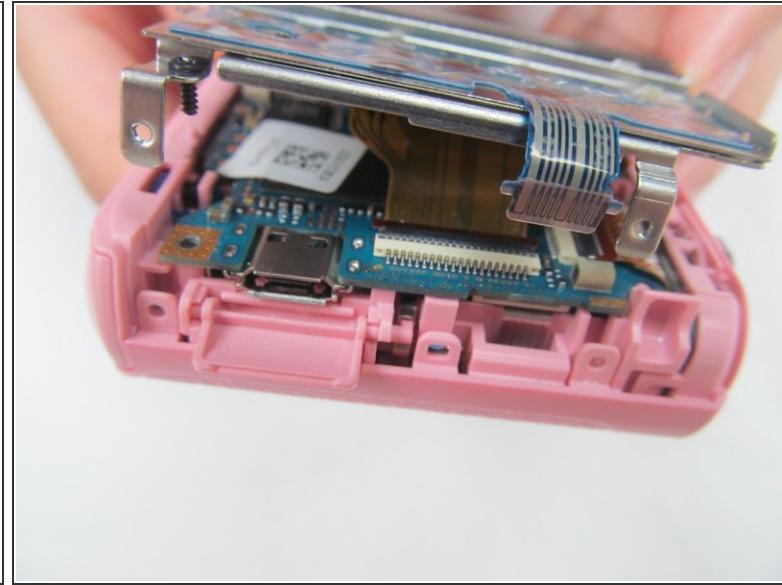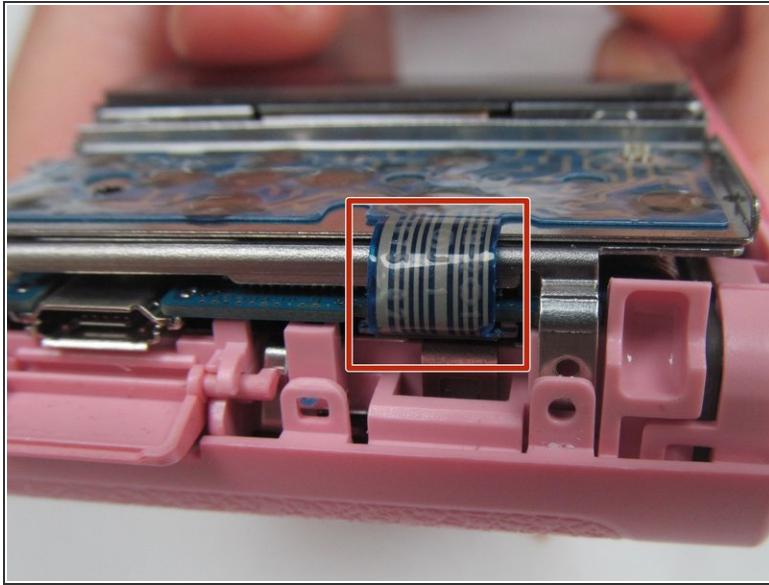

- Use a plastic opening tool to release the lock securing the ribbon receptor to the right side of the motherboard.


**⚠** Ribbons have to be unlocked before removal to prevent damage.

## Step 5

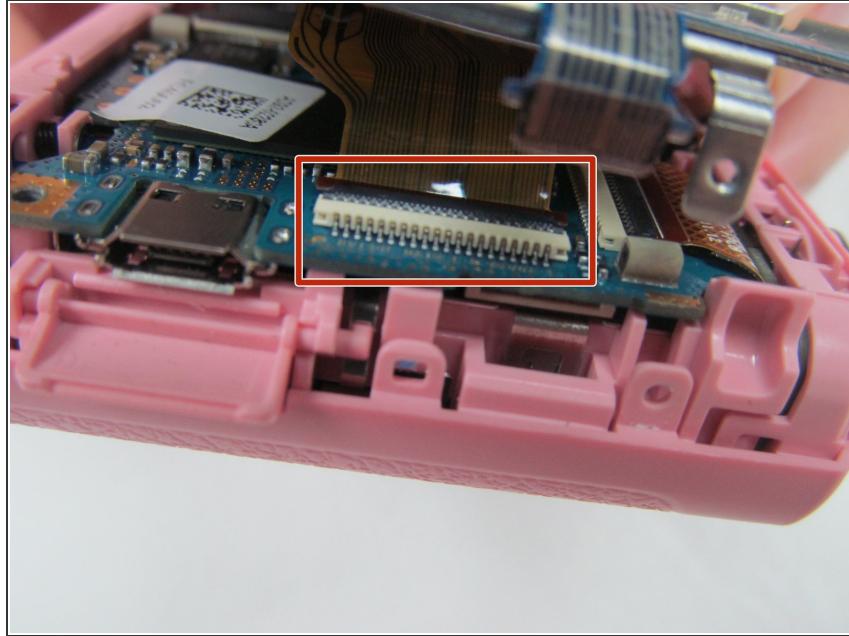

- Gently lift the circuit board from the camera.
- Remove the display ribbon receptor lock to remove back panel from the motherboard.

## Step 6

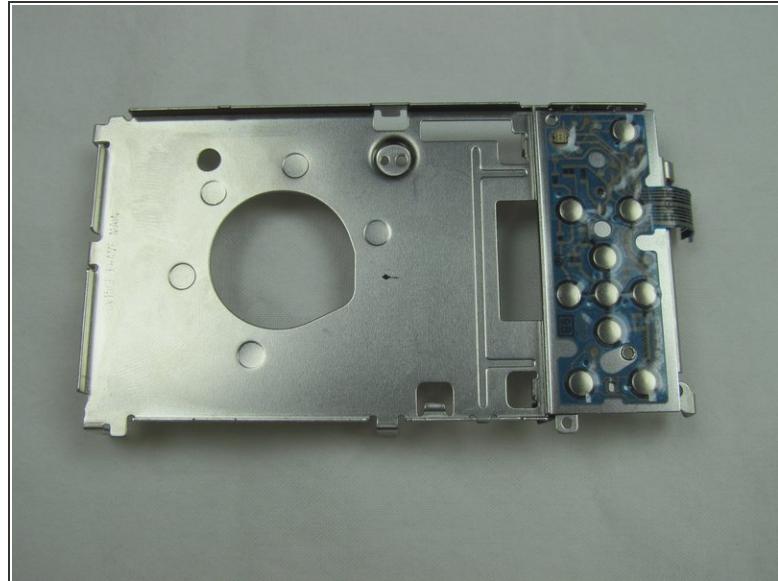

- Remove back display.
- Replace the back button panel.

To reassemble your device, follow these instructions in reverse order.