



Samsung DV300F Front and Rear Casing Replacement

This guide will serve as replacement guide for the Front and Rear Casing for the Samsung DV300F.

Written By: Timothy Gordon



This document was generated on 2020-02-05 04:13:06 AM (MST).

INTRODUCTION

This guide will show you how to remove the casing around the device so that it and the parts underneath it can be replaced.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Front and Rear Casing



- Remove the two black 4.2 mm screws on the right side of the camera using a Phillips #0 screwdriver.
- Remove the two black 4.2 mm screws on the left side of the camera using a Phillips #0 screwdriver.
- Remove the two black 4.2 mm screws on the bottom of the camera using a Phillips #0 screwdriver.

Step 2



- Remove the back case of the camera carefully.

Step 3



- Remove the front case of the camera.
- Remove the front LCD screen from the front case next to the lens.

To reassemble your device, follow these instructions in reverse order.