


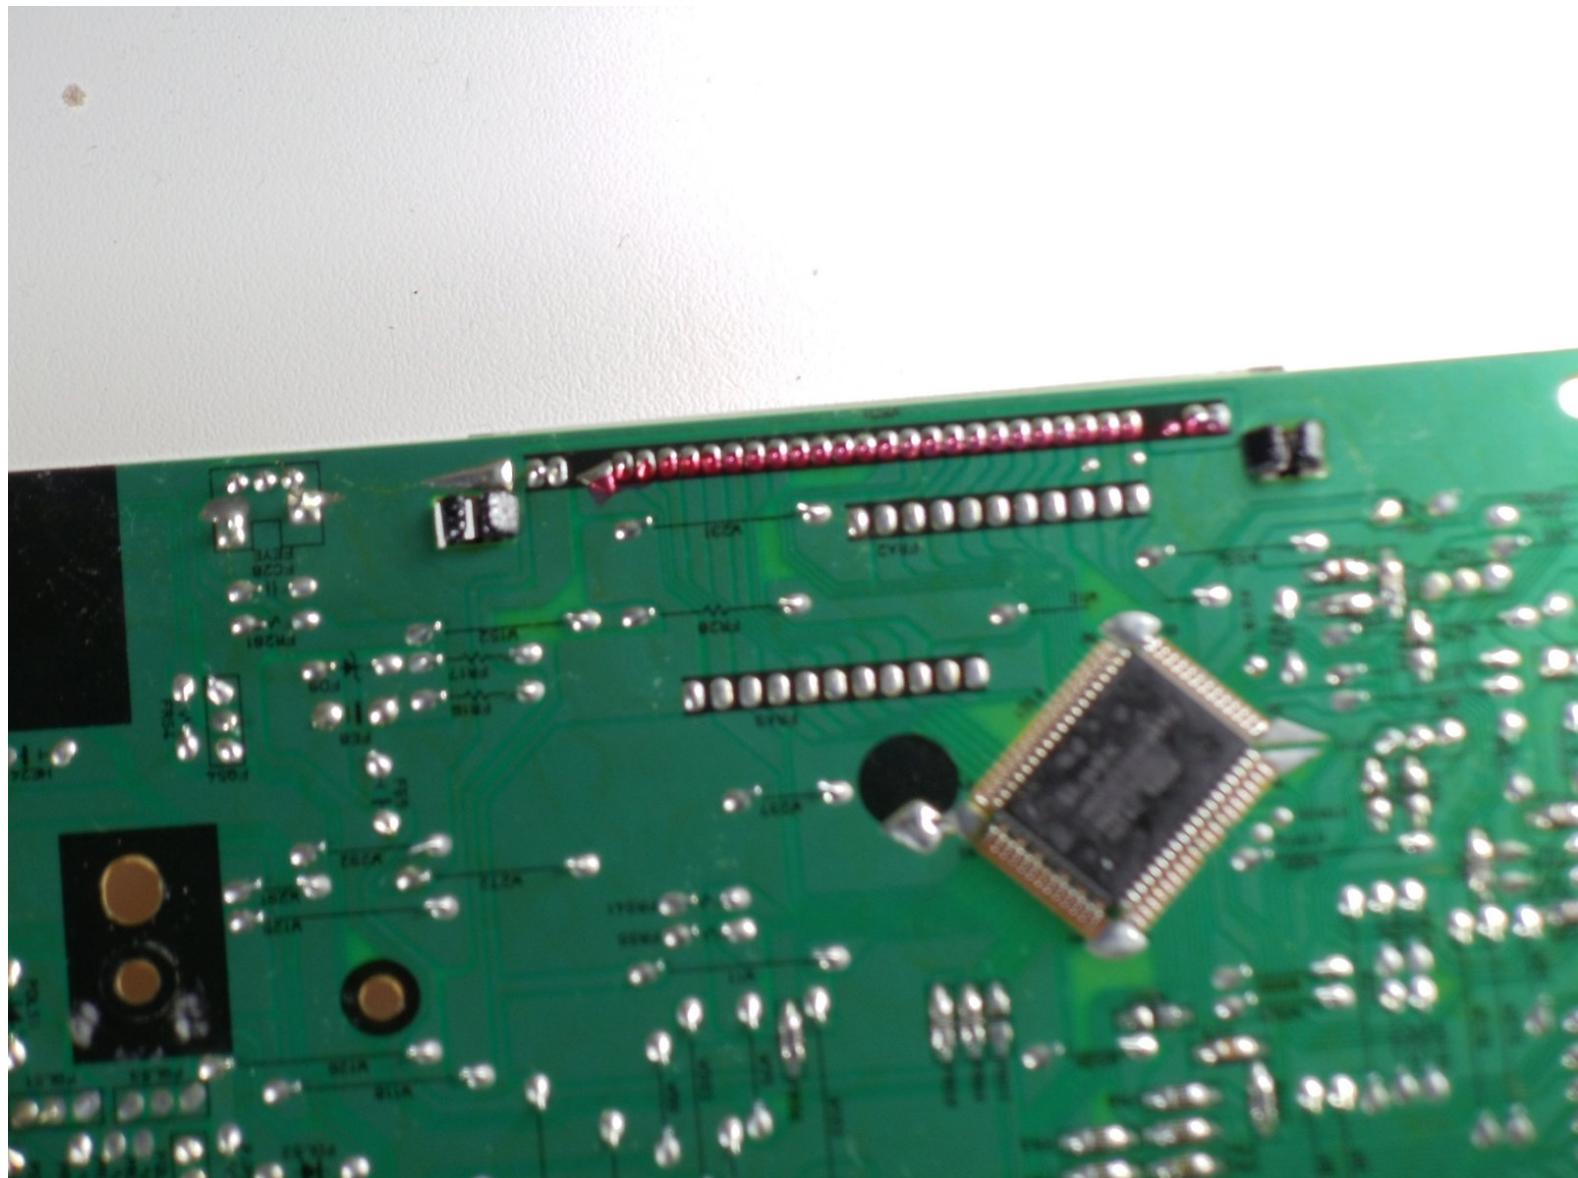

# Samsung DVD-P230 LCD Screen Replacement

This guide will show the process for installing a new LCD screen.

Written By: Evan Domingue



This document was generated on 2019-09-29 05:03:33 PM (MST).

 **TOOLS:**

- [Soldering Iron \(1\)](#)
- [Phillips #2 Screwdriver \(1\)](#)

## Step 1 — Outer Cover & Faceplate



- Open the tray by pressing the eject button
- Remove the DVD tray faceplate by pushing the faceplate up off of the tray.

## Step 2



- Press the eject button to insert the tray
- After the tray is closed unplug DVD player

## Step 3



- Unscrew the 3 screws in the back.

## Step 4



- Pull the outer case upward and then towards you.

## Step 5



- There are six symmetrically placed tabs holding in the front faceplate. Unhook these six tabs to loosen the faceplate.

## Step 6




- Pull off front faceplate. This may take a couple of tries to get all six tabs unhooked simultaneously.

## Step 7 — Power Cord




- Locate the white clip that attaches the cord to the motherboard
- Grasp clip and squeeze to release
- Lift up and remove power cord
- Slide cord mount from outer case

## Step 8 — Tray

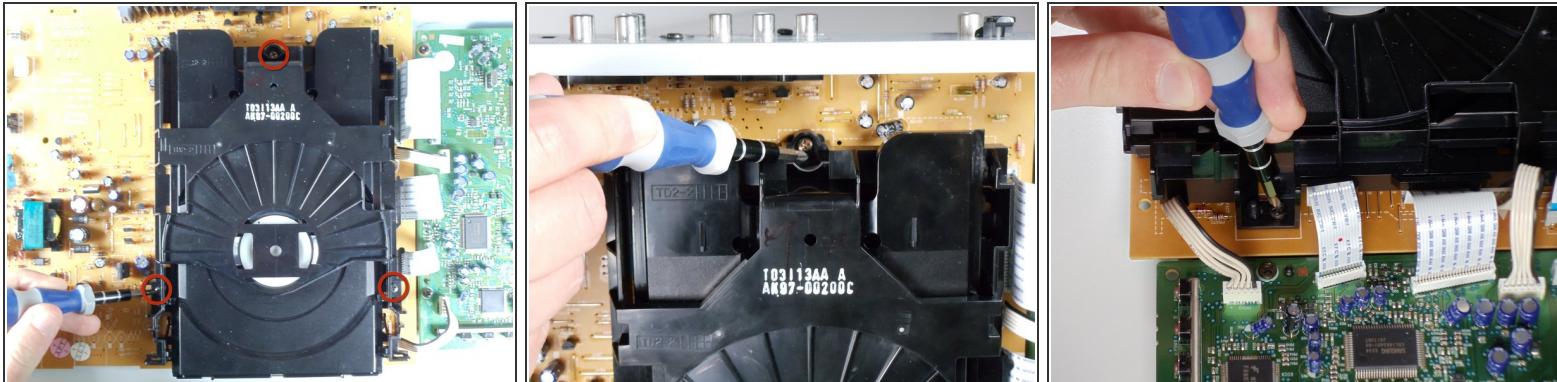

- Remove the three screws holding in the DVD tray

## Step 9

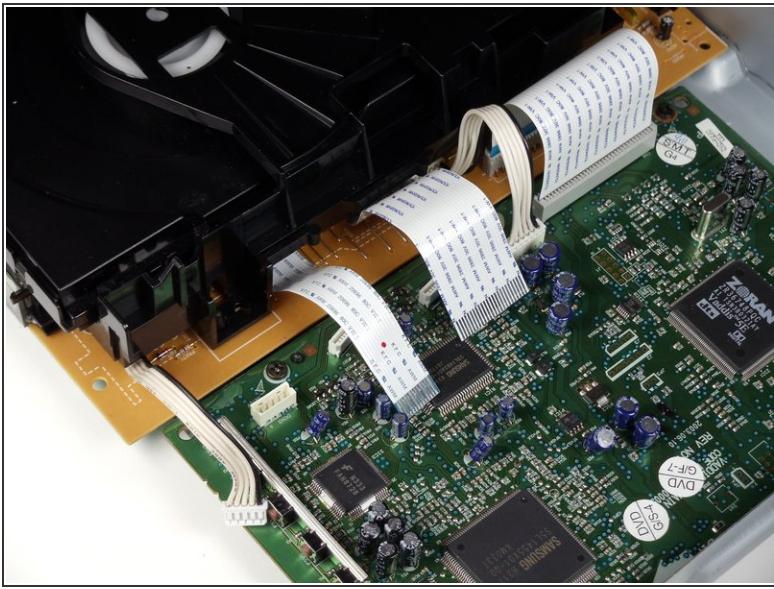


- Remove the power cord and first two ribbons by pulling them directly out of their sockets.

## Step 10





- Gently lift the DVD tray off of the motherboard.

## Step 11 — Motherboard

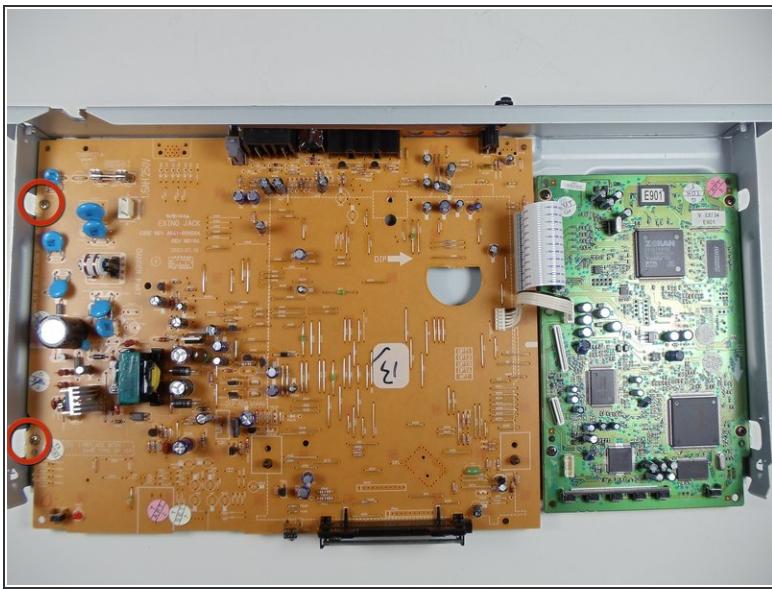


- Unscrew the 2 screws on the motherboard
- Unscrew the 2 screws on the back

## Step 12

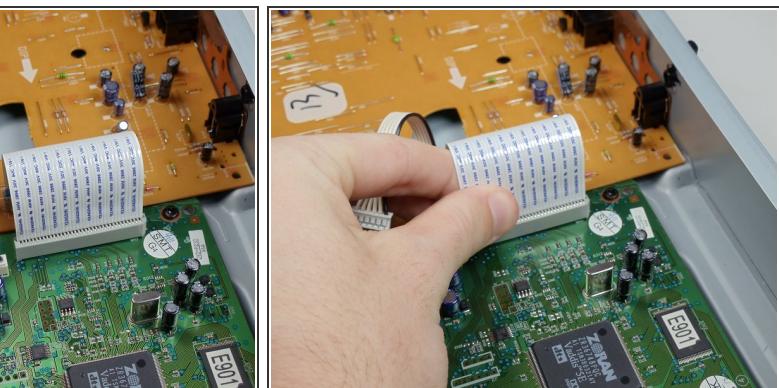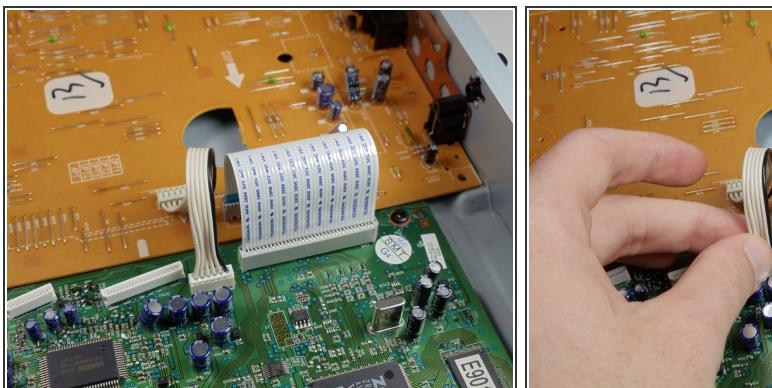



- Disconnect the wires and ribbon by pulling them out of their respective connections

## Step 13

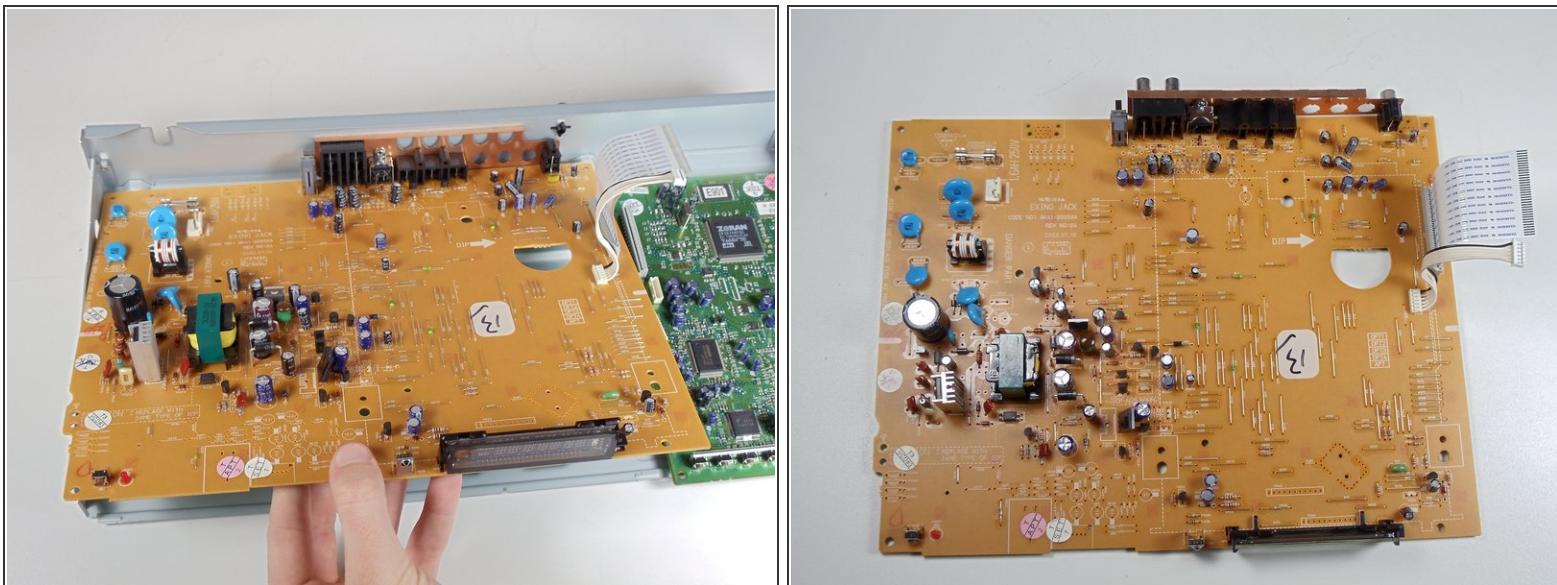

- Lift board up and out of the lower case

## Step 14 — LCD Screen

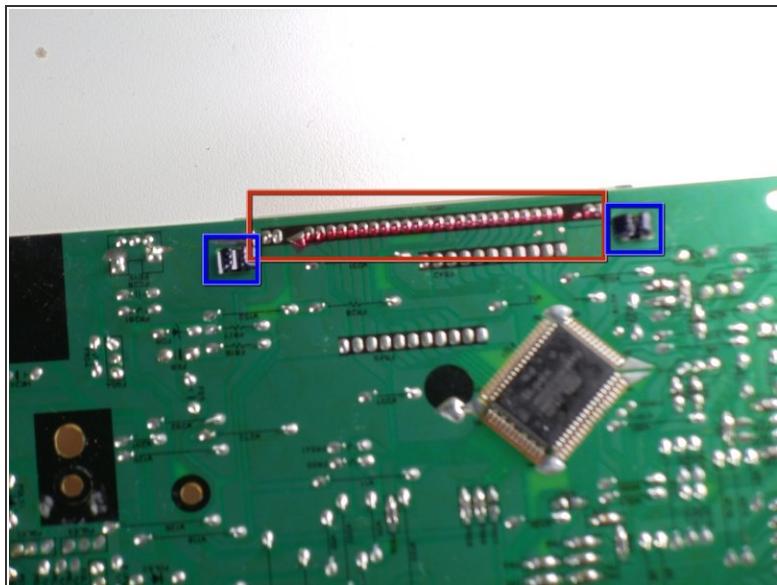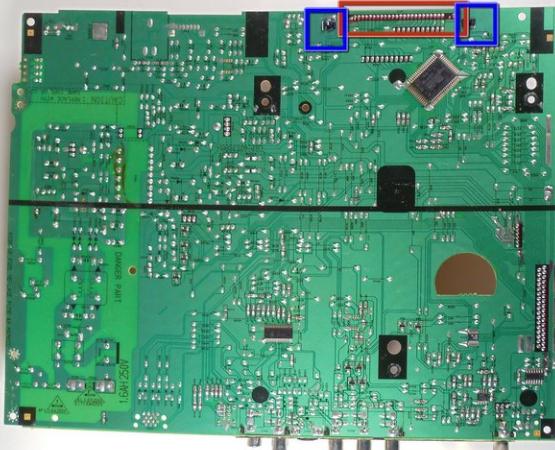

- The LCD screen has pins attaching it to the motherboard. Flip the motherboard over.
- De-solder LCD screen pins from the motherboard.
- Pinch black tabs to remove LCD screen from motherboard.
- Solder the new LCD screen pins into motherboard.

To reassemble your device, follow these instructions in reverse order.