



Samsung Epic 4G Touch Headphone Jack/Vibrator Replacement

Prereq only for Front Panel Assembly.

Written By: Walter Galan





INTRODUCTION

Prereq only for Front Panel Assembly.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Headphone Jack/Vibrator

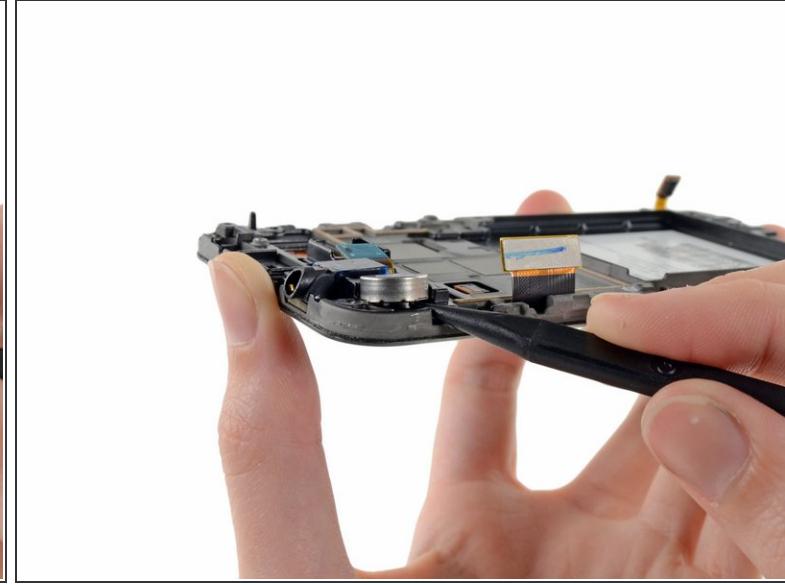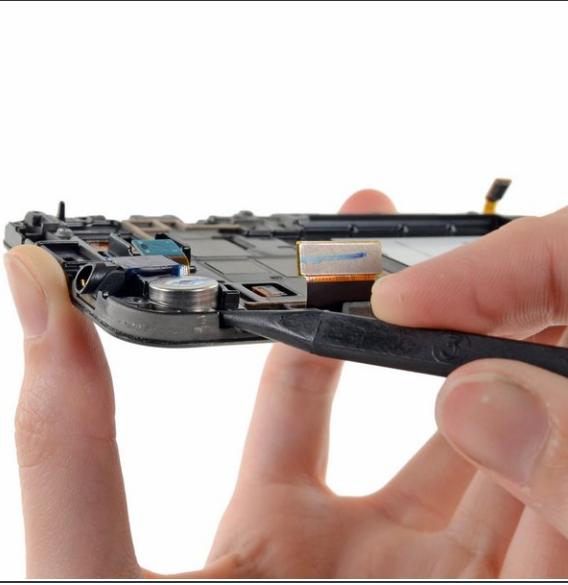

- Insert the pointed end of a spudger into the gap in the corner of the midframe to free the vibrator from the adhesive.

! Do not completely remove the vibrator, it is still attached to the headphone jack/vibrator assembly and can only come out with the rest of the unit.

Step 2



- Use the flat end of a spudger to release the headphone jack from the adhesive securing it to the midframe.

Step 3



- Remove the headphone jack/vibrator assembly from the display assembly.

To reassemble your device, follow these instructions in reverse order.