



Samsung Galaxy Amp 2 Screen Replacement

Repair your broken or damaged screen with this guide. Use care when applying heat to the screen and carefully detach delicate wiring.

Written By: Cory Nickolatos



INTRODUCTION

Repair your broken or damaged screen with this guide. A replacement may be needed if the screen is cracked or unresponsive. This guide recommends use of a heat gun, though a blow dryer can be used instead. Use care when applying heat to the screen and carefully detach delicate wiring to avoid damaging the phone.


TOOLS:

- [Tweezers - Pro ESD Angle \(1\)](#)
- [Suction Handle \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Heat Gun \(1\)](#)

PARTS:

- [Galaxy Amp 2 screen \(1\)](#)

Step 1 — Battery

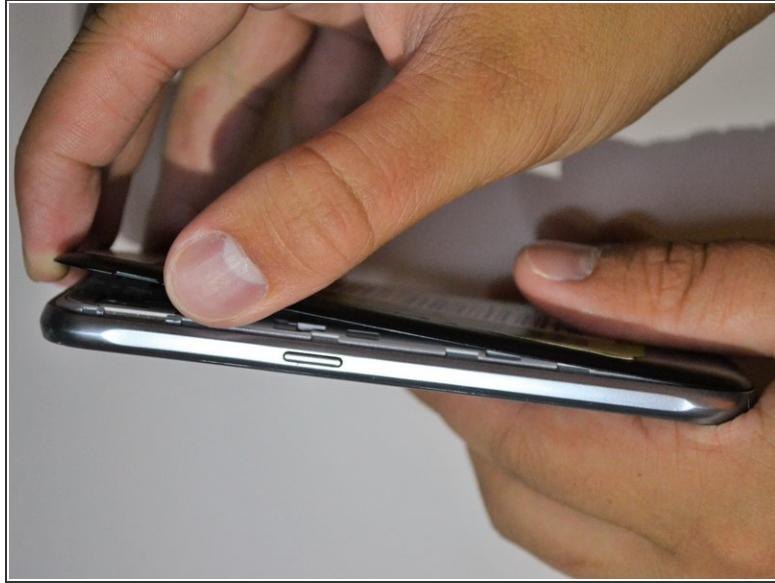

- Insert your fingernail or an opening tool into the divot on the side of the phone. The divot is located to the left of the rear-facing camera.
- Lift upwards and gently pry the rear panel off of the phone.

Step 2




- Insert a fingernail or plastic opening tool into the gap in the bottom right corner of the battery and lift upward.
- Grip the battery and safely remove it from the phone.

Step 3 — Screen




- Using angled tweezers, lift the small rectangular guard at upper right corner of the phone.
- Disconnect the connector piece from the back panel.

Step 4

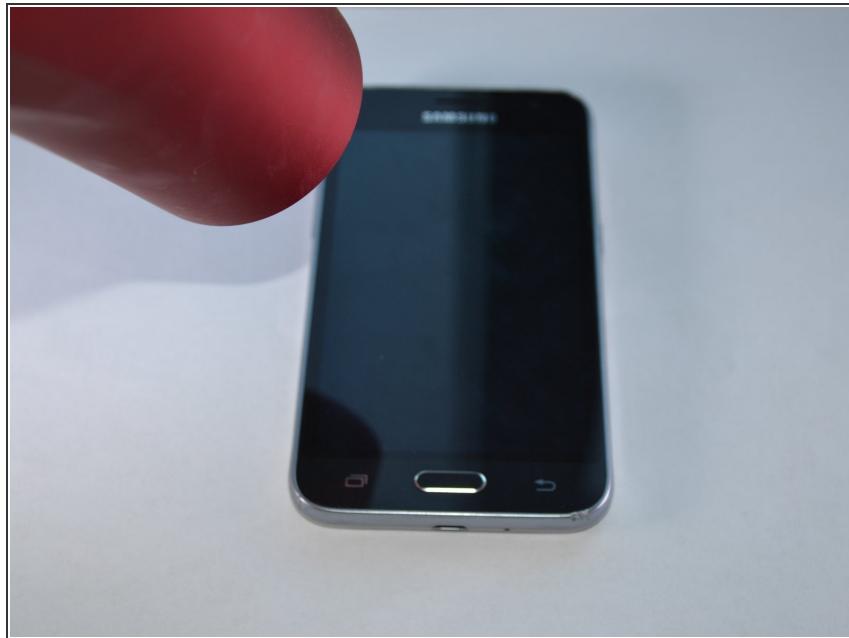

- Apply heat from heat gun or blow dryer on periphery of the screen for one to two minutes.

Step 5

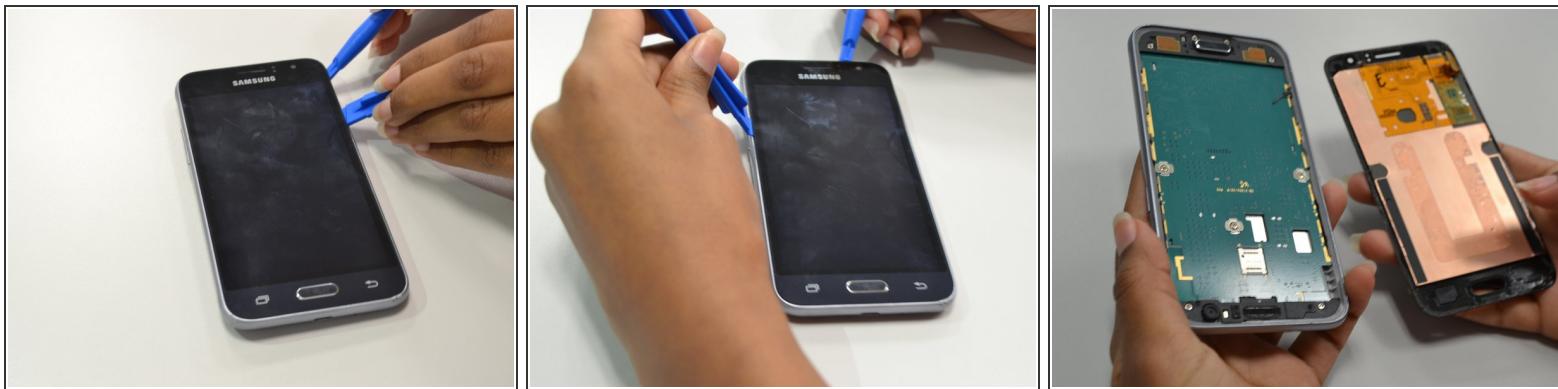

- Use four plastic opening tools to gently pry off the screen.

(i) Optional: Use a suction tool to pull the screen off.

To reassemble your device, follow these instructions in reverse order.