



Samsung Galaxy Centura Lock and Volume Buttons Replacement

This guide will show how to remove and replace the volume and lock buttons on the Samsung Galaxy Centura.

Written By: Austin Erickson



This document was generated on 2019-09-19 07:46:10 PM (MST).

INTRODUCTION

This guide will show how to remove and replace the volume and lock buttons located on the sides of the Samsung Galaxy Centura.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Locate the rectangular groove on the top side of the device.
- Firmly press the tip of your index finger, or plastic opening tool into the groove, and pull back firmly. The device should pop open as shown.

Step 2



- With the back casing removed, the phone should appear as shown, with a clear view of the battery.
- Gently pull the battery up with your thumb and index finger. It should come out without resistance.

Step 3 — Lock and Volume Buttons




- Find the positions of the seven screws on the back of the device. Use the Phillips #00 screwdriver to remove these 5.0mm screws.

Step 4




- Locate the indentation on the side of the device, and gently insert the plastic opening tool into it. With a firm prying motion, the plastic should begin to come apart.

Step 5

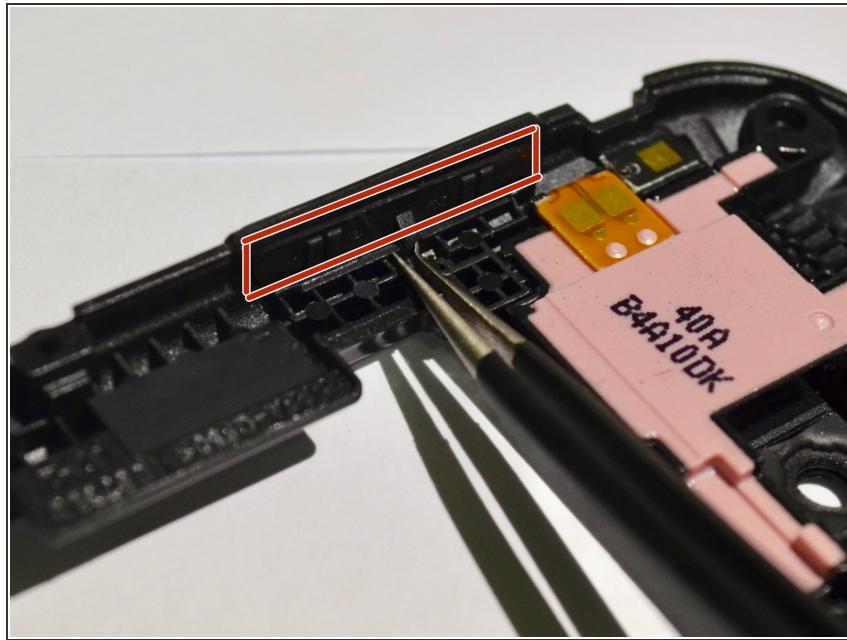

- Locate the volume buttons on the plastic casing.
- Gently pull the black tab up and out with the tweezers, then push or pull the button inward and out of the plastic casing. It should come free without resistance.

Step 6

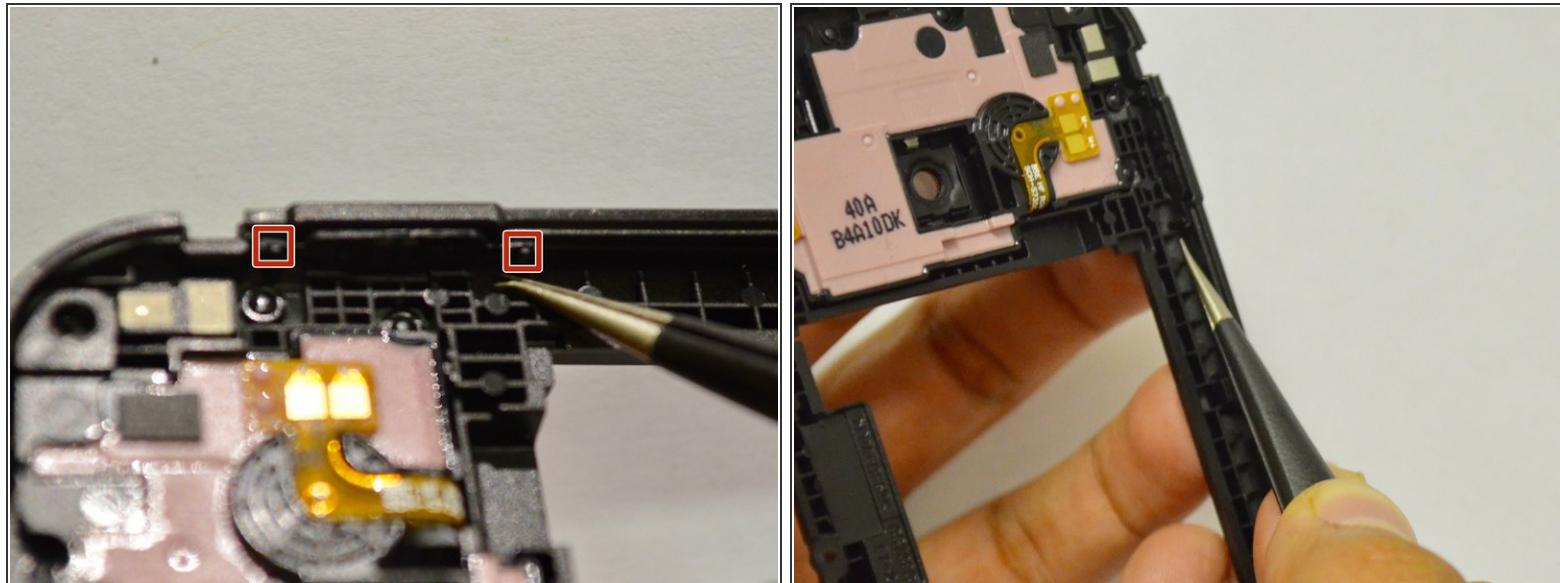

- Locate the lock button on the opposite side of the plastic casing.
- Using the tweezers, pull the two horizontal tabs up and out of the plastic pegs that hold them in place.
- Push the button inward and out of the plastic casing. This may require firm pressure to free it completely.

To reassemble your device, follow these instructions in reverse order.