



Samsung Galaxy Core Prime Volume Buttons Replacement

Users will be able to replace broken, chipped, or lost Samsung Galaxy Core Prime volume buttons.

Written By: Olivia Jensen



This document was generated on 2020-04-04 05:26:54 AM (MST).

INTRODUCTION

Users will be able to replace lost, broke, or scratched volume control buttons for the Samsung Galaxy Core Prime. This will enable the user to more easily control volume and improve the overall aesthetics of the smartphone.

TOOLS:

- [Heat Gun](#) (1)
can also use iOpener
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery




- Turn the smartphone off by using the power button on the right-hand side.

Step 2



- Turn the smartphone over so that the rear camera is face up.

Step 3

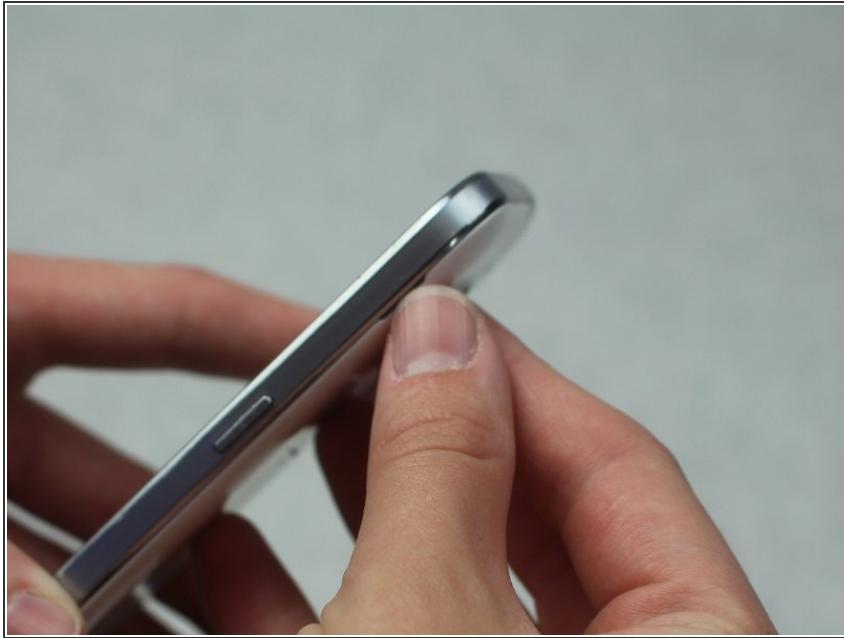


- Use your fingernail or a flat tool to lift the back cover.

Step 4



- Locate the battery near the bottom of the phone. The battery is square, flat, and is labeled 'SAMSUNG'.

Step 5

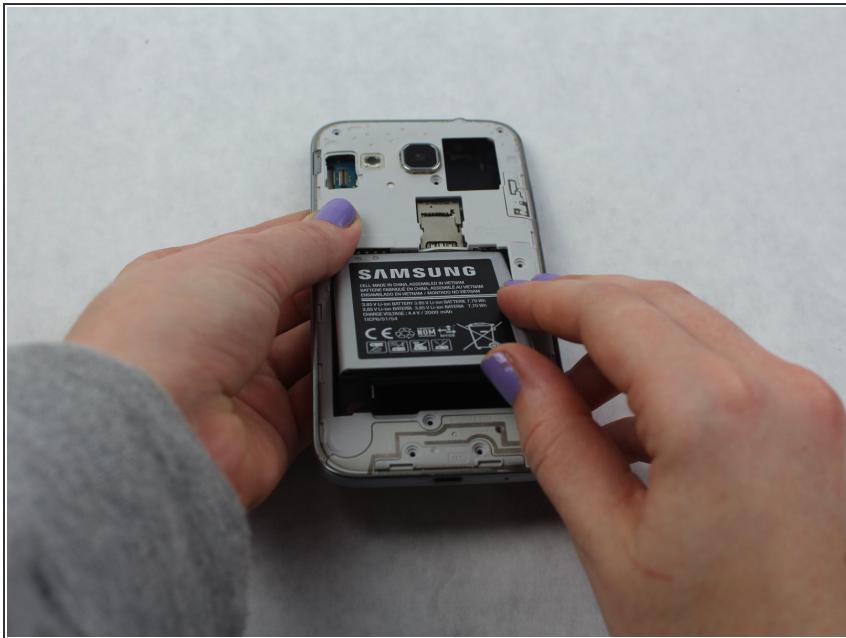

- Use your fingernail or a flat tool to lift the battery out.

Step 6 — Volume Button



- Use a Phillips #00 screwdriver to remove the eight 4mm screws from the midframe.


Step 7



- Flip the phone over (screen up). Use an [iOpener](#) to heat the frame. Do this until the adhesive is loose.


 Use care when handling these heating tools!

Step 8

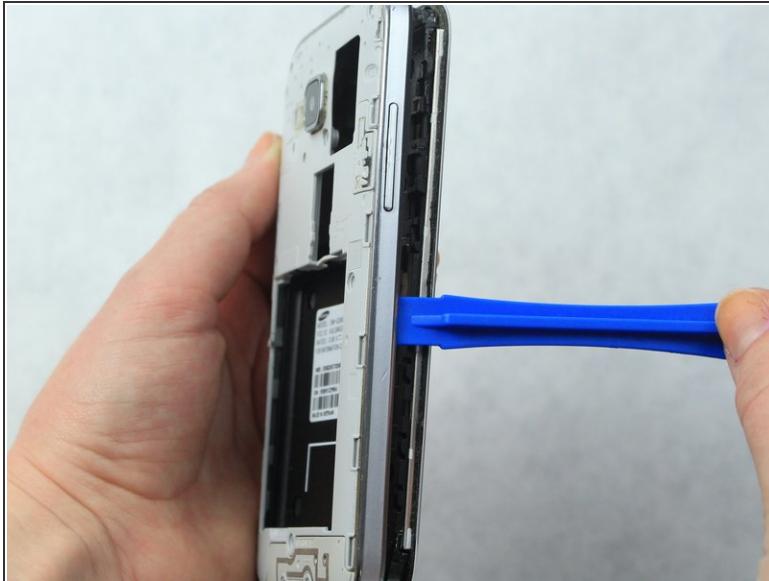

- Use an [iFixit Opening Tool](#) or a similarly shaped tool like a guitar pick to lift the mid-frame.

Step 9

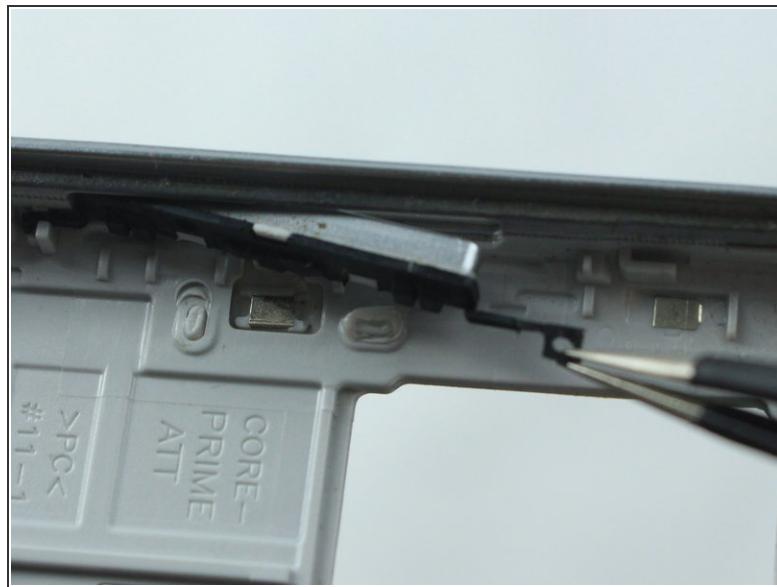

- Use tweezers to unhook both of the rubber fixtures holding the volume button to the frame.

To reassemble your device, follow these instructions in reverse order.