



Samsung Galaxy Express 3 Screen Replacement

How to replace the screen if it cracks or goes out.

Written By: Mack Johnson




INTRODUCTION

Replace the glass digitizer and the LCD screen.

TOOLS:

- [Spudger \(1\)](#)
- [Hair Dryer \(1\)](#)
- [Heat Pad \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery

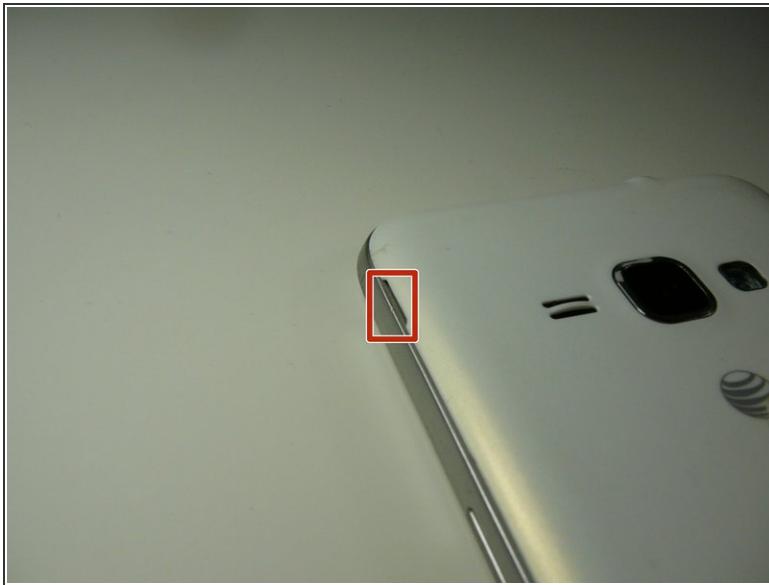



- Starting from the indent, use a finger nail or guitar pick to separate the back from the body of the phone.

Step 2




- Once the cover is removed you'll find the battery that reads "SAMSUNG"
 - Use a fingernail or a plastic tool such as a guitar pick to lift up on the bottom indent of the battery.
- ⚠** Do not use metal tool as it can be dangerous.

Step 3 — Screen

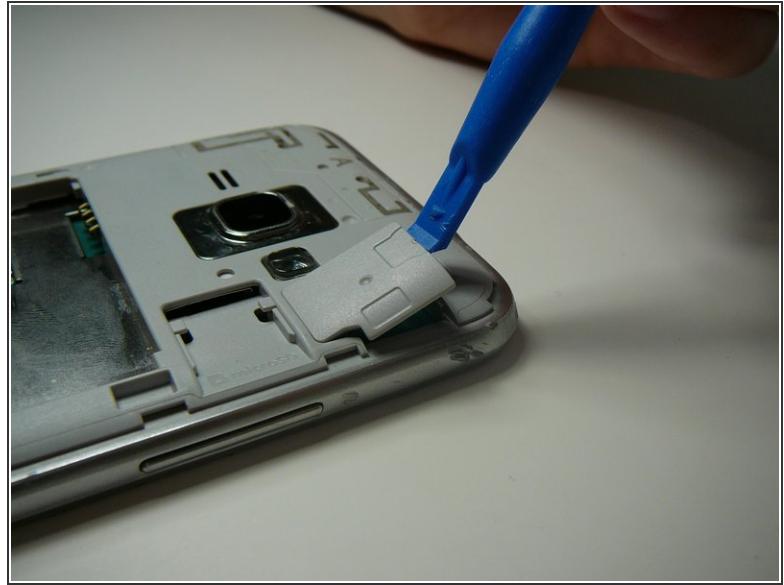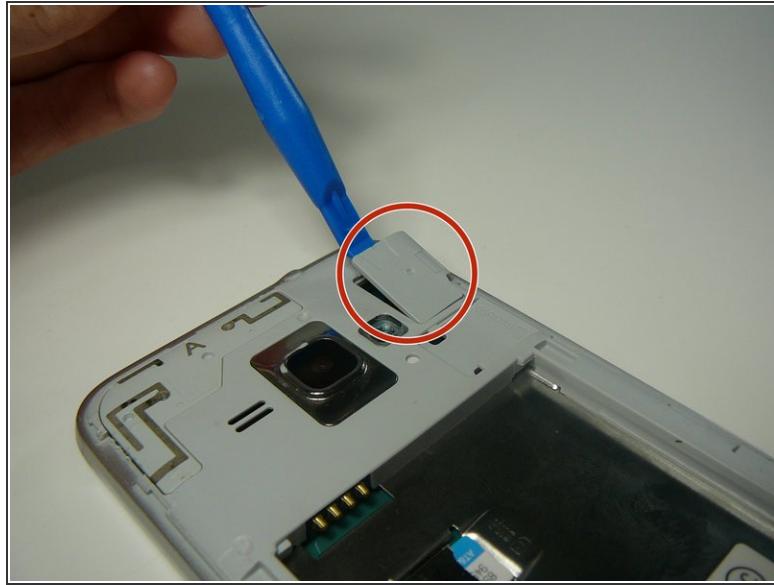

- Use a plastic tool to pop out piece shown.

Step 4

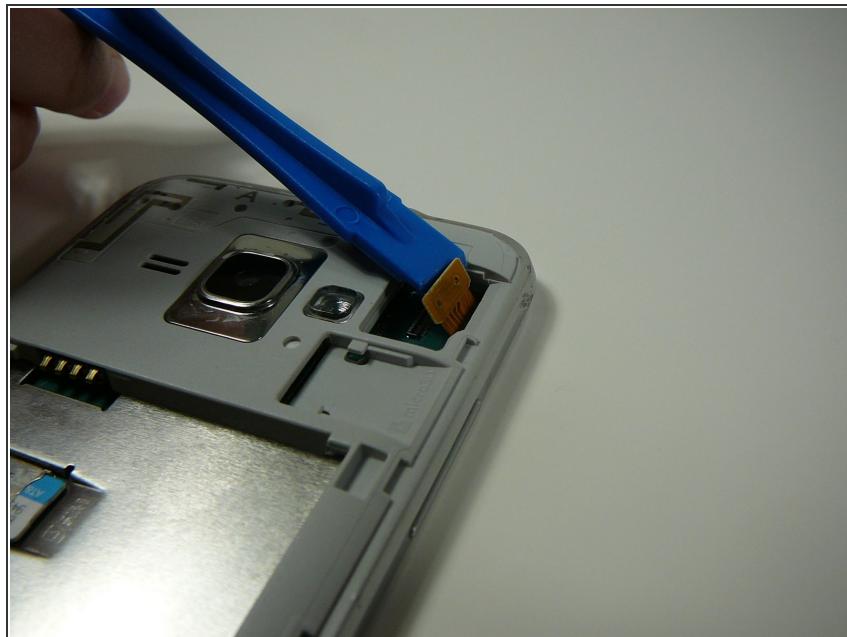

- Detach the screen connector.

Step 5



- Use a blower dryer or heating pad to heat up the screen.

⚠ If this step is skipped it may result in a broken screen and/or LCD.

(i) This is done to loosen the glue holding the screen in place.

Step 6



- Use a thin plastic tool such as a guitar pick or plastic prying tool to lift out the glass digitizer and LCD screen around the edges.

(i) Do this slowly and carefully as both parts can crack very easily.

⚠ Make sure your tool is plastic as a metal tool can damage the screen.

To reassemble your device, follow these instructions in reverse order.