


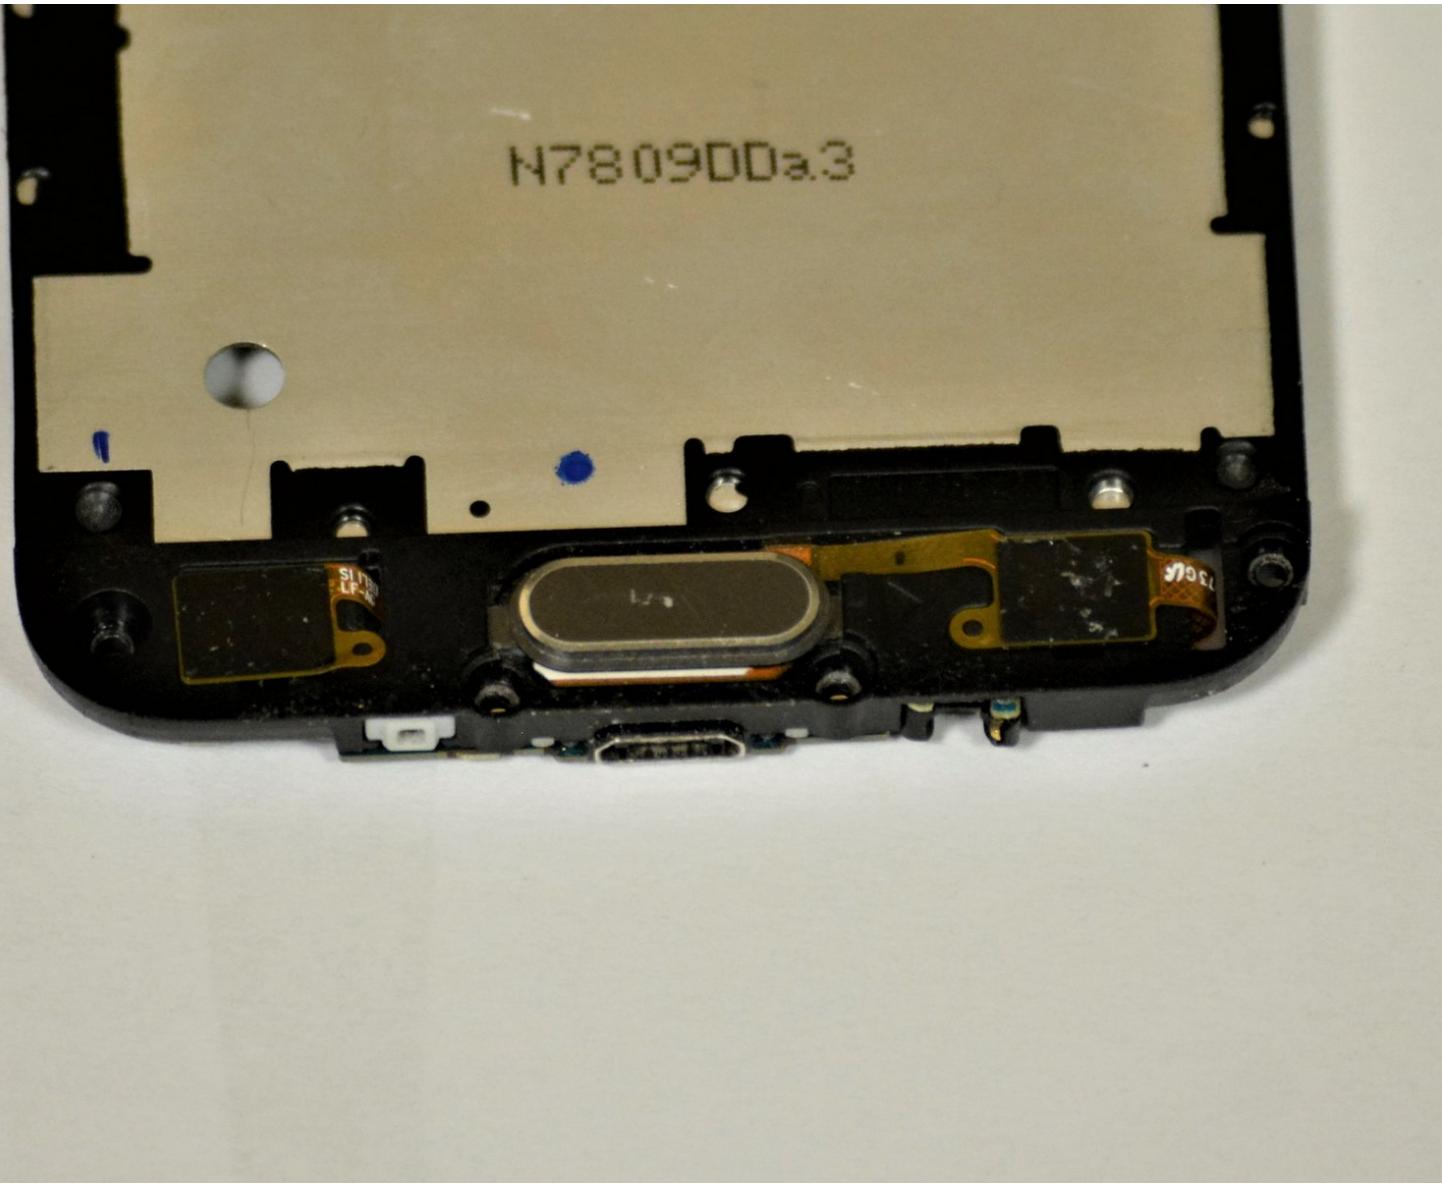

Samsung Galaxy J3 Emerge Home Button and Audio Jack Replacement

How to replace the home button and audio jack for a Samsung Galaxy J3 Emerge Model SM-J327P.

Written By: Hugh Cosculluela



This document was generated on 2019-10-27 01:15:04 PM (MST).

INTRODUCTION

Home Button and Audio Jack guide for a Samsung Galaxy J3 Emerge Model SM-J327P. May need to replace the home button if it is unresponsive. If audio becomes distorted when plugged in to the jack it needs replacing.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Screen



- Heat up the edges of the screen with a hair dryer.
- Put the iFixit Opening Tool between the screen and body to open the edge of the screen up.
- Work the iFixit Opening Tools around the whole screen to break the glue.

Step 2

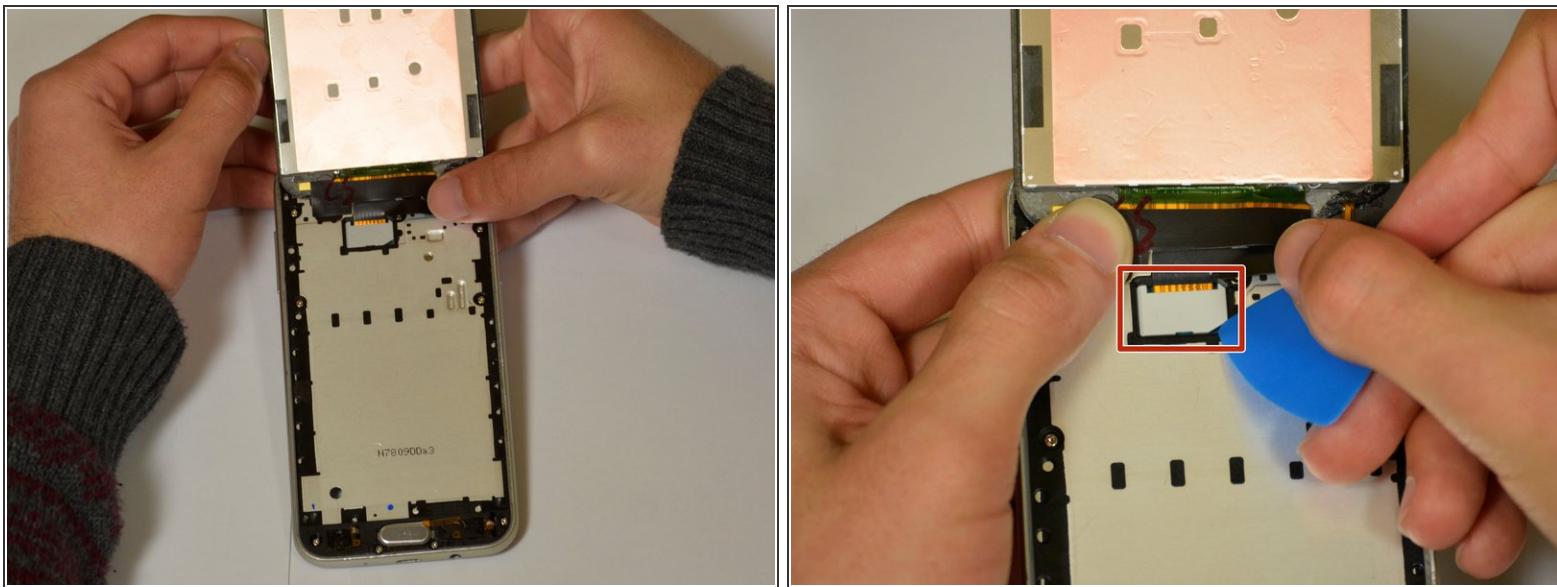


- Lift the screen up from the bottom.

⚠ The screen could crack when lifting it up.


- Pry the gray cover open.

Step 3

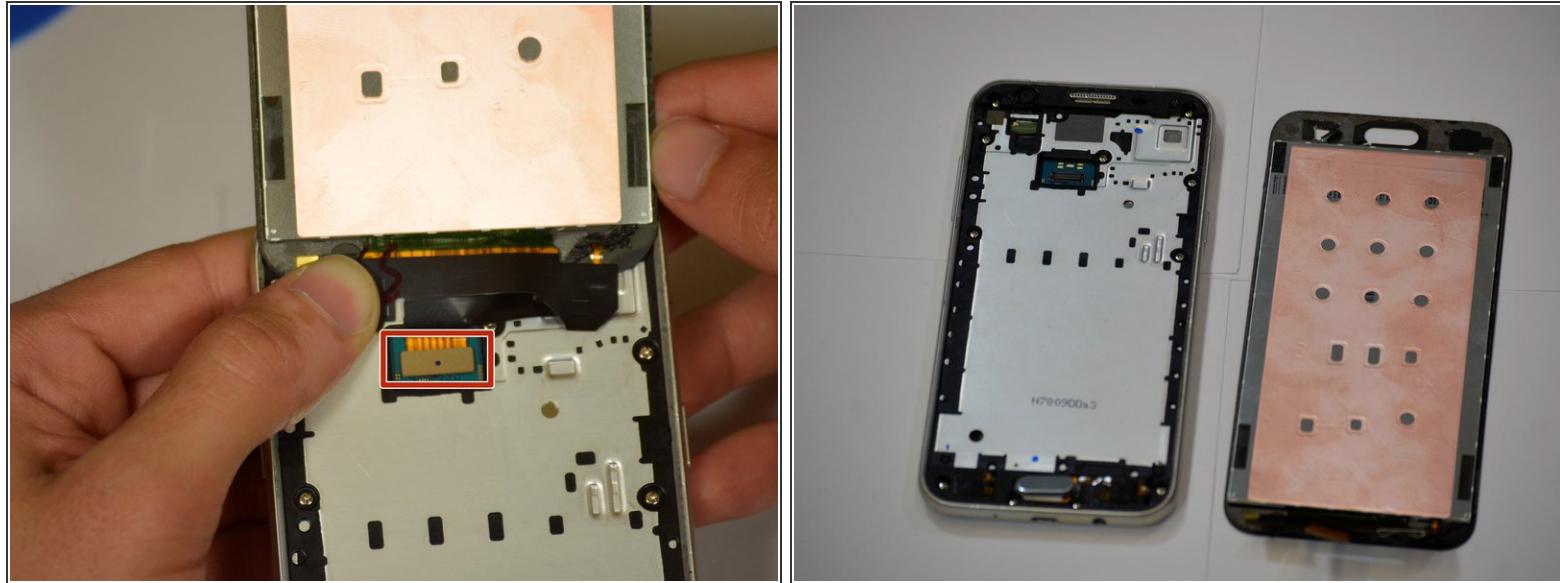

- Pry the connector off of the motherboard by using a clean nail or the iFixit opening tool.

Step 4 — Motherboard

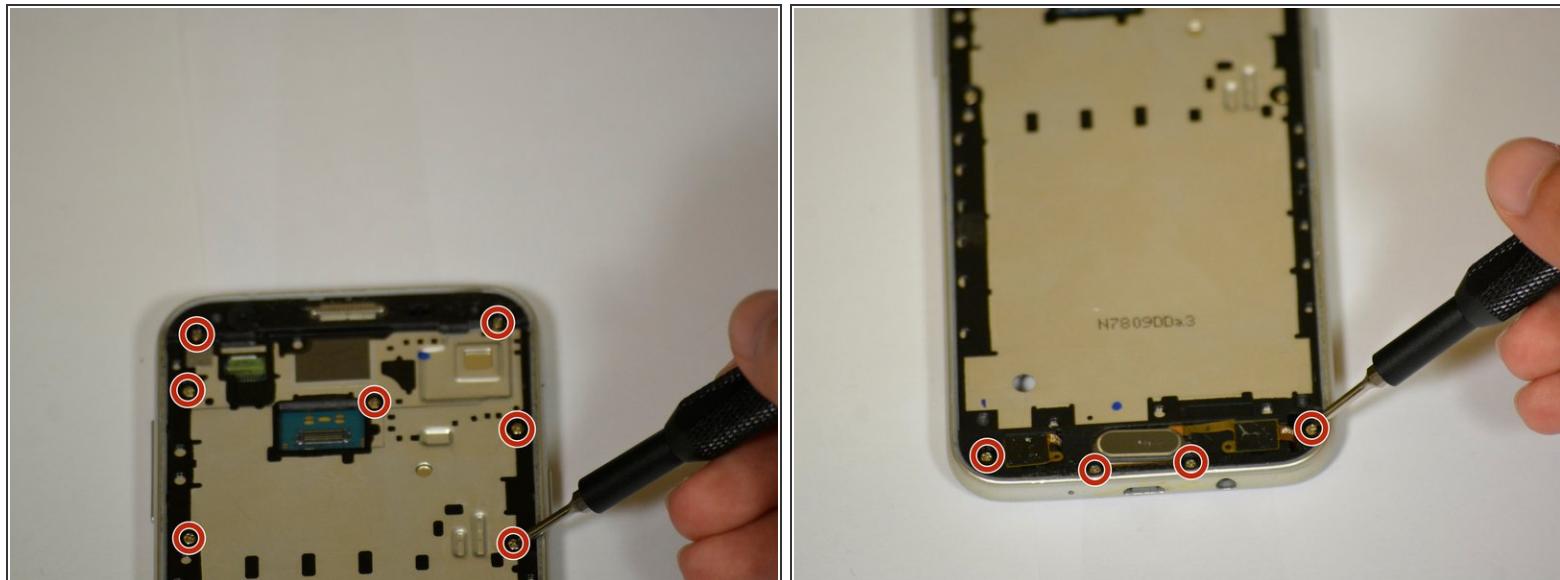

- Remove the eleven Phillips #00 3.5mm screws.

(i) If the screws get stuck when removing, try using tape to get them out. Place the adhesive side of tape on the screws and pull the tape off the spot.

Step 5




- Turn the phone over and push down where the battery was.
- *(i)* There will be a loud clicking noise when applying pressure.

Step 6




- Insert the iFixit Opening Pick between the motherboard and the panel.
- Work the iFixit Opening Pick around the outside of the motherboard.

Step 7

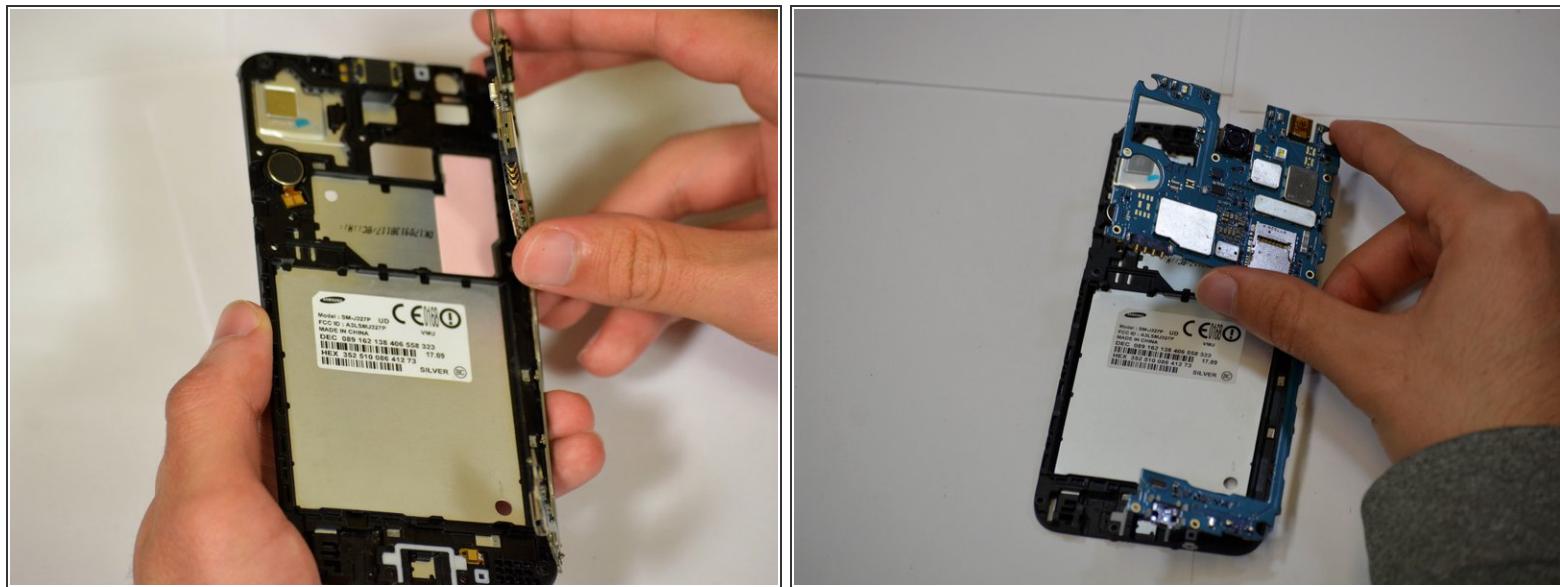


- Pry the motherboard away from the phone using your hand.

Step 8 — Home Button and Audio Jack

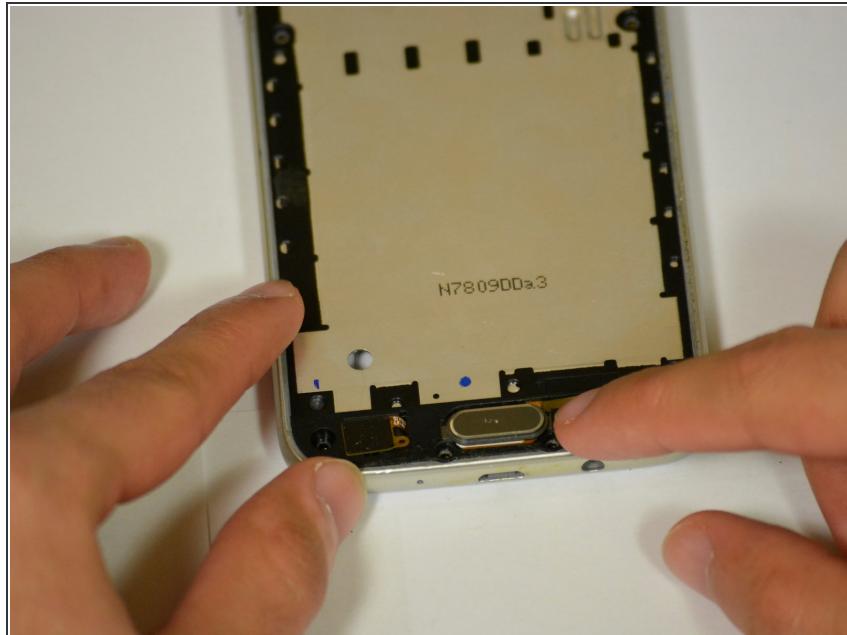


- Slide the home button to the left to pop it off.

Step 9

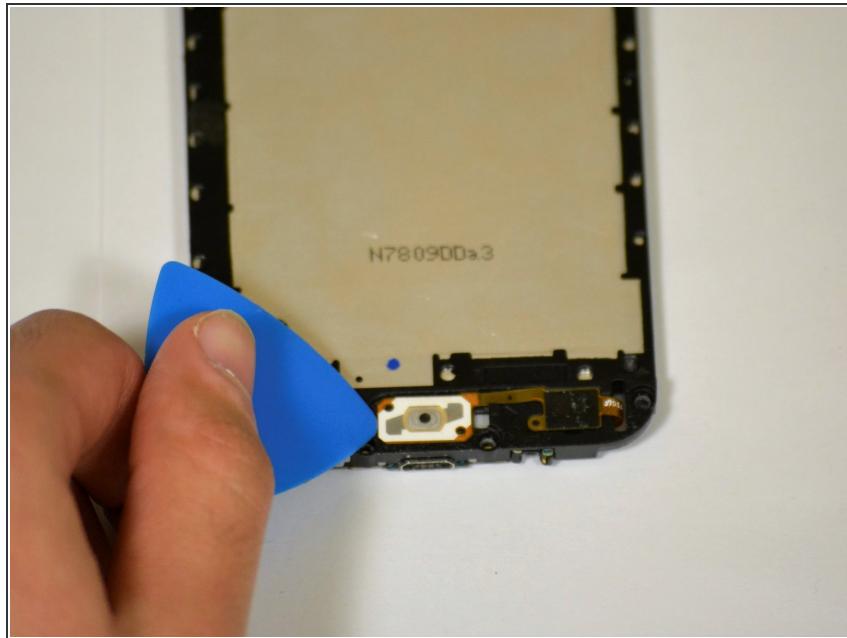


- Remove the connector where the home button was using the iFixit Opening Pick.

Step 10

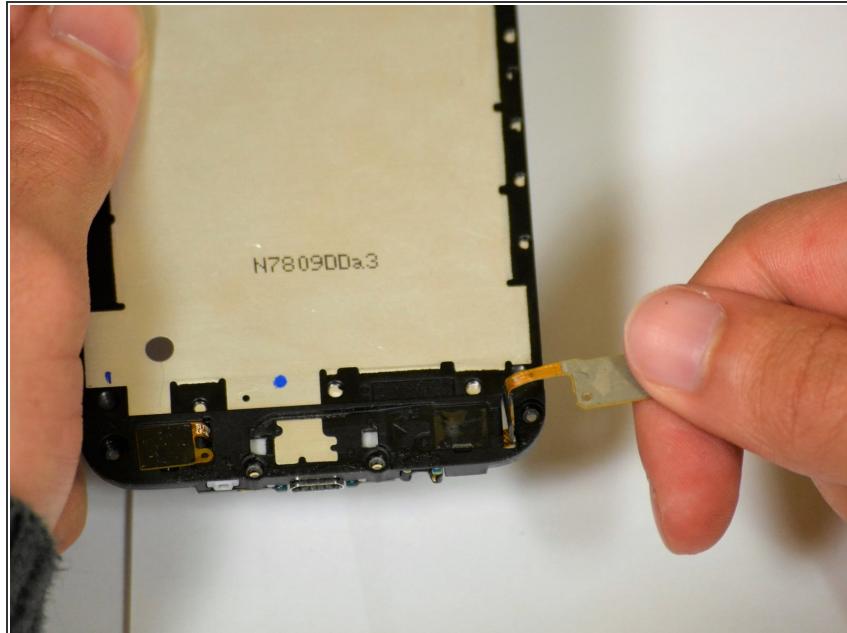

- Lift up the connector and push it through the motherboard by following the ribbon.

Step 11

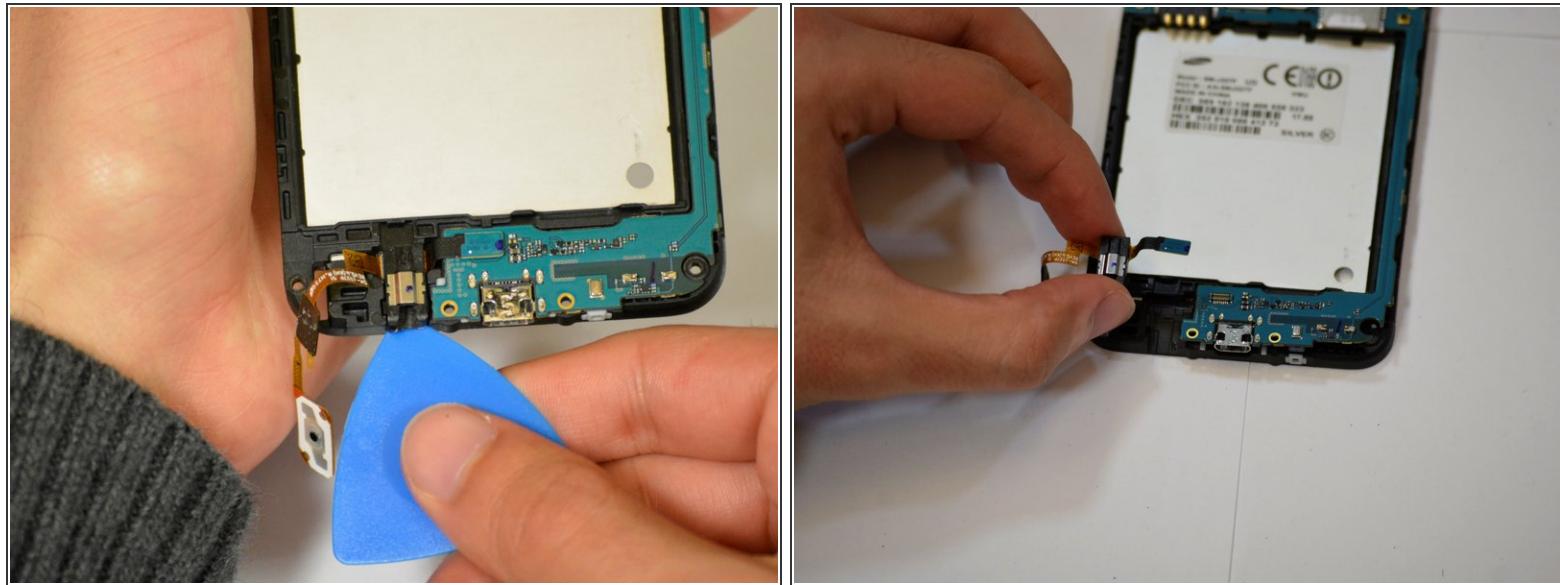

- Follow the ribbon and gently pop the audio port out using the iFixit Opening Pick.

To reassemble your device, follow these instructions in reverse order.