



Samsung Galaxy Light Earpiece Speaker Replacement

Replace the earpiece speaker.

Written By: Paul Goyette



INTRODUCTION

Use this guide to replace the earpiece speaker.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Remove Back Cover



⚠ Before removing the back cover, make sure the Samsung Galaxy Light is completely off.

- Using a plastic opening tool (or your fingernails), pry up the back cover of the device.
- Remove the back cover.

Step 2 — Remove Battery



- Remove the battery from the device.

Step 3 — Unscrew Midframe



- Using a Phillips #0 screwdriver, remove all nine (9) screws attaching the midframe to the front of the device.

Step 4 — Remove Midframe




- Using the plastic opening tool, separate the midframe from the front panel of the device.
- Remove the midframe.

Step 5 — Detach Motherboard



- To detach the motherboard from the device:
 - Using the plastic opening tool, carefully pry up the digitizer connector from the motherboard.
 - Carefully lift the motherboard up and move it toward the left side of the device.
 - Using the plastic opening tool, carefully pry up the display connector on the back side of the motherboard.

Step 6 — Removing the audio and vibrator

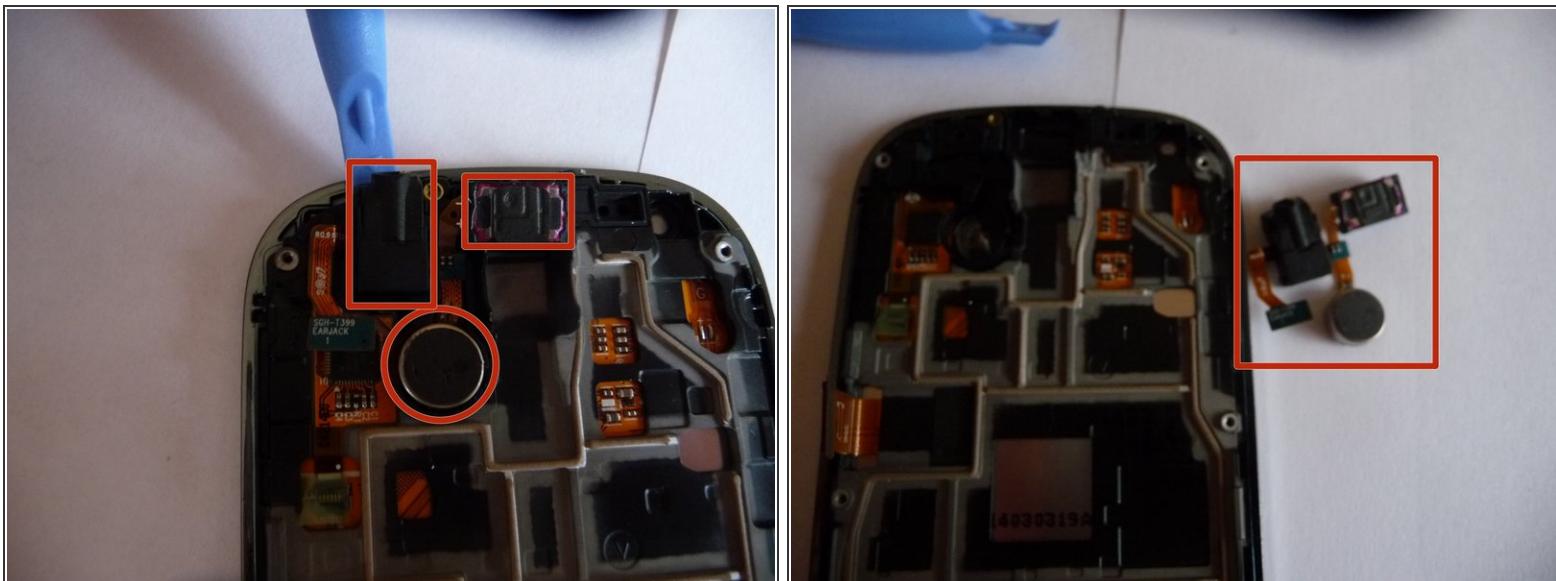

- Use a plastic opening tool to pry up the headphone jack, vibrator, and earpiece speaker assembly.

To reassemble your device, follow these instructions in reverse order.