



# Samsung Galaxy Mega 2 Screen & Digitizer Assembly Replacement

This guide will show you how to safely change the lcd screen on your device

Written By: Taylor Powell



## INTRODUCTION

This repair guide demonstrates how to replace the screen on the Galaxy Mega 2. There are a couple different ways to do this, such as using a hair dryer or heat gun. The screen then must be pried off using tools, and then placed back on using an adhesive.

### TOOLS:

- [Hair Dryer](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

## Step 1 — Screen & Digitizer Assembly



- Before beginning, make sure the phone is turned off.
- On the back of the phone, find the slot at the charging port located at the bottom of the phone.
- Either insert the plastic opening tool or use your fingernail to pull up on the back cover.
- Once the corner is released, slide your finger around the outside until the back cover releases.

## Step 2





- Locate the battery.
- Insert fingernail or plastic opening tool into the slot on the bottom of the battery and gently lift up.
- Remove the battery.

## Step 3



- Use a phillips head PH000 and remove all 13, 1.4 mm visible screws.
- Using the pry tool, carefully pop the Digitizer cover off the device.
- Use the pry tool to disconnect the digitizer

## Step 4

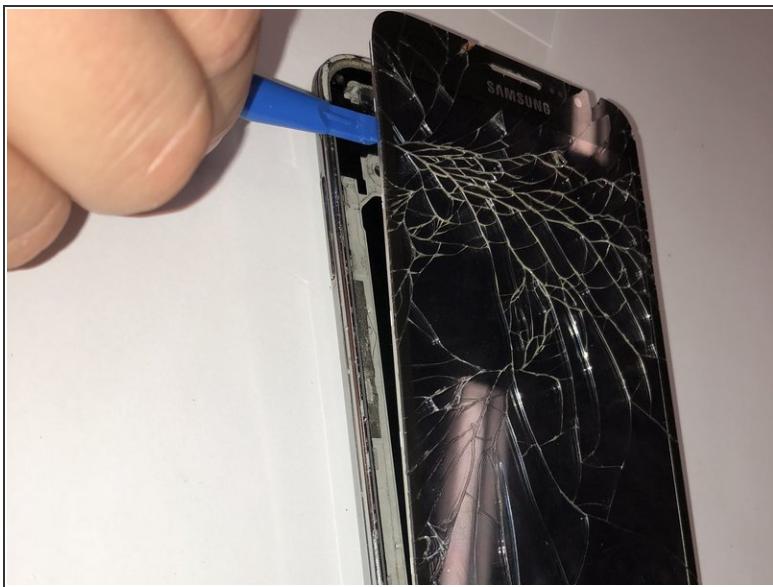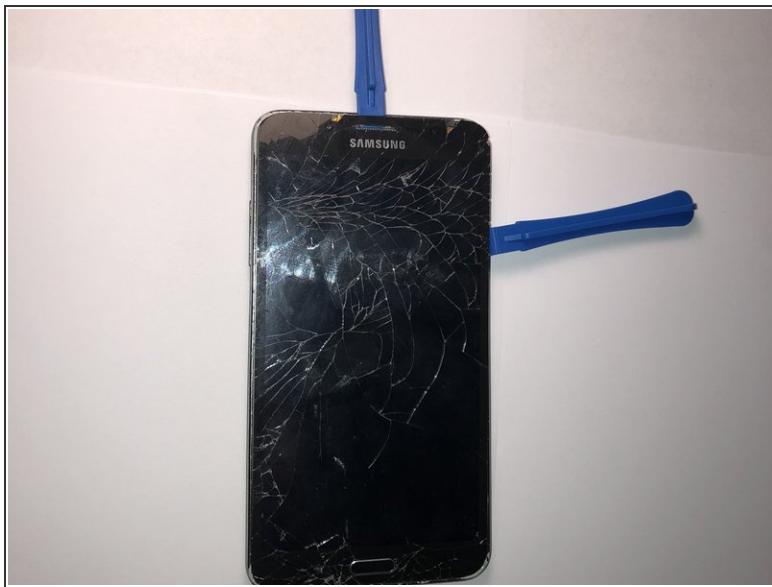

- Insert the pry tool along the side of the device, then work your way around the borders of the screen, separating the screen from the rear assembly frame.

⚠ Be careful and do not lift the screen completely off yet, leave the screen at an angle.

- Use the heat gun to heat up the bottom to loosen the adhesive from the menu and back buttons.
- Once heated, gently pull the screen upward.

⚠ Make sure that the buttons are separating from the adhesive.

## Step 5



- Now, separate the screen from the outside frame of the phone (the bezel).

To reassemble your device, follow these instructions in reverse order.