




Samsung Galaxy Mega Speaker Assmebly Replacement

Remove or replace the speakers of your Samsung Galaxy Mega. The speakers allow you to play out music and other media.

Written By: nithin

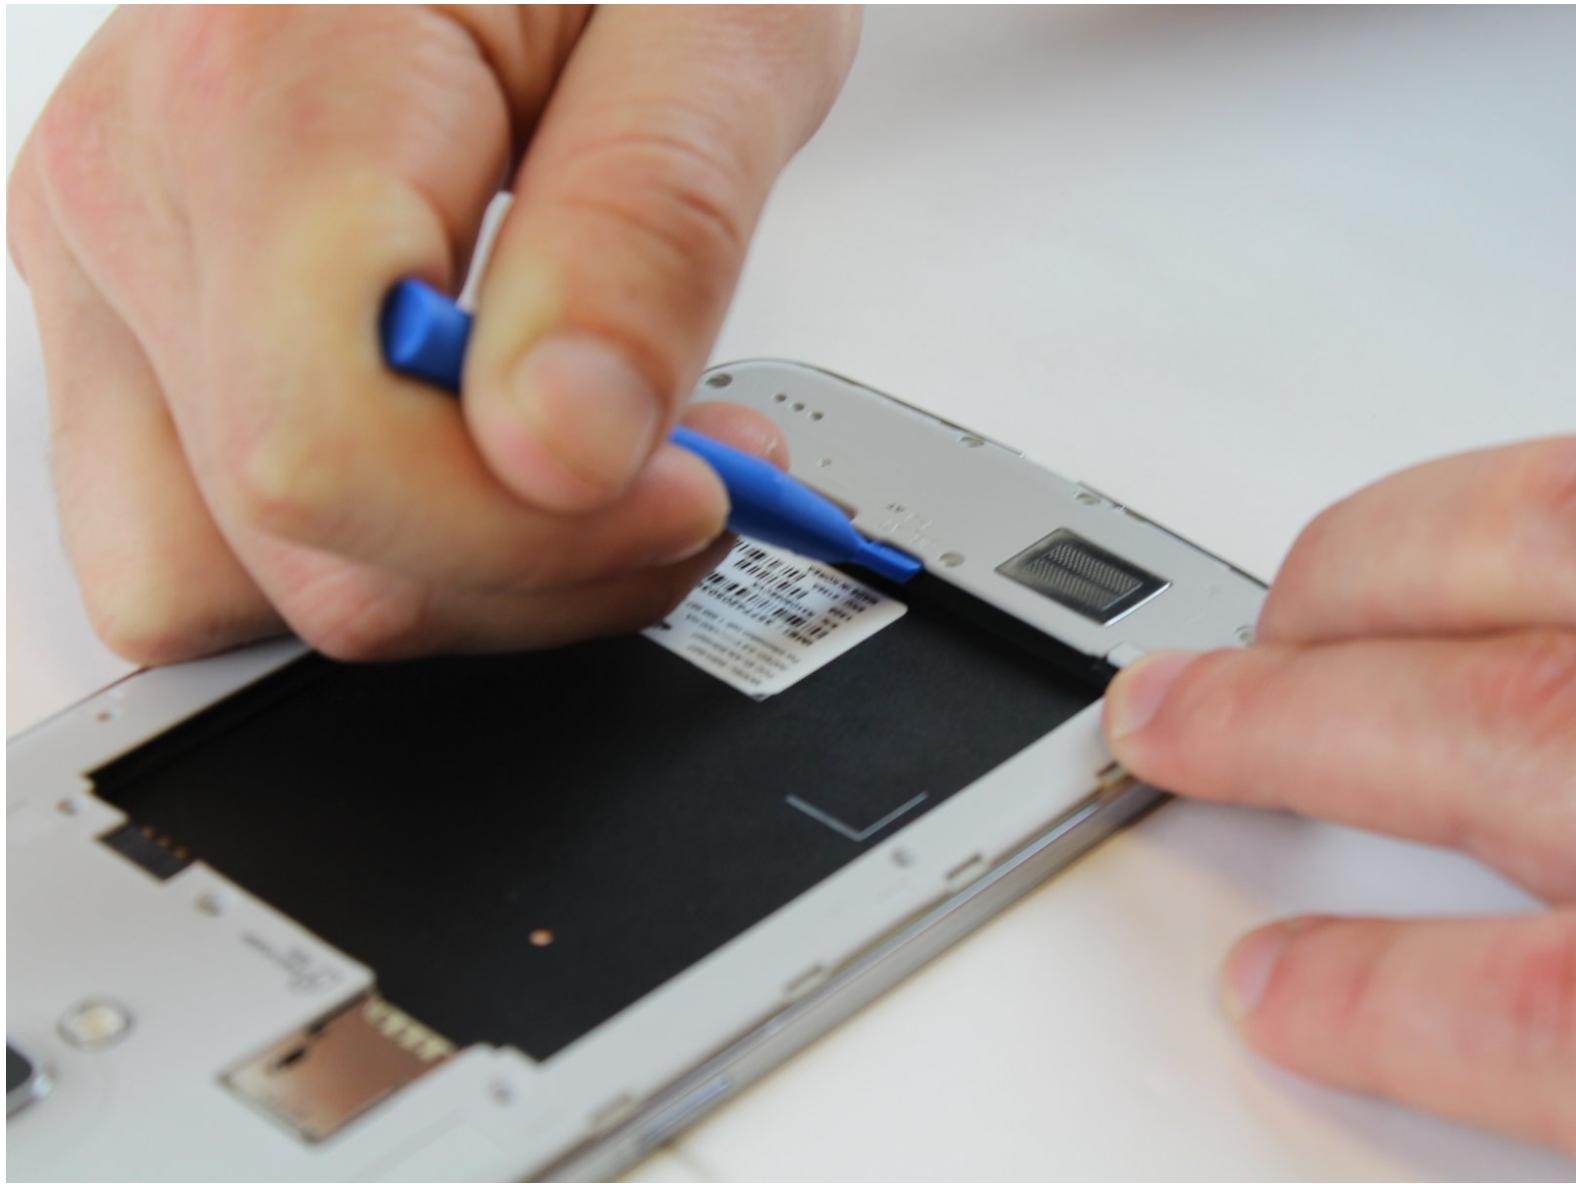

This document was generated on 2019-09-18 03:52:51 AM (MST).

INTRODUCTION

This guide instructs on how to replace the back panel audio speaker.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery




- Before starting, ensure device is completely turned off.
- On the back of phone, locate the slot on the top left corner.
- Insert plastic opening tool or fingernail and pull up on the back plate.
- With the corner released, slide your finger around the device between the back plate and the phone to release connectors.

Step 2



- Insert fingernail into the slot on bottom of battery and gently pull up.
- Remove the battery.

Step 3 — Speaker Assembly

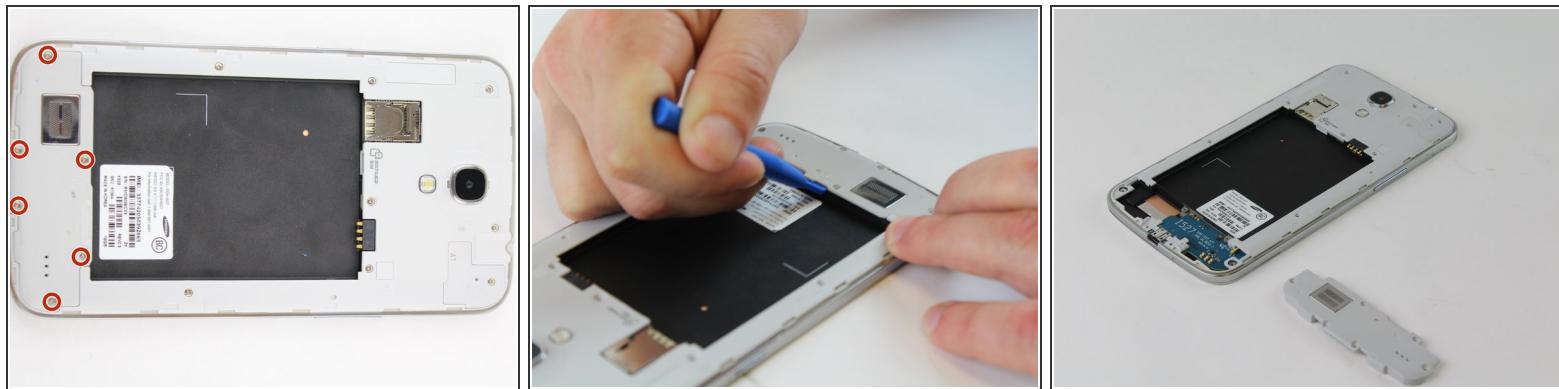

- Remove the 6 3.45 mm Phillips #000 screws from the bottom of the assembly surrounding the speaker.
- Gently insert plastic opening tool through the inside groove of the speaker assembly.
- Once the top part of the speaker assembly pops free. Gently lift up with your fingers to remove speaker.

To reassemble your device, follow these instructions in reverse order.